



## Jet Caps

Jet caps are designed to prevent rain and moisture from entering your ductwork system.



Inlet Size	Outlet (Top)	Bot. Red.	Top Red.	Catch Cap $\phi$	Catch Cap height	Inlet Standoff	Width	OAL	STD.
A	B	C	D	E	F	G	H	I	GA.
6	7	9	6	8	3	7	12	21	18
8	9	11	8	10	4	9	16	25	18
10	11	13	10	12	5	11	20	29	18
12	13	15	12	14	6	13	24	33	18
14	15	17	14	16	7	15	28	37	18
16	17	19	16	18	8	17	32	41	16
18	19	21	18	20	9	19	36	45	16
20	21	23	20	22	10	21	40	49	16
22	23	25	22	24	11	23	44	53	16
24	25	27	24	26	12	25	48	57	16
26	27	29	26	28	13	27	52	61	14
28	29	31	28	30	14	29	56	65	14
30	31	33	30	32	15	31	60	69	14
32	33	35	32	34	16	33	64	73	14
34	35	37	34	36	17	35	68	77	14
36	37	39	36	38	18	37	72	81	14
38	39	41	38	40	19	39	76	85	14
40	41	43	40	42	20	41	80	89	14
42	43	45	42	44	21	43	84	93	14
44	45	47	44	46	22	45	88	97	14
46	47	49	46	48	23	47	92	101	14
48	49	51	48	50	24	49	96	105	14
50	51	53	50	52	25	51	100	109	14

