

Ladies Talking Watch Silver Finish Expansion Band

TIM-141-511-3100

This watch has one protruding button, two recessed buttons and one stem.

Buttons:

TR Button



BL Button

BR Button

TR = Top Right button (Near the “2:00”)

BR = Bottom Right button (Near the “4:00”)

BL = Bottom Left button (Near the “8:00”)

TR - This is the protruding button. It is located at the top right of the face, at the 2 o'clock position. This button, when pressed, will tell you the time.

BR - This is a recessed button at the bottom right of the face, at the 4 o'clock position. This is the Setting button.

BL - This is a recessed button at the bottom left of the face, at the 8 o'clock position. This is the Mode button.

To Set the Analog time

The analog time and the talking time run independently of each other and therefore need to be set separately.

- To set the analog time, pull the stem out (at the 3 o'clock position). There may be a red battery saver tab that needs to be removed before setting the time.
- Turn the stem to the correct time.
- Once the correct time is displayed, push the stem back in.

To Set the Talking Features

To Hear The Talking Time

- Press the protruding TR (top right) button near the 2 o'clock position. The current time will be spoken.

To Set Talking Time Procedure:

- Apply pen tip to recessed button S2 (4:00 position) to set minutes
- Apply pen tip to recessed button S3 (8:00 position) to set hours

Batteries

- NOTE: Only a professional, qualified jeweler should change these batteries. - Watches require one battery for both the talking and analog features, **CR2016**.