

## Talking Alarm Watch

TIM-143-325-3201

### **Layout:**

Talking Button (Top Right)

Date/Set Button (Bottom Right)

Mode Button (Top Left)

Adj Button (Bottom Left)

**Note:** Please long press TALKING button 3 seconds to turn on the unit. Hold MODE and TALKING button together 3 seconds to enter power-saving mode.

### **Features:**

1. Support time broadcasting by voice
2. Set alarm and oversleeping alarm
3. Hour reporting
4. 12/24 hour systems selection
5. Display time, year, month, date

### **Mode Transfer:**

Press the MODE button to transfer to different modes. They will cycle in the following order:

Time Display Mode > Time Setting Mode > Alarm Setting Mode

### **Voice Broadcasting:**

Press the TALKING button to announce the contents on the screen by voice.

### **Display the Time and Date:**

In time display, press DATE/SET Button. This will display the year.

Press DATE/SET Button again. This will display the month and date.

Press DATE/SET Button again. This will return to time display.

**Note:** If you do not press the DATE/SET time, it will return to the time display in 5 seconds.

### **Time Setting:**

1. Press MODE button once to enter time setting mode. At this time "Hour" will flash and "Time Set, Hour Set" will broadcast. Press the ADJ button to adjust the correct hour.
2. Press the DATE/SET button. "Minute" will flash and "Minute Set" will broadcast. Press the ADJ button to adjust the correct minute.
3. Repeat Step 2 to set time format, year, month and day.

### **Alarm Time Setting:**

1. In time display, press the MODE button twice to enter Alarm Time Setting Mode. On the screen, "AL. SET" will display and "Alarm set, Hour Set" will broadcast. At this time, "Hour" will flash, press the ADJ button to adjust correct hour.
2. Press the DATE/SET button. "Minute" will flash and "Minute set" will broadcast. Press the ADJ button to adjust correct minute.

**Note:** If no button is pressed over 30 seconds during setting, the screen will automatically return to time display mode.

### **ON/OFF Alarm and Oversleeping Alarm (Snooze):**

In Time-Display mode, to turn on the alarm, repeatedly press ADJ Button until you hear "Alarm on" and the announcement of the alarm time. A bell symbol will appear on the watch face.

To turn on the snooze function, repeatedly press ADJ until you hear "Snooze on" and the announcement of alarm time and "SNZ" will appear on the watch face.

To turn off the alarm, repeatedly press ADJ until you hear "Alarm Off".

At the pre-set alarm time, the alarm will sound for 60 seconds. To silence the alarm, press any key. Thereafter the alarm will repeat five times every five minutes.

### **ON/OFF Hour Report:**

This watch supports all-day hour reporting. In time display, hold down the DATE/SET button until you hear "Hourly Report On". A symbol resembling 3 left brackets and 3 right brackets will appear on the watch face.

To turn off hourly reporting, hold down the DATE/SET button until the symbol disappears and you hear "Hourly Report Off".

### **Replacing Battery:**

This watch is powered by CR2025 lithium battery only. If the LCD becomes dark, sound becomes weak you should replace the battery.

1. Remove four screws on the cap with a screwdriver.
2. Remove old battery, and install new one according to the markings.  
(Positive polarity faces upward)
3. Install the cap and screws.