

# TALKING CALENDAR CLOCK WHITE ONE BUTTON

## TIM-230-320-3612

---

**Please note:** This clock has a voice sleep mode function. The sleep mode can be used when travelling or when you require the clock to remain silent even if a button is pressed.

To activate sleep mode, press either the talk or set button and hold for 8 seconds. You will hear two short beeps to confirm that the clock is in sleep mode.

Now, the clock will not speak until you re-activate the voice.

To re-activate the voice, press and hold either the talk or set button for 8 seconds. You will hear 4 short beeps to confirm that the voice is re-activated.

### **Orientation:**

- The clock is housed in a disc-shaped case measuring 3.5 inches (9 centimetres) by 1.2 inches (3 centimetres) high.
- **Top:** Almost the entire top of the clock is a large white circular button 2.75 inches (0.7 centimeters) in diameter. This is the 'Talk' button. The button is framed by the black base of the clock providing excellent colour contrast for ease of identification.
- **Base:** Around the underside edge of the circular black base are four small circular non-slip feet. There is a rectangular battery compartment cover close to the edge of the circular base. Along one long side of the cover is a raised catch which allows the cover to be opened when pressed. With the battery compartment at the top (farthest away from you), to the left and below the battery compartment, there is a round white circular 1.5 cm dial. In the centre of the circle is a raised dot. This is the 'Mode' button.

### **Inserting the Batteries:**

- It is recommended that you replace the batteries annually, even if the clock is still running. Only use AAA (1.5V) alkaline batteries in this clock. Remove the batteries if the clock is not in use for an extended period.
- This clock is powered by two AAA batteries (not included). Turn the clock over so the base is facing upwards and locate the battery cover. Locate the finger-tip catch on the long side of the battery cover. Using your

finger-tip, gently pull the clip and lift the cover away from the body of the clock.

- Insert each battery noting the correct polarity, with the negative (flat) end of each battery positioned against the spring. Once both batteries are inserted, re-attach the battery cover ensuring that the two locating lugs sit into the bottom edge of the battery compartment. Close the cover. You will know when it's properly locked as you will hear an audible click confirming the cover is correctly fitted.
- Please dispose of used batteries in a responsible manner. For more information please contact your local authority.

### **Setting the Time:**

- **Please note:** When entering the settings mode menu, if for any reason there is no activity after five seconds, you will hear an audible high-pitched beep. This indicates that the clock has reverted to normal time mode. To re-enter the settings mode, press the 'Mode' button and scroll through to your desired setting function and continue.
- With the back of the clock facing towards you, locate the white 'Mode' button. Sequential presses of this button will take you through the settings menu. These are announced in the following order:
  - set hour
  - set minute
  - set year
  - set month
  - set day
  - set alarm hour
  - set alarm minute
  - set alarm
- To set the time, press and release the 'Mode' button. You will hear the command 'set hour'. Use the 'Talk' button to select the correct hour. This will be heard as either 'am' or 'pm'. When you have selected the correct hour, press the 'Mode' button. You will hear the command 'set minute'. Again, use the 'Talk' button to select the desired minute.
- Having selected the correct hour and minute, release all buttons and after five seconds you will hear a high-pitched beep. This confirms that the clock has reverted to normal time mode and has exited the setting menu.

- To hear and confirm the time you have set, press the 'Talk' button. This will be announced as 'the time is ...' followed by the time you have set.
- To correct or further adjust the time, press the 'Mode' button until the setting you want to adjust is announced. Then follow the above steps until the correct time is selected.

### **Setting the Date:**

- To set the date, press and release the 'Mode' button until you hear the command 'set year'. Use the 'Talk' button to select the correct year. This will be heard as dates from 14 through to 23. When you have selected the correct year, press the 'Mode' button. You will hear the command 'set month'. Again, use the 'Talk' button to select the desired month. With the correct month selected, press the 'Mode' button and you will hear the command 'set day'. Select the correct day using the 'Talk' button.
- Having selected the correct year, month and day, release all buttons and after five seconds you will hear a high-pitched beep. This confirms that the clock has reverted to normal time mode and has exited the setting menu mode. To hear and confirm the date you have set, press the 'Talk' button once to hear the time. Press the button a second time and you will hear the date announced as 'the date is five August Tuesday'.
- To correct or further adjust the date, press the 'Mode' button until the setting you want to adjust is announced. Then follow the above steps until the correct date is selected.

### **Setting the Alarm:**

- To set the alarm, press and release the 'Mode' button until you hear the command 'set alarm hour'. Use the 'talk' button to select the correct hour. When you have selected the correct hour, press the 'Mode' button. You will hear the command 'set alarm minute'. Again, use the 'Talk' button to select the desired time.
- Having selected the correct hour and minutes, press the 'Mode' button to hear the command 'set alarm'. Press the 'Talk' button and select either 'alarm off' or 'alarm on'. 'Alarm off' is followed by a low-pitch double beep and 'Alarm On' is followed by a high-pitch double beep.
- After setting the alarm, release all buttons and after five seconds you will hear a high-pitched beep. This confirms that the clock has reverted to normal time mode and has exited the setting menu mode.

- When the alarm time you have set sounds, the clock will beep indicating the alarm is sounding. To turn the alarm off, press the 'Talk' button. This de-activates the alarm and also announces the time.

**Maintenance:**

- A soft paper towel may be used to clean the clock. Do not use any corrosive cleaners or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

**Terms and Conditions of Sale:**

- This product is guaranteed from manufacturing faults for 12 months from the date of purchase. If you have any issues with the product please contact your retailer.