

**Directions for the Pyramid Talking Clock
TIM-230-320-3019**

Turn the clock over so the back is facing up.

Lift the plastic battery cover on the right side, and insert 4 AA batteries into the battery compartment.

The switch furthest from you is Alarm. To the left is off, and to the right is on.

The 2 buttons below this switch are used to set the time. On the left is Hour, and on the right is Minute.

Below these buttons is the Mode switch. To the left is Set Alarm. To the right is Set Time. In the middle is Normal.

The switch closest to you controls the volume. Left is high, middle is normal, and right is quiet.

To set the time, move the Mode switch to the far right. Press the Hour and Minute buttons until the correct time is reached. Move the Mode switch back to the middle position.