

Thank you again for purchasing a MONSAM Portable Sink. With reasonable care it should serve you well for many years.

Please keep this Instruction Manual in a location where you can find it easily.

Serial Number: _____

Date of Purchase: _____

If you have any questions, please feel free to contact us. We are always happy to hear from you.

MONSAM Enterprises, Inc
2685 Pittsburg/Antioch Highway
Antioch, CA 94509

Phone: 800-513-8562
Fax: 925-757-3681

Email: sales@portablesink.com

Website: www.portablesink.com




Instruction Manual

Sink Type: **ADJUSTABLE Water Heater**

Congratulations on your purchase of a MONSAM Portable Sink!

Quick Start Guide

1. Fill the Fresh Water Tank with clean drinking water and screw cap into top of Tank.
2. Place Fresh Water Tank in cabinet.
3. Attach faucet spout to base (if not already in place).
4. Check to make sure that 2 electric plugs inside the cabinet are plugged into the internal outlet.
5. Pull main electric cord through hole in side of cabinet and plug into standard 110 volt outlet.
6. Turn ON the electric switch in cabinet. (Push it UP).
7. Turn the Hot Water knob on until water flows. Turn off. Sink is ready for use.

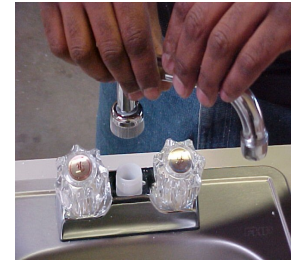

Step by Step Instructions

1. Roll cabinet into desired location and lock wheels by stepping on lever.



2. Open cabinet and remove the Fresh Water Tank. Fill with clean tap water and screw cap into top of tank. Use a small dolly or cart to move tank. (Optional)



3. Move Tank into cabinet and place tube in top of Fresh Water Tank.

4. Attach faucet spout to base (if not already in place).



5. Check to make sure that 2 electric plugs inside the cabinet are plugged into the internal outlet.

6. Pull main electric cord through hole in the side of cabinet and plug into standard 110 volt outlet.

7. Turn ON the electric switch in cabinet. (Push it UP).

8. Turn the Hot water handle for water. Wait 2 minutes for water to start flowing .

(CAUTION!) If water does not start flowing after 3 minutes, close faucet handles and **TURN OFF ELECTRIC SWITCH**. This will



-Wash outer cabinet, fixtures and sink with mild soapy solution. Wipe down with damp cloth and plain water.

-Clean tanks weekly or more often. Fill fresh water tank and waste water tank with tap water and add two capfuls of chlorine bleach to each. Soak for ten minutes, then drain and rinse with plain water.

-Clean pump and internal parts of sink. Fill Fresh Water Tank with 4 gallons of warm water, 4 ounces Automatic Dishwashing Liquid and 1/4 cup chlorine bleach. Place fresh water tank in cabinet. Make sure waste water tank is empty and in the cabinet.

-Run the faucet until half the solution is used in the fresh tank. Wait 10 minutes (allowing solution to sit in the pump and the pipes). Then turn on faucet and run until the fresh tank is empty.

-Empty the waste water tank and rinse the fresh water tank. Refill fresh water tank and place in cabinet. Run the faucet until pipes are clear and no off-taste exists.

-Add two capfuls of chlorine bleach to waste water tank after emptying tank and before replacing it in the cabinet. This will help maintain sanitary condition of the sink.

-Check electric plugs monthly to make sure there are no signs of fraying or wear. If a plug is damaged, disconnect immediately and have it replaced.

- If the Aerator is clogged remove aerator from end of faucet and clean with running water or brush.



IT IS HIGHLY RECOMMENDED THAT YOU SHOULD AVOID FREEZING TEMPERATURES AND TO USE A WEATHER COVER TO PROTECT THE SINK.



WARNING: TURN OFF SINK AT END OF THE DAY! Turn off the electric switch in the cabinet. Open both faucets to relieve water pressure. This step is the best investment you can make to extend the life of your pump.