

**Product:** SONAX Dirt eraser

**Article Code:** 416 000

**Formula Code:** ---

**Product Description:** Cleaning sponge for eradicating stubborn stains on unpainted plastic components (e.g. scuff marks or shoe polish stains on the lower door panels). For exterior use, it removes wax and polish residue from bumpers, mouldings and rubber. It is also suitable for removing insect dirt from glass.

**Directions for Use:**

- Moisten the sponge with water or SONAX Interior cleaner and gently rub into the dirty areas clean.
- Wipe over with a soft cloth.
- After the treatment, light sponge marks may appear, especially on darker surfaces, or differences in brightness between treated and untreated areas may be seen. These can be quickly and easily removed using SONAX Trim protectant for interiors, or SONAX Xtreme Plastic restorer gel exterior.

**Notice:**

- Do not use on paintwork or lacquered or painted plastics. It may induce dullness or scratches.
- Do not use on leather.

**Chemical Characterisation:** Melamine resin foam

**Specific Data:** Appearance: White sponge

**Packaging:** Carton containing 2 sponges

**Safety Data:** ---