

 
 
 
 
AIR PIX

PREFLIGHT GUIDE

FOR THE FULL USER MANUAL GO TO:
www.airselfiecamera.com/airpixum

AIR PIX comes with a partial charge so you're ready to fly!

- 1 Download the new, One-Touch AirSelfie app from the Apple App Store or Google Play.
Be sure to download the AirSelfie app NOT the AirSelfie 2 app.
- 2 Turn your AIR PIX aerial camera on using the button on the side by the USB port.
- 3 Launch the app, press "Select an AirSelfie" and then select "AIR PIX".
- 4 Follow the prompts to connect your phone to AIR PIX via a wi-fi connection through your Settings app.
- 5 Next you'll want to calibrate your AIR PIX. This is easy too. Simply place the device on a flat horizontal surface and press CALIBRATE.
- 6 Once calibrated, select how you would like to fly by scrolling along the bottom, aligning the mode you want with the gold arrow.
- 7 By default the app has selected "MANUAL" mode which allows you to pilot AIR PIX by using a few familiar swipes of the joystick and movements with your phone. See the full Owner's Manual for complete instructions at www.airselfiecamera.com.
- 8 Choose Indoor or Outdoor mode.
- 9 Select Photo or Video. Note you can change this selection in-flight.
- 10 To launch your AIR PIX in MANUAL mode place the AIR PIX on your open palm keeping it flat and parallel to the ground with the logo up and the camera pointing at your face. Press the launch button located on the lower right side of the view finder and your AIR PIX will take flight.
- 11 Choose "AUTO-FLY" mode for a completely autonomous flight. Start by choosing Indoor or Outdoor mode and photo or continuous video mode.
- 12 In Photo mode you can select how many selfies you want to take.
- 13 To launch AIR PIX hold it in your hand with the logo up and with the camera facing you. Press the "Play" arrow. The propellers will start to softly spin.
- 14 Lightly toss your AIR PIX in front of you as the diagram illustrates. The propellers will fully engage and it will launch. Your AIR PIX will fly a few feet in front of you, find you, take the number of selfies you selected or continuous video and then fly back to you to land.
- 15 You can also fly and take photos without being connected to your smartphone. For the APP-FREE AUTO-FLY mode simply **triple click** the power button after turning it on and the propellers will start to softly spin then toss it in front of you as shown and AIR PIX will launch, find you and take photos just like in the app AUTO-FLY mode and then return to you all by itself.
- 16 To pilot your AIR PIX using hand gestures without a smartphone connection simply **double click** the power button after turning your AIR PIX on. After the propellers start to softly spin gently toss your AIR PIX in front of you and it will fly a few feet away from you and hover, but now you can pilot it and take photos or video using simple gestures and movements.

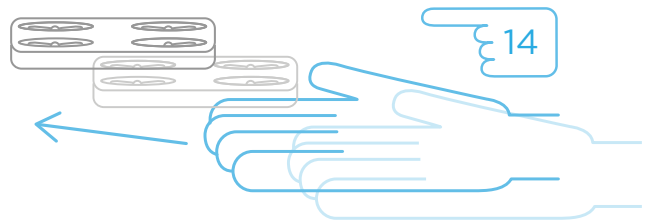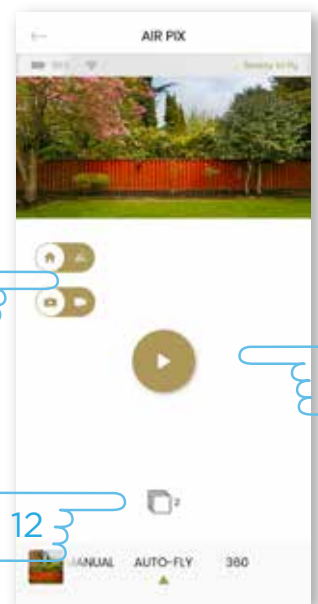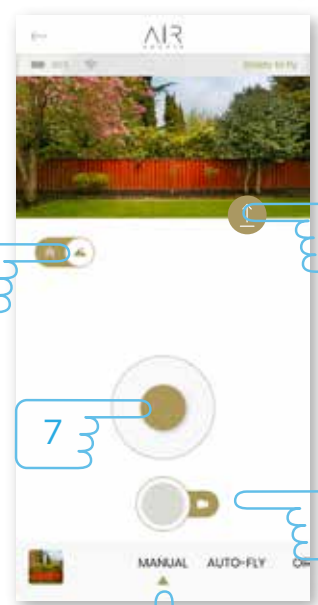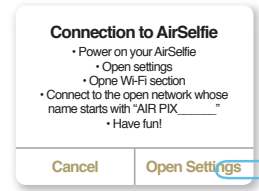

Note: Tossing it too high may result in it flying too vertically and tossing to low or dropping it may cause it to fly to low.



Scan this code for a short gesture tutorial gif.

For the full User Manual go to: www.airselfiecamera.com/airpixum

Here are a few important tips to remember:

- For best performance fly in wind protected areas.
- Fly your AIR PIX away from high voltage power lines, buildings, or any potentially dangerous areas and follow your country's civil aviation laws.
- Do not fly in adverse weather or in poor visibility like at night.
- AIR PIX is designed to fly a maximum of 60' (18m).
- Do not touch the moving propellers.

For any questions about AIR PIX or any AirSelfie product go to:
<https://airselfiehelp.zendesk.com/>