



# PROFILE

PERFORMANCE

## INSTALL GUIDE

## PIVOT HALOS

**WARNING:** By reading this document, I agree it is only to be used as an educational guide. Profile Performance nor its distributors make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

### WHAT'S INCLUDED



1x PIVOT HALO



1x PRISM DRIVER

### OPTIONAL COMPONENTS:



INSTALLATION WIRE

### TOOLS REQUIRED



1MM DRILL BIT / DRILL



NEEDLENOSE PLIERS

### RECOMMENDED PROTECTION:




LATEX GLOVES



PROTECTIVE EYEWEAR

### ASSEMBLY PROCESS


Using the integrated MicroMounts, mark the housing or bezel both with the hole of the MicroMount and a second hole next to each MicroMount further away from the center of the halo. This is where you will drill the housing/bezel to mount the halo.

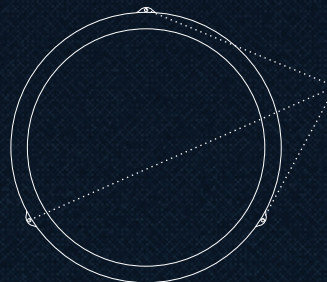


INTEGRATED MICROMOUNTS



Drill a 1mm hole at each of the six marked locations from the prior step.

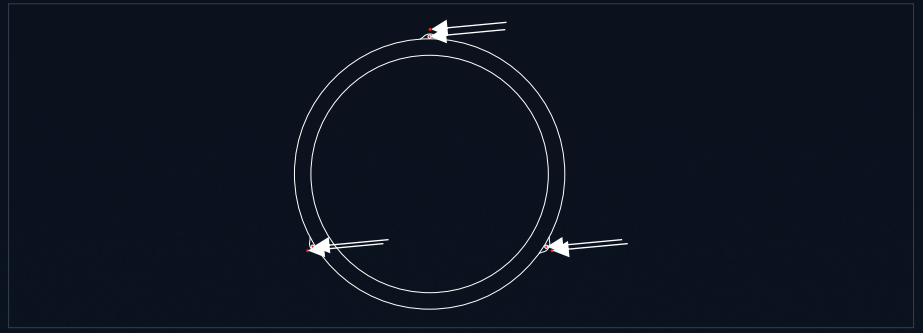

Using installation wire, beading wire, or fishing line, feed the wire from behind the housing/bezel, up and through the MicroMount, then back down through the housing/bezel. Then secure the halo by twisting the wire behind the housing or bezel.

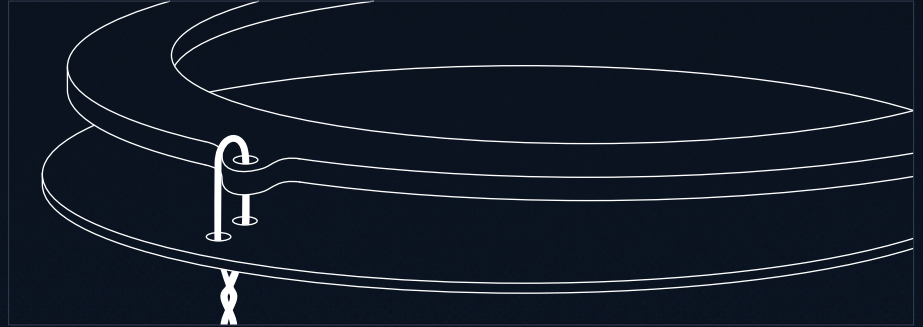

## WIRING PROCESS

