 


FLEXTAIL™

LIGHT REPEL USER GUIDE

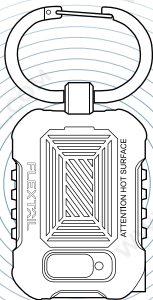

 
 
IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE

**ATTENTION: THIS PRODUCT IS INTENDED FOR
ADULT USE ONLY, THIS PRODUCT IS NOT A TOY.**

-OR01NR01-

LIGHT REPEL

PRODUCT INSTRUCTION

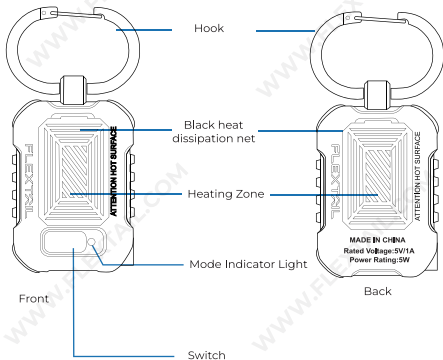

PRODUCT PARAMETER


LIGHT REPEL

Size	98*48*28 mm
Weight	42 g
Material	PPO/AL/SIL/PC
Rated Voltage	5V
Rated Power	5W
Mosquito Repellent Modes	Camping mode :3W-110°C
	Outdoor mode : 5W-165°C
What's in the Box	Mosquito repellent*1, Charging cable *1, Manual *1



USE THE MOSQUITO REPELLENT




 
1. Press the front black heat dissipation net downward, and put the mosquito repellent mat.

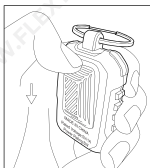

  2. Press the back black heat dissipation net downward, and put the mosquito repellent mat.

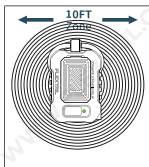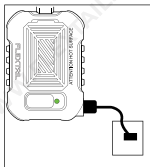

  3. Connect the Type-C port to the power supply, the mode indicator light turns green.

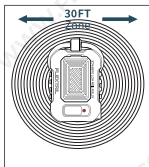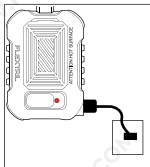

4. Press the switch once to change the mosquito repellent modes.

HOW TO PLACE THE REPELLENT

- 1. Do not press the product when it's in use to prevent the switch from being touched by mistake.
- 2. Place the mosquito repellent on the flat ground.
- 3. Place the product in a conventionally dry environment below 60°C.
- 4. Place the product in a relatively fixed and non-wobbly environment.
- 5. Repeller is best placed in the center of the desired Zone of repellency.
- 6. The mosquito repellent function needs to be used in a windless environment.
- 7. Do not cover repeller while it is in use.
- 8. To protect larger areas, please inset two mats or use multiple repellers.

CAUTIONS

- 1. Keep out of reach of children.(For children under 10 years old, please use under adult supervision)
- 2.Do not disassemble, modify or repair by yourself.
- 3. Be careful in the damp environment (bathroom), if there is water enter in the product, please stop using it.
- 4.Please stop using if the temperature rises or the appearance is deformed during charging.
- 5.Do not use in a high-temperature environment, do not close

to fire or heating equipment, which may cause an explosion or fire.

- 6. Do not use the product when the conduction is not in the acceptable operating temperature range (-10°C~40°C).
- 7. Do not charge the product on the carpet, blanket, and other flammable things.
- 8. After using it, be sure to disconnect the power supply.
- 9. If the product is dropped or hit, the damage may cause in the inside of the product and the accidents may occur during normal use. Be careful not to put physical shock on the main unit.
- 10. When using the mosquito repellent device, please do not touch the black heat insulation net. Children are not allowed to use it by themselves.
- 11. When using the mosquito repellent device, please do not block the black heat insulation net. Keep the black heat insulation net away from the combustible materials.
- 12. Do not use the mosquito repellent device in a closed and narrow space.

STORAGE AND TRANSPORTATION

- Do not expose the repeller temperatures above 60°C.
- Store the device at room temperature in a dry environment when it's not in use.

TROUBLESHOOTING

If the product does not work/the indicator light is off:

- Check whether the anti-mistouch switch/main switch is turned off.
- Please check whether the product connects to the power supply.
- Please check if there is water or other liquid on the surface.
- Other questions? Please contact FLEXTAIL Technology agents or contact us: service@flectailgear.com.

WARNING

- Do not disassemble, modify, or repair the product by yourself.
- If there is any leak, odor, or deformation in the battery pack, please discontinue use and dispose of it immediately.
- Do not put fingers, metal, or other foreign objects in the product.
- To reduce the risk of injury, close supervision is necessary when the product is used near children. Keep out of reach of children.
- Do not modify or repair the device by yourself. If you need the after-sales service, please contact service@flectailgear.com.

WARRANTY TERMS

- For the defects in material and workmanship of the product, the original retail purchaser of this product will be provided warranty service for one year based on purchase data by FLEXTAILGEAR.
- If the Buyer discovers a covered defect, the buyer should return the product to the place of purchase. If this is not available, please return the product to the address specified by us. We will repair or replace the modified product at our discretion following the warranty terms.
- For products over the one-year warranty period, we have the right to refuse to provide technical support and warranty services.

WARRANTIES EXCLUSIONS

- The warranty does not cover wear and tear caused by normal use, unauthorized modification or alteration, improper use, improper maintenance or maintenance, accident, negligent use, intentional damage, or use of the product for a purpose other than its design. This warranty provides for certain legal rights and may include other rights depending on the place of purchase.
- Except for expressly stated in this warranty, we shall not be liable for direct, indirect, incidental, or other types of damages arising out of, or resulting from the use of the product. This warranty is in lieu of all other warranties, expressed or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose (some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on the duration of an implied warranty, so the above exclusions may not apply to you.)

HAVE ANY OTHER QUESTIONS?

Email us: service@flextailgear.com