 


FLEXTAIL™

MAX COOLER USER MANUAL

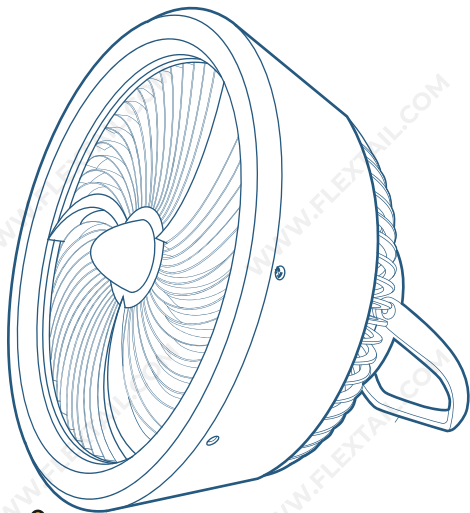


IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE

**ATTENTION: THIS PRODUCT IS INTENDED FOR ADULT
USE ONLY. THIS PRODUCT IS NOT A TOY.**

OC01-01NR20220622

 Product Introduction

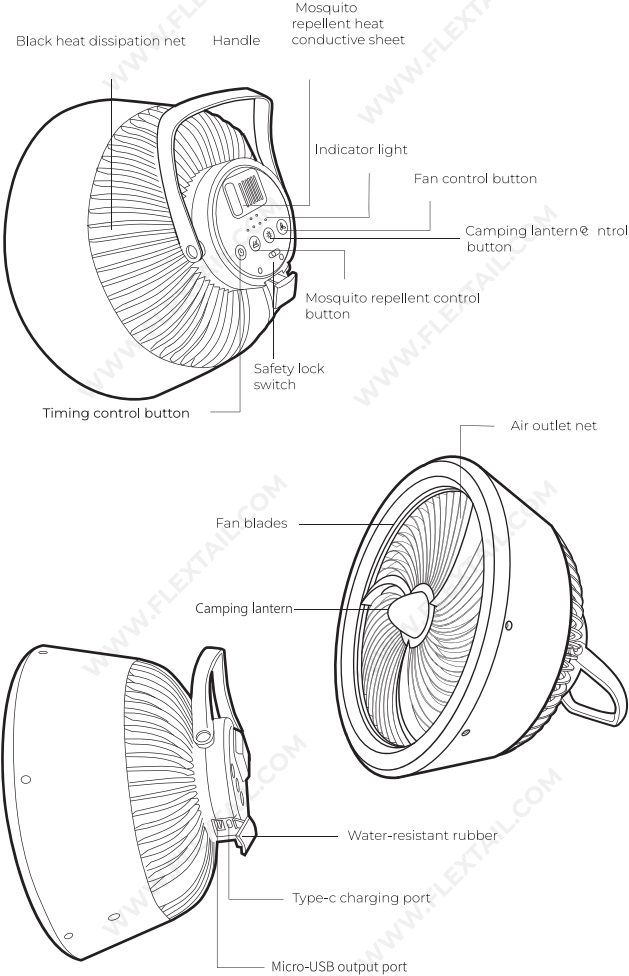

PRODUCT PARAMETER

MAX COOLER	
Size	238*238*156mm
Weight	750g
Material	PC+ABS/POM/PBT
Battery Capacity	9600mAh
Rated Voltage	3.7V
Rated Power	22W
The Work Efficiency	Wind Speed : 2m/s/ 3m/s/ 4m/s/ 5m/s
	Camping Lantern Brightness: 50lm/ 150lm/ 250lm/ 350lm
	Mosquito Repellent Modes: Camping mode: 110°C Outdoor mode: 165°C
	Charging Function: 10W charging
	Timing Function: 0.5h/1h/2h/3h

MAX COOLER

Duration

Fan Function: 21h/8h/4h/2.8h

 
Camping Lantern Function:
84.5h/68h/20h/15h

Mosquito Repellent
Function: 13.5h/7h

USE THE FAN




Fan Function

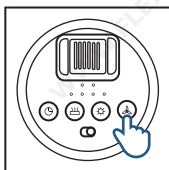

Four wind speeds(Safety lock switch needs to be open)



 Camping Lantern Function

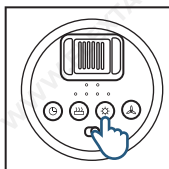


Four Brightness Settings (Safety lock switch needs to be open)

● ○ ○ ○	1. Press the fan button once to turn the low-speed mode at 2m/s;
● ● ○ ○	2. Press the fan button twice to turn the medium speed mode at 3m/s;
● ● ● ○	3. Press the fan button three times to turn the high-speed mode at 4m/s;
● ● ● ●	4. Press the fan button four times to turn the ultra-high-speed mode at 5m/s;
○ ○ ○ ○	5. Press the fan button five times to turn off the fan mode.


● ○ ○ ○	1. Press the camping lantern button once to turn on the low-light mode 50lm;
● ● ○ ○	2. Press the camping lantern button twice to turn on medium light mode 150lm;
● ● ● ○	3. Press the camping lantern button three times to turn on the strong light mode 250lm;
● ● ● ●	4. Press the camping lantern button four times to turn on the super strong light mode 350lm;
○ ○ ○ ○	5. Press the camping lantern button five times to turn off camping light mode.

 Mosquito Repellent Function

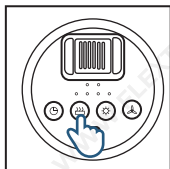

Two Modes(Travel Lock needs to be open)

 Timing Function

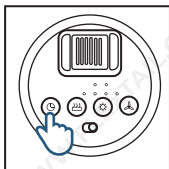


Four Timing Modes(The fan function must be on, and the timing is only for the fan function).


● ○	1. Press the mosquito repellent button once to turn on the camping mode at 110°C; (One mosquito repellent heating indicator light is on)
● ●	2. Press the mosquito repellent button twice to turn on the outdoor mode at 165°C; (Two mosquito repellent heating indicator lights are on)
○ ○	3. Press the mosquito repellent button three times to turn off the repellent mode. (Mosquito repellent indicator lights are off)

● ○ ○ ○	1. Press the timing button once to turn on the 0.5h timing shutdown mode; (The mosquito repellent heating indicator blinks once)
● ● ○ ○	2. Press the timing button twice to turn on the 1h timer shutdown mode; (The mosquito repellent heating indicator blinks twice)
● ● ● ○	3. Press the timing button three times to turn on the 2h timing shutdown mode; (The mosquito repellent heating indicator blinks three times)
● ● ● ●	4. Press the timing button four times to turn on the 3h timing shutdown mode; (The mosquito repellent heating indicator blinks four times)
○ ○ ○ ○	5. Press the timing button five times to turn off the timing mode. (The mosquito repellent heating indicator does not blink)

 HOW TO CHARGE YOUR DEVICE

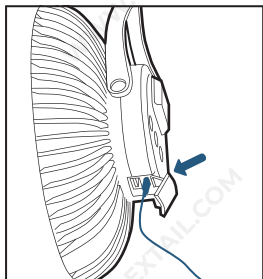


 Charging: When the power is off, use the type-c charging cable to charge the fan.

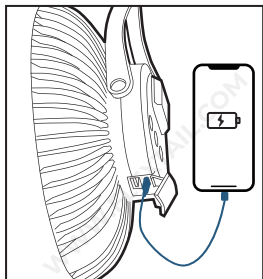

Power supply: In case of emergency, this fan can be used to charge your other mobile device with the charging cable.

 INPUT/OUTPUT DEVICE

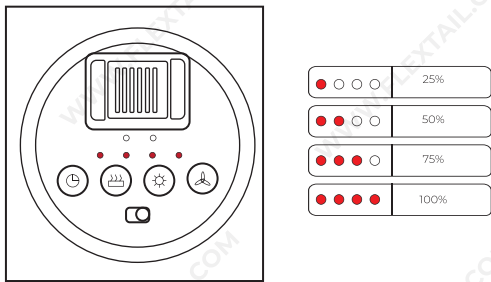


Input: Power indicator blinks when charging, and four power indicators light up after fully charging. (each indicator light represents 25% power)

Output: Power indicator lights up when supplying power to another device. (Each indicator light represents 25% power)

HOW TO CONNECT THE BRACKET/TRIPOD

 
Justify the rest/tripod and the 1/4 tripod screw joint. as shown in the figure, turn the MAX COOLER to the right to tighten it. (rest and tripod are not included in the package)

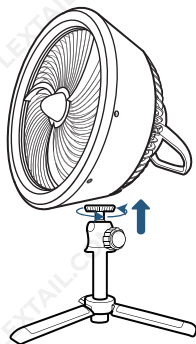

* This product is compatible with all 1/4 inch rests/tripods, which need to be purchased by yourself.

HOW TO USE THE HANDLE

 The handle can be hung at the top of the tent.

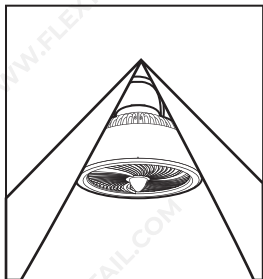

Note: Please place the product on a relatively flat and unshaken ground or object.

HOW TO PLACE THE FAN

1. Do not press the product when it is placed to prevent the switch from being touched by mistake.
2. Fans should be placed on flat ground.
3. Please place the product in a drying environment below 60°C.
4. Please place the product in a stable environment.
5. It is best to place the mosquito repellent device in the center of the desired repellent area.
6. Use mosquito repellent in a windless environment.
7. Do not cover the black heat dissipation net of the mosquito repellent when in use.

CAUTIONS

- For first use or long-term storage, please fully charge the battery.
- Overheating due to long-term continuous use may lead to product malfunction, fire, and other safety accidents. After 3 to 4 hours of continuous use, please stop using and let the product cool.
- Do not put objects or fingers into the running fan.
- Keep out of reach of children. (For children under 10 years old, please use under adult supervision)
- Do not disassemble, modify or repair by yourself.
- Be careful in the damp environment (bathroom), if there is water enter in the product, please stop using it.
- Please stop using if the temperature rises or the appearance is deformed during charging.
- Do not use in a high-temperature environment, do not close to fire or heating equipment, which may cause an explosion or fire.
- When using the tripod support, the bending Angle should not be too large to prevent damage to the product.
- Do not use the product when the conduction is not in the acceptable operating temperature range (-10°C~40°C).
- Do not store or use the product in vehicles under the impact of direct sunlight as it may cause explosions or malfunction.
- Do not charge the product on the carpet, blanket, and other flammable things.
- After using it, be sure to turn off the power before storage.
- If the product is dropped or hit, the damage may cause in the inside of the product and the accidents may occur during normal use. Be careful not to put physical shock on the main unit.
- When using the mosquito-repellent function, please do not place the main fan on its side, do not touch the black heat insulation net, do not allow children to use the mosquito-repellent function alone.
- When using the mosquito repellent device, please do not block the black heat insulation net. Keep the black heat insulation net away from the combustible materials.
- Do not use the mosquito repellent device in a closed and narrow space.

STORAGE AND TRANSPORTATION

- Do not store the product for a long time with the battery fully discharged. Batteries should be recharged at least every 3 months during storage.
- Do not expose the fans to temperatures above 60°C.
- Store in a dry room temperature environment when the product is not in use.
- This product contains a lithium-ion battery, which is limited to certain transportation restrictions. Check product packaging before shipment.

TROUBLESHOOTING

- If the product does not work/the indicator light is off:
- Check whether the anti-mistouch switch/main switch is turned off.
- Please check whether the product has electricity.
- Check whether the fan blade is stuck.
- Please check if there is water or other liquid on the surface.
- Other questions? Please contact FLEXTAIL Technology agents or contact us: service@flectailgear.com.

WARNING

- Do not disassemble, modify, or repair the product by yourself.
 - If there is any leak, odor, or deformation in the battery pack, please discontinue use and dispose of it immediately.
 - Do not put fingers, metal, or other foreign objects in the product.
 - To reduce the risk of injury, close supervision is necessary when the product is used near children. Keep out of reach of children.
- Do not modify or repair the device by yourself. If you need the after-sales service, please contact service@flectailgear.com.

WARRANTY TERMS

- For the defects in material and workmanship of the product, the original retail purchaser of this product will be provided warranty service for one year based on purchase data by FLEXTAILGEAR.
- If the Buyer discovers a covered defect, the buyer should return the product to the place of purchase. If this is not available, please return the product to the address specified by us. We will repair or replace the modified product at our discretion following the warranty terms.
- For products over the one-year warranty period, we have the right to refuse to provide technical support and warranty services.

WARRANTIES EXCLUSIONS

- The warranty does not cover wear and tear caused by normal use, unauthorized modification or alteration, improper use, improper maintenance or maintenance, accident, negligent use, intentional damage, or use of the product for a purpose other than its design.
- This warranty provides for certain legal rights and may include other rights depending on the place of purchase.
- Except for expressly stated in this warranty, we shall not be liable for direct, indirect, incidental, or other types of damages arising out of, or resulting from the use of the product. This warranty is in lieu of all other warranties, expressed or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose (some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on the duration of an implied warranty, so the above exclusions may not apply to you.)

HAVE ANY OTHER QUESTIONS? Email us: service@flextail.com