 




FLEXTAILTM

The Guide of MAX PUMP 2 PRO

Product Introduction

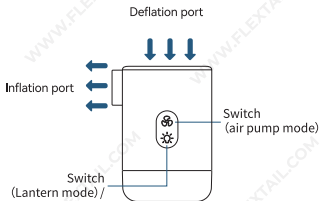

 The Nozzles




For swimming ring , inflatable toy



For vacuum storage bag



 
For air bed




Air Pillow

Operating Instructions

AIR PUMP MODE

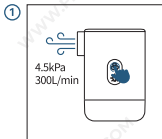


Double Click: high mode

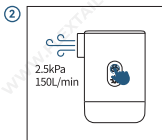


Long press : low mode

INFLATE

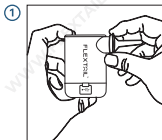

Pick the suitable nozzle


②

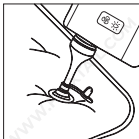

Connect the object


EXHAUST

①

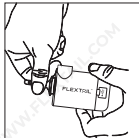

Pick the suitable nozzle


②

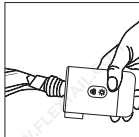

Connect the object


LANTERN MODE

①

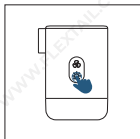


Double Click Switch

②

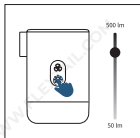

Long press to adjust brightness

PHONE CHARGING

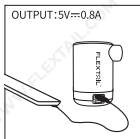



Connect with data cable




iphone12*1.5

CHARGING INDICATOR STATUS

 Low Power Indication

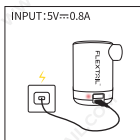

Charge time :6 h

 

< 43°C (110°F)
> -17°C (0°F)

Product Specifications

Weight	160g
Size	51.5mm*57.5mm*77mm
Inflation Pressure	4.5kPa/2.5kPa
Filling Speed	300L/min,150L/min
Exhaust Pressure	4.5kPa/2.5kPa
Compression Ratio	55%
Rated Power	17W
Battery capacity	4000mAh
Package Contents	Max Pump 2 Pro, Type-C cable, Manual, Storage bag, Nozzles
Certification	CE/FCC/KC

WARNING:

- Do not use for more than 10 minutes.
- Do not put it under the water for a long time.
- Keep the inflation port or the deflation port clean.
- Do not put your finger into the inflation port or the deflation port.
- Do not watch the inflation port or the deflation port when pump working.
- Children under the age of 12 must have adult supervision when using the pump.
- Please check whether the air pump is functioning properly before use.
- Do not store with battery completely discharged for extended periods of time. Batteries should be charged at least once every 3 months during storage.

IF MAX PUMP 2 PRO DOES NOT WORK:

- Plug in the charger and check the power.
- Check the surface for water or other liquid.
- Check if the fans are stuck or blocked.
- Press the switch repeatedly.
- Still have a question?
Contact your FLEXTAIL dealer or service@flectailgear.com.

SPARE PARTS:

- There are no user-replacement parts for this product other than the nozzles, Type-C cable, storage bag.

LIMITED WARRANTY:

- We warrant for one year from purchase date and only to the original retail buyer that our products are free from defects in material and workmanship. For pump products, our warranty is for one year.

- If Buyer discovers a covered defect, Buyer should return the Product to the place of purchase. In the event that this is not possible return the Product to us at the address provided. The Product will be repaired or replaced at our discretion. That is the extent of our liability under this Warranty and, upon expiration of the applicable warranty period, all such liability shall terminate. We reserve the right to require proof of purchase for all warranty claims.

WARRANTY EXCLUSIONS:

- We do not warranty Products against normal wear and tear, unauthorized modifications or alterations, improper use, improper maintenance, accident, misuse, negligence, damage, or if the Product is used for a purpose for which it was not designed. This Warranty gives you specific rights, and you may also have other rights which vary from state to state. Except for expressly stated in this Warranty we shall not be liable for direct, indirect, incidental, or other types of damages arising out of, or resulting from the use of Product. This Warranty is in lieu of all other warranties, express or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose (some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on the duration of an implied warranty, so the above exclusions may not apply to you).

- f Facebook:** flextail
- @ Instagram:** flextail_official
- ▶ YouTube:** flextail
- e www.flextail.com**
- ✉ Email:** service@flextail.com



RoHS

