

# FLYCAM Arm & Vest Gimbal Adapter (FLCM-GA)

## Assembly Manual



### ■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



---

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

## ■ Arm & Vest Gimbal Adapter **SETUP**

- Loosen the knob of the gimbal adapter to attach to any 16mm diameter rod or pin.

**Note:** Flycam gimbal adapters can be used to connect the camera gimbal stabilizer to any 16mm dia rod or Steadicam arm and vest system.



- Loosen the quick release knob to detach it from the gimbal adapter.




- Mount the gimbal stabilizer on the quick release.

**Note:** Any gimbal with 1/4"-20 or 3/8"-16 thread can be mounted on the gimbal adapter.



- Attach the quick release by sliding into the gimbal adapter and tighten it properly with the knob provided.

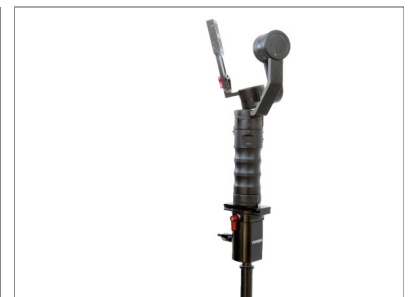

## YOUR FLYCAM ARM & VEST GIMBAL ADAPTER ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.