


FLYCAM Comfort Arm & Vest (CMFT-AV)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

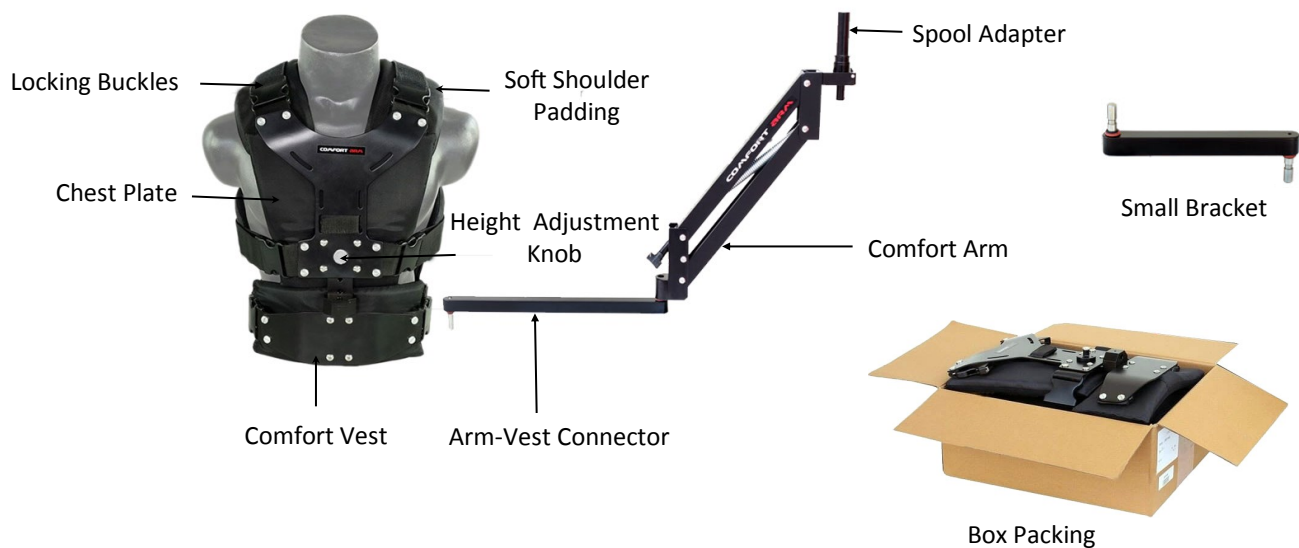

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

■ Stabilizer Arm & Vest Setup

- Attach back and front of Vest by clipping shoulder buckles. Then Put-on the Vest and attach chest buckles. Tighten the shoulder Velcro straps to a snug position.



- Tighten lower straps with help of Velcro on back for a comfortable fit and lock them with buckles.
- Make Vest fit as tight as possible. Doing so provides maximum control over the stabilizer system and makes for slip-free operation.



- The length of chest plate can be adjusted according to your height by using Adjustment Knob.
- Insert Arm-Vest Connector into space provided.



NOTE: Once the fit of Vest feels comfortable, you can remove it by un-clipping the buckles and strap from one side only. This makes it easy to remove and dress it back on, when needed.

■ Arm Adjustment

- The universal Arm mount requires no tools to attach it to Vest. When assembling, just put it into the mount, as shown. Now attach Spool Adapter to Comfort Arm in order to mount your Stabilizer onto it.




NOTE: If you are using Stabilizer Jr. or Glidecam Handheld Stabilizer, you will need to replace Spool Adapter post.

- To compensate for the weight of camcorder and stabilizer, an adjustable tension spring knob is provided. Turn the knob clockwise to set angle of arm at a desired fixed position and anti-clockwise for taking smooth gliding shots.



- Determine which end fits into bottom of your handle, insert adapter post into yoke, replace retaining screws and tighten securely.

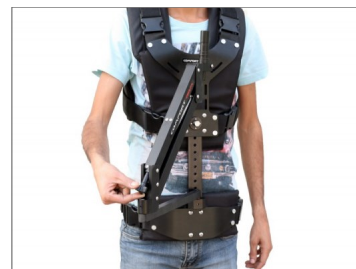

■ Maintenance

Bearing Maintenance

If after some period of time the bearings stop running smoothly as when new, you can oil it with light lubricating oil. We recommend using only a few drops, anything more than a little will end up dripping from the bearing and onto the rest of your Comfort Arm. Be sure to keep the oil away from your camera, and clean up any over-spill when done.

Cleaning

Do not use solvents or harsh cleaners of any kind on Comfort Arm & Vest. If the unit becomes dirty, use only a cloth or sponge with water and a very mild detergent to gently rub the unit clean. Rinse well.

Storage

If you are going to store Flycam Comfort Arm & Vest for a long period of time, then we recommend storing it up-right in a dry or low-to-normal humidity area.

If you are unable to find an environment like this, then we suggest you store the unit in an airtight plastic container or bag. Keeping the unit upright helps to lessen stress on the system.

YOUR FLYCAM COMFORT ARM & VEST ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.