

Assembly Manual




■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Flowline Camera Gimbal Tilt

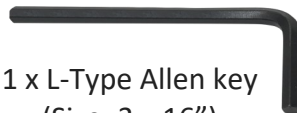

1 x L-Type Allen key
(Size: 3 x 16")

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Flowline Camera Gimbal Tilt Control Kit Setup

NOTE: Flycam Gimbal Tilt Control Kit is exclusively designed for all Flycam Flowline Series to offer steady gimbal tilt.



- Remove the bolt of the Flycam Gimbal Tilt Control Kit using a T-type Allen Key (3x16") (Not Included).



- To remove the remaining bolts, follow the same process.



- Remove the first Spindle of the Flycam Gimbal Tilt Control Kit, as shown in the image.



- Now, remove the second Spindle.



- Remove the cap of the Flycam Gimbal Tilt Kit.

NOTE: The Crossbar is affixed to the top of your Flowline Rig with the help of the Quick-Release Camera Hook.



Flycam Flowline Arm Setup

- Remove the attached Camera Hook of the Flycam Flowline Arm (**Not Included**) by loosening its screws using the Allen key.



- Now, remove the Camera Hook from the cup and take out the Cord from the cup.



- Remove the Cord Lock from the Cord.




- Properly insert the Cord into the Flycam Gimbal Tilt Kit.




- Pull and remove the Camera Hook of the Flycam Gimbal Tilt Kit.



- Now, insert the Cord into the Camera Hook.

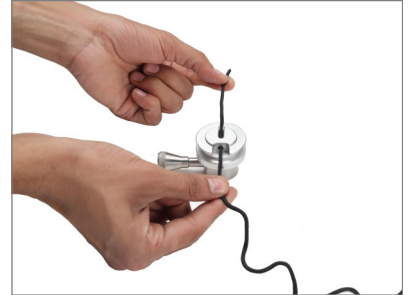

- After inserting the Cord into the Camera Hook, rotate and properly tighten it.

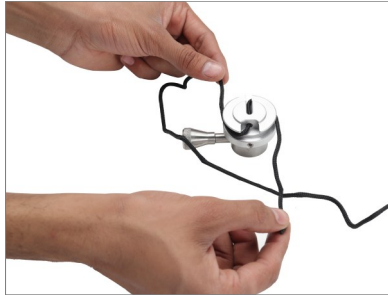

- Mount the cap on the Camera Hook and properly secure it.



- Attach both the Spindles of the Flycam Gimbal Tilt Kit with the Star Ring (Not Included).



- After attaching the Spindles, re-insert bolts and tighten the first Spindle using the T-type Allen Key (3x16”).



- Repeat the same process to secure the second Spindle.



- You can loosen or tighten the rope of the Flycam Gimbal Tilt to adjust its height.



- The height of the Flycam Gimbal Tilt Kit is properly adjusted.

NOTE: The kit includes a Crossbar, Ropes, Spindles, and a Quick-Release Camera Hook, delivering steady tilting gimbal shots



- Attach the cap to the Camera Hook, as shown in the image.



RS-Ronin Setup

- Slide the RS-Ronin (Not Included) onto the Star Ring and secure it in position by tightening its locking knob.



NOTE: The Crossbar enables supreme balance and lets you tilt your entire Flowline rig down to 90° on either side, allowing dynamic shots.



Different and Creative Tilting angles for Gimbals



**YOUR FLYCAM FLOWLINE CAMERA GIMBAL TILT CONTROL KIT
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.