

FLYCAM Galaxy Stabilizer Arm & Vest (GLXY-AV)


Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

NOTE: We already assembled the Blue Spring (2-5kg) with the galaxy arm while packing.

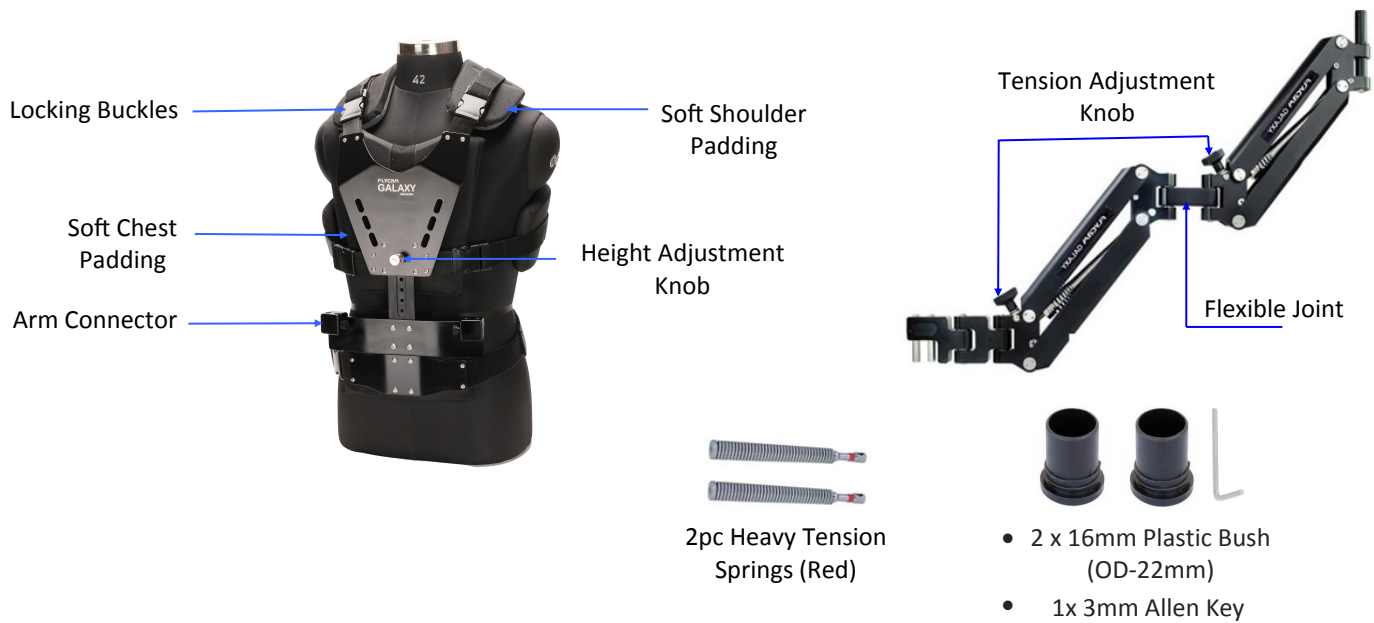

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

■ Stabilizer Arm & Vest Setup

- Having put your vest on, insert the hooks of the 26" long straps into the appropriate buckle. Then tighten both straps with Velcro for a comfortable fit and lock both with the buckles.



- The length of the chest plate can be adjusted according to the height of the person by using this adjusting screw.



NOTE: Properly set up and custom fit, your vest should look like the provided picture. Straps are made of through nylon and industrial strength Velcro and can be easily replaced or adjusted to suit individual needs.

- Loosen the knobs & insert Arm's male socket into female socket of vest as shown in image. Now, your Galaxy Stabilizer Arm & Vest assembly is ready to use.



■ Arm Adjustment

The arm tension is adjusted for the heaviest camcorder, so when you apply the camcorder and sled on the arm for the first time it does not stay down. Now adjust the arm for the weight of your camcorder:

- Move the arm to the middle of its booming (up and down range) and let go. (If it stays where it is, you are probably close to the right adjustment).

Keep making small adjustments until the camcorder does not rise or fall when you let go of it in the middle of its booming range.

■ Position arm

- Move the camcorder to your left so the arm crosses your body.
- Adjust the arc of your arm so the rig feels comfortable to you.
- Keep the camcorder close to your body.

For Interchanging the spring, Follow this

<https://bit.ly/34o0fgk>

■ Maintenance

Bearing Maintenance

The Flycam GALAXY Arm contains the bearings. If after some period of time your bearings don't turn smoothly as when new, you can oil it lightly with light lubricating oil. We recommend that you use a minimum amount. Only a few drops are required, plus anything more than a little will end up dripping from the bearing and onto the rest of your Galaxy Arm. Be sure to keep the oil away from your Camera, and clean up any over spill when done.

Cleaning

Do not use solvents or harsh cleaners of any kind on your Flycam Galaxy Arm & Vest. If the unit becomes dirty, use only a cloth or sponge with water and a very mild detergent to gently rub the unit clean. Rinse well.

Storage

If you are going to store your Flycam Galaxy Arm & Vest for a long period of time then please store the unit up right in a dry or low to normal humidity area whenever possible.

If you are unable to find an environment like this, then we suggest you store the unit in an airtight plastic container or bag. Standing the unit upright helps to alleviate stress on the system.

**YOUR FLYCAM GALAXY STABILIZER ARM & VEST
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.