


Assembly Manual



■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

NOTE: The back mechanism of the support rig may come equipped with either a lever or knob mechanism based on current availability. Rest assured, whether you receive a vest with a lever or knob mechanism, there is no change in functionality.

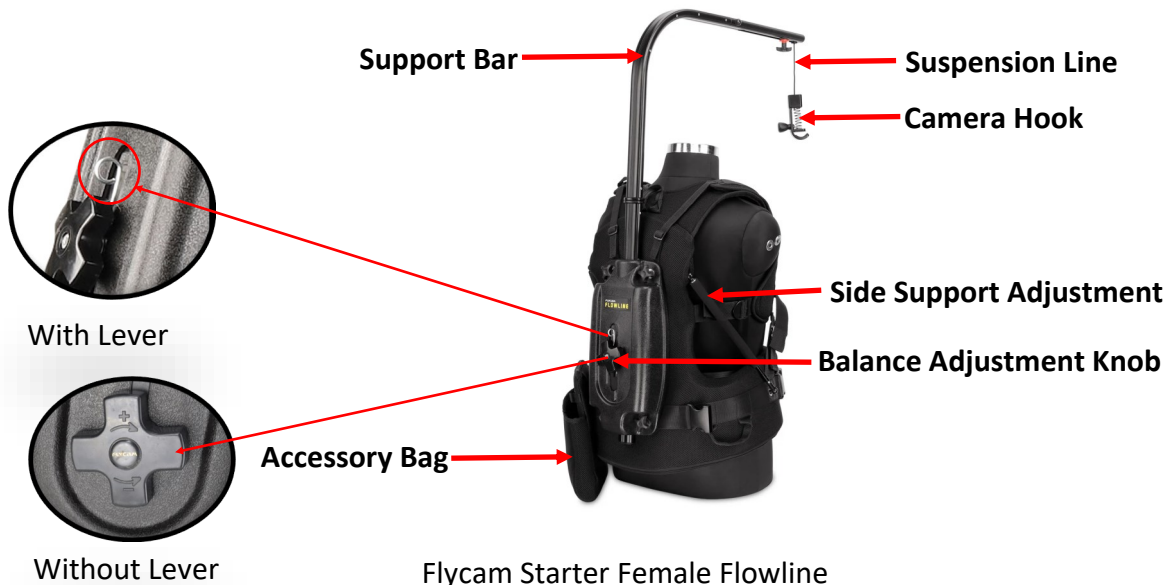

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



Bag Packing

Starter Female Flowline Setup

NOTE: It is recommended to attach the minimum required weight (3kg/6lb) for pulling down the balancing rope to ensure proper operation of your Flycam Flowline system.

- Join section 1 of the support bar to section 2 with a simple push-fit technique.



- Overlap both sides of the vest (chest area) through the provided Velcro, then adjust and buckle them up as per your requirements.



- You can stretch or loosen the adjustment strap of the jacket, then adjust it until you find it comfortable, as shown in the image.



- Overlap both sides of the vest (waist area) through the provided Velcro and buckle them up per your requirements.



- Adjust or tighten the vest around the waist area through the provided strap.




- Use the strap to adjust the chest Velcro properly; then adjust until you find it comfortable, and you can set the side support adjustment rods according to your body type.


NOTE: The side support adjustable vest rods enable a comfortable fit for all body types.



- Pull the strap down from the backside for proper fitting from the shoulder, as shown in the image.

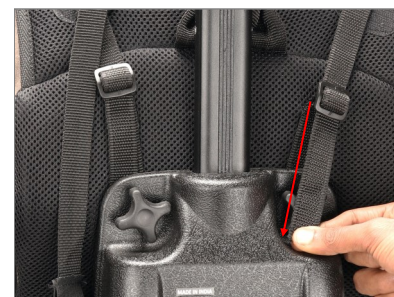

- Loosen the knob of the camera hook and attach the camera to it. Tighten the knob to ensure a slip-free connection.

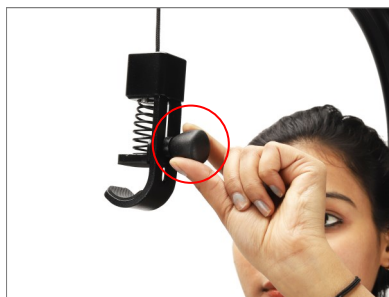

- Attach the vest safety hook to your camera, as shown in the images, for more safety and protection.



- Rotate the tension adjustment knob anti-clockwise to adjust the spring tension according to the setup weight.

NOTE: To effortlessly use the tension release knob, start by pulling the rope downwards, then proceed with the tension adjustment.



CAUTION: Releasing the lever without removing the setup may result in severe camera damage.

NOTE: The back mechanism of the support rig may come equipped with either a lever or knob mechanism based on current availability. Rest assured, whether you receive a vest with a lever or knob mechanism, there is no change in functionality.



With Lever



Without Lever

**YOUR FLYCAM STARTER FEMALE FLOWLINE BODY SUPPORT RIG
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.