


Fusion Video/Film Camera Dolly Slider with Track Ends (DL-FUSN-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

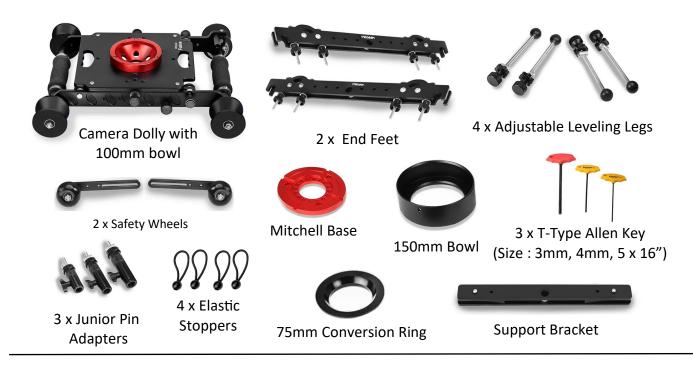

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



Attaching the Levelling Legs Setup

 Insert the adjustable leveling legs into the end feet adapter and tighten the knob to secure it.





Attaching the Track

• Loosen the knobs of the end feet & insert the track rails (Not Included) into it, and then tighten the knobs tightly to secure it.





Assembling the Dolly Setup

 Mount the camera Dolly on the track (Not Included), as shown.

NOTE: Always mount dolly on rigid tracks.



 Remove the side knobs of the Dolly and attach the safety wheels on either side.
Secure them by tightening the knobs.





 Loosen the side knobs of the Dolly in order to tilt the camera platform that can incline up to 52°. Adjust and lock it to your desired angle by locking the knobs.





 Now attach the elastic stoppers on both the rails to prevent the Dolly from getting dislocated. These can also be used as wheel brakes.





• By default, a standard 100mm bowl receptacle is affixed to the Dolly.

NOTE: Fusion Dolly accommodates 4 Camera Mounting Heads. 75mm Bowl / 100mm Bowl / 150mm Bowl / Mitchell Base.



 You can mount a 75mm conversion ring to use 75mm bowl head.



 You can also mount a 150mm conversion ring to use 100mm bowl head.



 Remove the 100mm bowl receptacle from the platform & attach the Mitchell plate on it.
Tighten the assembly with the help of provided tools.





Now you can mount your camera setup as desired.



Attaching the Supports

• Remove the hook from the junior pin adapter and insert it into the end feet.





 Then loosen the knob of the junior pin adapter and mount the track system (Not Included) on a stand (Not Included) via the adapter. Tighten the knob to secure it.





• Now, remove the hook from the junior pin adapter, and insert it into the support bracket, as shown in the image.





• Tighten the assembly by twisting the adapter.



• Place this support bracket below the track (Not Included) system, and then mount your camera setup, as shown in the image.





To Use Dolly As Underslung

• Attach the 100mm bowl receptacle to the bottom of the Dolly and tighten it with the help of the Allen key.





You can mount your camera in an underslung orientation.



YOUR PROAIM FUSION VIDEO/FILM CAMERA DOLLY SLIDER WITH TRACK ENDS ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.