

PROAIM 12' Vega Video Camera Jib Crane for Video makers & Filmmakers (JB-VG12-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Vega Jib Front Section



Handle



Vega Jib Middle Section



3/16mm
Allen Key



1/4 to 3/8
Converter



Vega Jib End Section



2 x Allen Bolts
With Washers

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Vega Jib Setup

- Completely stretch and open the end section of Vega Jib, as shown in the image.



- After opening the end section, loosen the bottom and side knobs of the Central Fork.




- The end section is properly open, now.
Feature: Central Fork mechanism facilitates ultra-smooth pan-tilt movements while absorbing unwanted vibrations for cleaner shots.



End Section Assembly

- Mount the end section of the Vega Jib on the Jib Stand (**Not Included**).

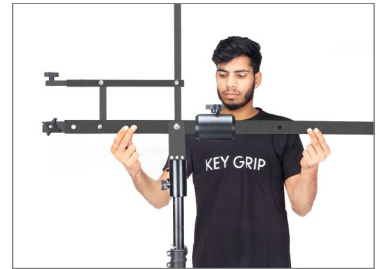

- After mounting the end section, tighten the knob while aligning the holes with each other.
- Loosen and remove the top knob of the end section.





- Loose and remove the Center knob of end section.



Middle Section Assembly

- The central part has connecting bars attached at both the ends, slide the middle section into the slots of the end section.

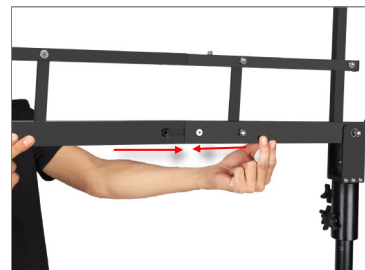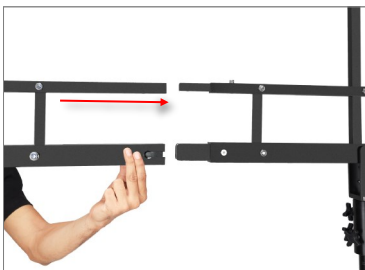


- After sliding the middle section into the slot of the end section, insert the locking knob in the threads present on top and bottom of the section.



- Tighten the knobs to completely secure the section.





- Now, loosen and remove the top knob of middle section.

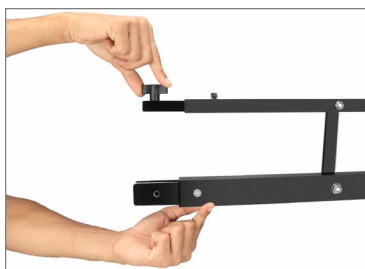


Front Section Assembly

- The front section has connecting bars attached at both ends, slide the front section into the slots of the middle section.

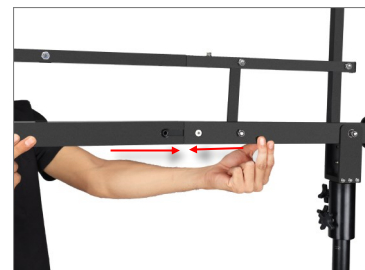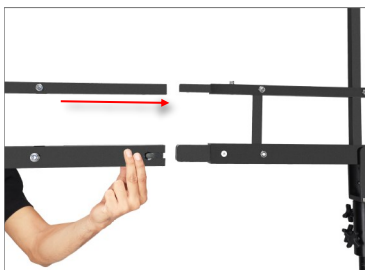

- Tighten the locking knobs to secure the Jib sections.

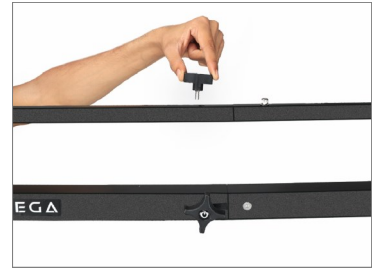

Handle Assembly

- To detach the handles from one another, loosen them by turning them in a circular motion.

Feature: The Camera Crane can be controlled using the handle.



- Remove the washer from the handle.
- Insert the handle into the hole of the end section of the Vega Jib, as shown in the image.



- After inserting the handle, attach the handle to the jib from the other side.



- Now, attach the handle.




Camera Mounting Plate

- Mount the Quick Release Plate (Not Included) on the Camera mounting plate of the Vega Jib.



- After mounting the Quick Release Plate, insert the bolts from the bottom side of the Camera mounting plate.

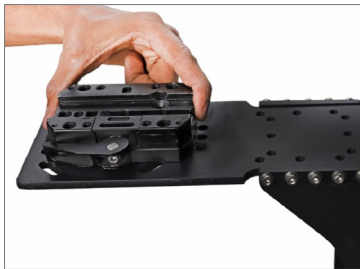


- Insert a 1/4" bolt from the bottom of the extension Camera plate to secure the Quick Release Plate and tighten it with the Allen key.
- Unlock the lever lock of the Quick Release Plate.



- Slide the Gimbal (Not Included) onto the Quick Release Plate and lock it using the locking lever.



**YOUR PROAIM 12' VEGA VIDEO CAMERA JIB CRANE
ALL DRESSED UP AND READY TO GO!**

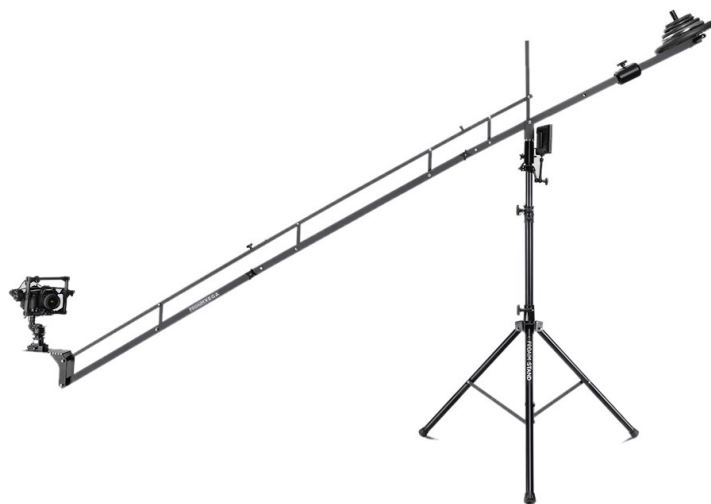

(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.