

Cranked Telescopic Bazooka (BZ-CRNK-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Cranked Bazooka Setup

 Mount the Cranked Bazooka onto the Euro/Elemac mount dolly turnstile. Tighten the knob to secure Bazooka.





• Loosen the Euro mount knob and turn the crank lever to increase the height of Bazooka according to your requirement.





• Push the Red button for quiet movement.

NOTE: The Red button is the first automatic lock as well.



• The Crank lever is foldable. You can fold it when not in use.

NOTE: Euro mount knob is the second lock. Tighten the Euro mount knob for the double security.





• To reduce the height, push the red button and turn the crank lever.



 Integrated Eyebolts allow you to secure the Bazooka with straps (not included) for extra security of heavier camera setups.



YOUR PROAIM CRANKED TELESCOPIC BAZOOKA, ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.