


Falcon Pro Stabilized Camera Rickshaw Support (RCSW-FLCN-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

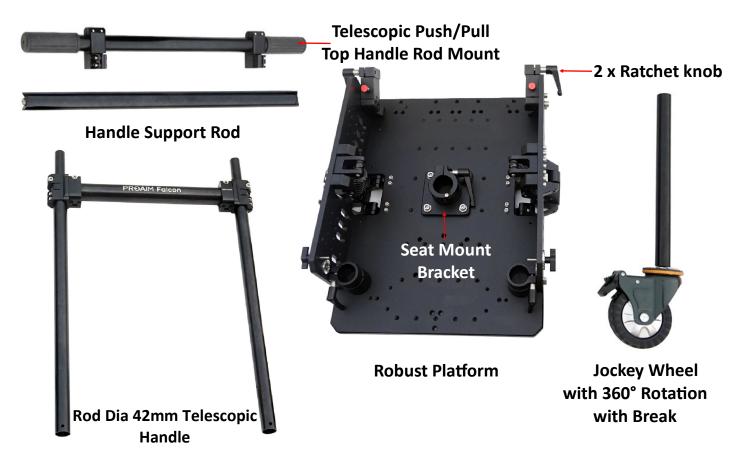



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

FEATURES



Falcon Rickshaw **Setup**

The Rod adapter already has four bolts.
Loosen and remove them with the help of an Ellen key.





 Align the threads of the rod adapter and the robust platform together and secure them with bolts.





• Tighten the bolts using a 5/16 Allen key.



• Insert the Castor wheel into the rod adapter hole and securely tighten it with a 5/16mm Allen key.





• Remove the bush from the bolt. Attach it to any of the three holes present on the side of the rickshaw platform.





 Insert the bolt into the center hole of the wheel. Then bolt this wheel through 3 holes present on the side of the platform. Repeat the same process on the other side of the platform.





• Tighten the bolts using a 19mm spanner to secure the wheels to the platform.





Seat Position

• To adjust the seat mount adaptor, loosen the ratchet knob and remove the bolts with the help of a 5/16mm Allen key.





 Multiple threads are provided on the robust platform. Adjust and mount your seat adaptor anywhere on the platform as per your needs and re-tighten the bolts using a 5/16mm Allen key.





• Insert the seat bridge into the seat mount adaptor and secure them together with the ratchet knob.





 The seat pole has a height adjusting feature so you can easily set your seat up and down. Lock the seat to your desired position using the seat break.





 Using a 2.5mm Allen key, loosen the bolt of the handle support rod and remove it.
Align the handle support rod thread with the thread on the telescopic chassis rod.

Note: There is a thread option on the telescopic chassis rod for attaching the support rod.



• Then insert the bolt into the telescopic rod and secure it with an Allen key.





 Pull the red pull pin and insert the main chassis into the adjustable end mounts.





 Secure the main chassis using the ratchet knob. To extend the length of the main chassis, Insert rods on both sides of the chassis and secure them using a 6mm Allen Key.





 Using a 5mm Allen key, loosen the telescopic push/pull handle rod mount and adjust the length as per your needs. Then, secure it using the same Allen key.





• Secure the top handle rod mount and the adjustable end mount together using an Allen key.





• Now, Insert a rod (Not-Included) into the rod mount accessory and securely tighten it with the ratchet knob.





 Insert the footrest by aligning it with the rickshaw platform thread. Then, secure it correctly with the footrest knob, as shown in the picture.





YOUR PROAIM FALCON PRO STABILIZED CAMERA RICKSHAW SUPPORT ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.