

PR◊AIM Overhead 12ft Modular Studio Rig (P-OHLR-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Overhead Rig Setup

Attaching Rail Section

- Attach track sections as shown and secure them using the provided bolts. The Track comes in a pair of 3 x 4ft sections, so the maximum length for the Track is 12ft.



The Track includes two types of Spacers:

2x End Spacers

- The End Spacers have 1/4" and 3/8" mounting threads. Mount the 2 Stand adapters at the bottom of the End spacers. Then mount it on the stand and secure it by tightening the knob.
- Press in the Track into the end caps until you hear a click.



3 x Accessory Spacers

- The Accessory Spacers also include 1/4" and 3/8" threads for mounting accessories. Place the Accessory Spacers at the desired location along the Track. The Spacer's end caps must be facing down. Make sure the Accessory Spacer clicks on the track rails.



NOTE: You can mount multiple camera gears on Accessory Spacers, e.g. cameras, lights, mics, monitors, etc.



Attaching 3" Riser for Camera Setup

- Screw-in your riser with Accessory Spacer, as shown in the image.
- The Overhead comes with the ball head that features a quick-release camera plate. Attach ball head with 3" Riser and secure properly.
- Mount your camera into the Quick release plate and secure it properly. You can adjust the camera angle according to your needs.



**YOUR PROAIM OVERHEAD 12FT MODULAR STUDIO RIG
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please contact us immediately and we promise our utmost support and care until you use our product.