PR AIM SnapRig Universal DSLR Camera Cage (CG219)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

DSLM Camera Cage Setup

• Remove both the Allen bolts on the top plate with a 3/16mm Allen key.





 Then Align the top plate with the camera cage and secure it properly with the help of a 3/16mm Allen Key by inserting both the Allen bolts on the top plate.





 Remove both the Allen bolts of the camera plate with the help of a 3/16mm Allen key and attach it to the bottom part of the camera cage.





• Then secure it with the help of a 3/16mm allen key.

NOTE: You can adjust both the top and base plates to your requirements by loosening the bolt and sliding it in.




Top Handle

• Place the top handle above the top plate. **NOTE:** The provided multiple threads of the top plate allow you to mount the top handle anywhere according to your requirement.





 After placing the top handle on the top plate, match the bolt with the side threads of the handle, insert the button head, and tight it with the help of a 4mm Allen key.

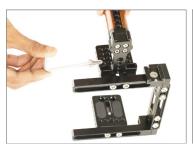



Side Handle


 Match the wooden side handle with the side thread of the camera cage and insert the side handle and tighten it properly with its knob.

NOTE: You can hold the handle anywhere on the provided multiple threads of the Camera Cage according to your requirement.







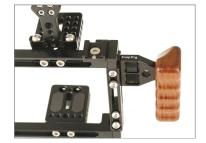

 Attach the Camera (Not Included) into the Camera cage properly by sliding it onto the shoe mount on the top plate.





 Match the provided screw hole on the bottom of the camera plate with the camera (Not Included) hole and screw it tightly with the help of a screwdriver.






Interchange Slide Bars

• Loosen the knob of the wooden side handle and remove the handle.



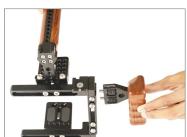

 Then remove the button head from both sides of the camera cage with the help of a 4mm Allen key.





 The button heads have been properly removed from both sides of the camera cage and remove the camera cage's existing side sliding bar.

NOTE: The existing slide bar is comparatively larger than the given slide bar; you can use them according to your size requirements.

• Insert the slide bars from both sides by sliding them on the camera cage.









 By aligning the slide bars properly, insert the Allen bolt matching the thread of the sliding bars.





• Tighten the button head properly (front and back) using a 4mm Allen key.





 Match the wooden side handle with the side thread of the camera cage and insert the wooden side handle and tighten it properly with its knob.





 Adjust the height of the camera cage according to your camera's height.





YOUR PROAIM SNAPRIG UNIVERSAL DSLR CAMERA CAGE ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.