

Soundchief Pro Cart (CT-SDCF-PRO)

Assembly Manual




What's In The Box


Please inspect the contents of your shipped package to ensure you have received everything that are listed below.



1 x Main section

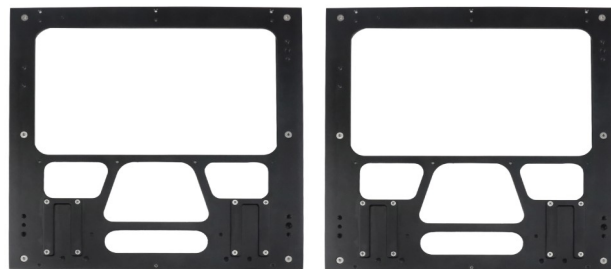


2 x Top side panel

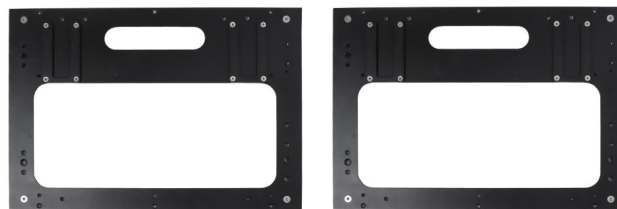

2 x Bottom side panel

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

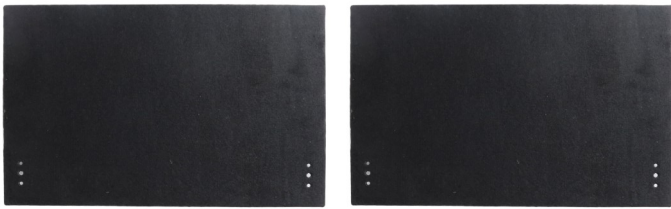

2 x Foldable & Detachable Side Wings




2 x Wheels



2 x Top side panel Top & Bottom shelves



2 x 5/8" baby pin mount

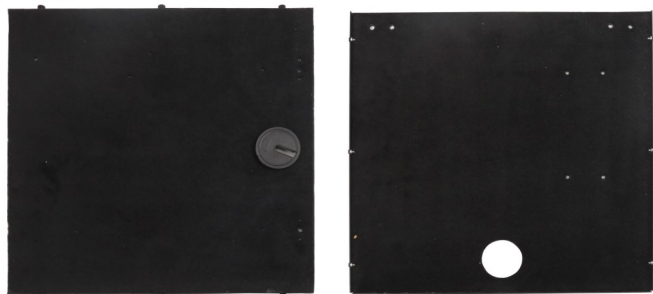

2 x Bottom side panel Top & Bottom shelves



2 x Countersunk bolts



2 x Caster wheels with brakes



2 x Handles



2 x Cable hooks



8 x Panel connector



2 x Wheel axel



1 x Bottom plate



3 x (10-11, 17, 19) Spanner




2 x 5/8" baby pin



1 x L- Type Allen key (5/16")
5 x T- Type Allen Key
(6mm, 3/16mm, 5mm, 4mm, 2.5mm)

■ Soundchief Pro Cart Setup

- Loosen the bolt of the Bottom Plate With The help of 5/16" L-type a Allen key and (19) spanner.
- Remove all the bolts of the bottom plate, as shown in the images.
- Align the bottom plate with the main section.

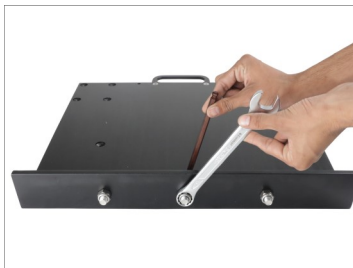

- Match the holes of the main section with the bottom plate and insert the bolt.




- With the help of the (5/16") L-Type Allen key, insert the Nyloc nut by holding the bolt.



- Now properly tighten the nut with the help of (19) spanner and (5/16") L- type Allen key.



- Follow the same process for the remaining two bolts and attach the bottom plate with the main section.

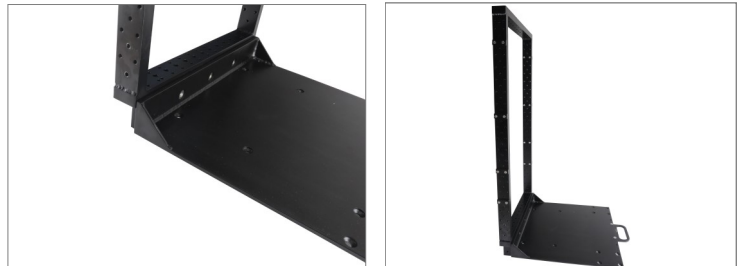

- Remove both the wheel axle bolts manually.



- Attach the wheel axle to the side parts of the main section.



- To attach the wheel axle with the main section, Insert the Nyloc nut by inserting the bolts manually.



- Then tighten it properly with the help of (10-11) spanner and 3/16mm Allen key.



- Remove the Nyloc nut from the wheel axle, as shown in image.



- Remove the Nyloc nut of both the side wheel axles.



- Attach the wheel to the main section and insert it into the wheel axle, as shown in the image.



- Secure the Nyloc nut by inserting it (19) with the help of a spanner.



- 1st wheel is now attached to the main section, follow the same process for the other side wheel.



- Finally both the wheels are properly attached to the Main section.



- Remove the caster wheel bolts with the help of a 6mm Allen key and (17) spanner key.



- Remove all bolts of the caster wheels, as shown in the image.



- Remove the bolts of both the caster wheels properly.



- Insert the bolt matching the thread hole of the caster wheels with the base plate.



- After inserting the bolt, insert the washer and Nyloc nut.



- Now properly tighten them with the help of a 6mm Allen key and (17) spanner.



- Attach the panel connector to the bottom side panel with the help of a 3/16mm Allen key.




- Apply the same process for the other Bottom side panel and attach it with the Panel connector.



- Now both the bottom side panels are ready to use.



- Remove the side bolts of the bottom shelves with the help of a 2.5 mm Allen Key.

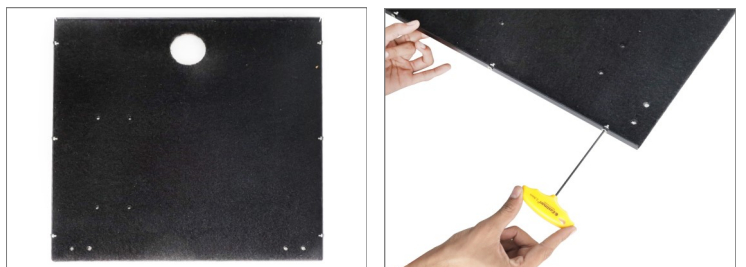

- Remove all bolts on the bottom shelves.



- Insert the bolts by attaching the bottom shelves to the bottom side panels.



- Tighten them with the help of a 2.5mm Allen key.



- Follow the same process for another Bottom side panel.



- Remove the Ratchet knob by pushing the push pin button.



- Manually remove the Ratchet knobs from both the bottom side panels.



- Attach the bottom side panels to the main section of the cart by aligning with it.




- Same as shown in the image.





- Insert the ratchet knob to attach the bottom side panel with the bottom sleeve.



- Secure the bottom side panel with bottom shelves properly with the help of the Ratchet knob.

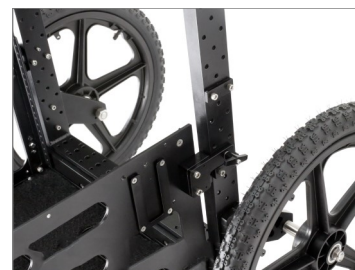

- Remove the knob from the bottom side panel top shelves manually.

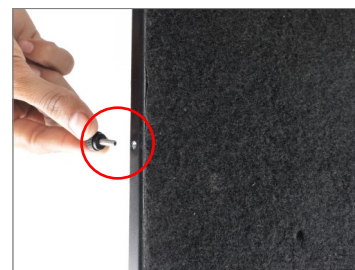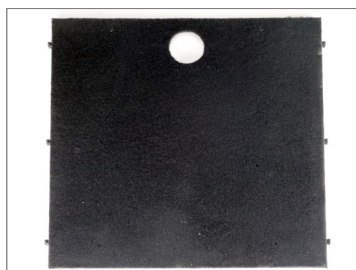

- Remove all the knobs of the bottom side panel top shelves.



- Then manually place the bottom shelves of the main section on top of the bottom side panels.



- Tighten them properly with the help of all three knobs.



- Attach the panel connector along the top side panel and tighten it with a 3/16mm Allen key.



- The panel connector is properly attached with the top side panel.



- Tighten the same panel connector on the bottom side and tighten it with a 3/16mm Allen key.



- Apply the same process for the Top Panel as well.



- Remove the side bolts of the Top Side Panel Top & Bottom Shelves with the help of a 2.5mm Allen key.




- Then align with Top side panel.





- Align the top side panel with bottom shelves and secure them properly with a 2.5mm Allen key by inserting the bolt.




- Apply the same process for the other Top Panel as well.

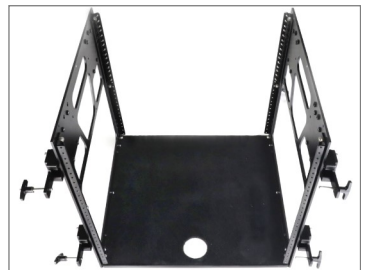

- Remove the side ratchet knob by pushing the button of the push pin.

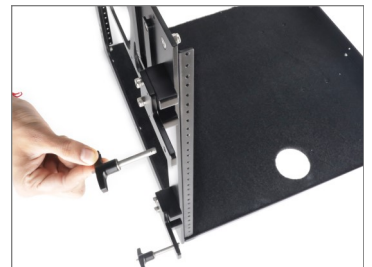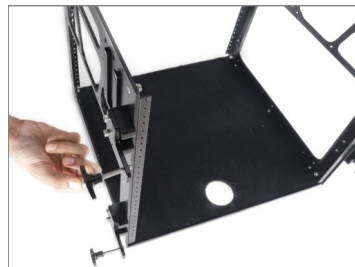

- Remove the Ratchet knob on both sides.

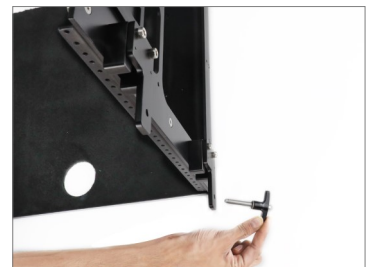

- After attaching the Top Side Panel with Top Bottom Shelves, align with the cart manually.



- Secure it from both sides with the help of the Ratchet knob.



- The Top Side Panel Top & Bottom Shelves are attached to the Soundchief Cart.



- Then place the top side panel on the top, as shown in the image.



- Secure the top side panel with the help of a knob.



- Open the legs of the foldable & detachable side wings and slide them in from the top side panel.



NOTE: The side wings can be folded by pushing the lock lever.





- Both the side wings are now properly setup, as shown in the image.



- Remove the bolts of the 5/8" baby pin mount.




- Mount the 5/8" baby pin mount to the top of the Soundchief cart.

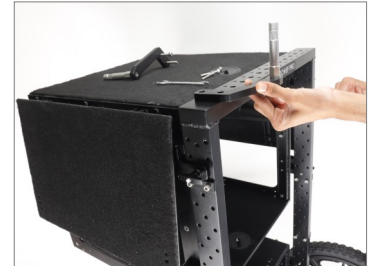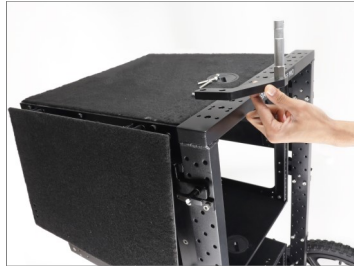

- Then by inserting the bolt matching the thread, manually insert the Nyloc nut from the bottom part.




- Tighten it with the help of a 3/16mm Allen Key and follow the same procedure on the other baby pin mount.

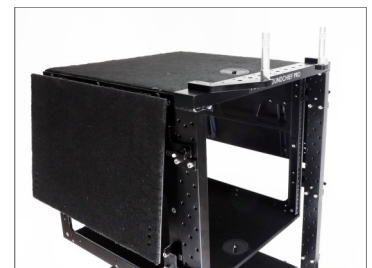

- Properly remove the handle bolts.



- Align the handle & insert the bolt by matching the handle to the side threads of the main section of the Soundchief cart.

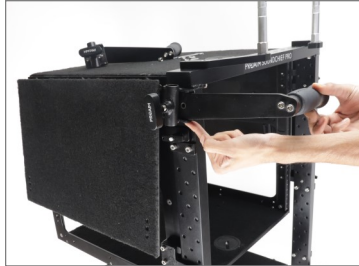

- Then properly tight with the help of a 3/16mm Allen key and (10-11) spanner and follow the same process on the other side handle.




- Loosen the larger side knob in the handle and tighten the knob properly by inserting a 5/8" baby pin.





- Follow the same process on another side of the handle.





- Properly remove the bolts of the cable hooks, as shown in the image.

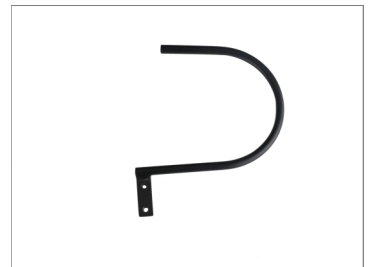


- Then insert the bolt by attaching the cable hooks to the cart's main section.

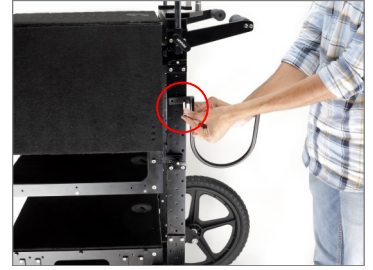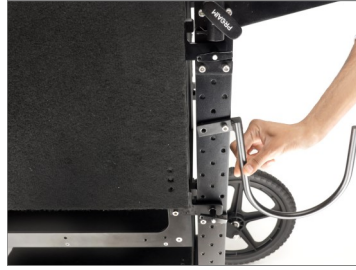

- Insert both the bolts of the cable hooks and tighten them properly with the help of a 3/16mm Allen key and (10-11) spanner.

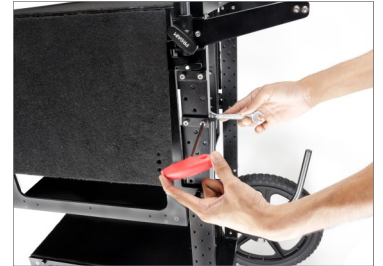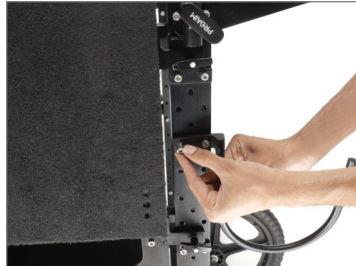

- Finally, both the cable hooks are properly attached to the Soundchief cart.

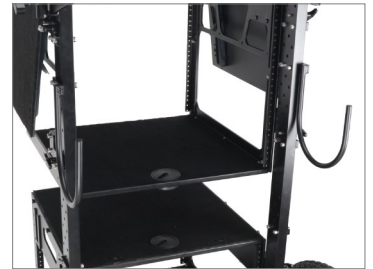

- Soundchief Pro cart is finally ready.
NOTE: Two people are required to assemble the Soundchief Pro cart.



**YOUR PROAIM SOUNDCHIEF PRO CART
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.