


Soundchief V1 Channel Cart - For Sound/Video Recording & Production (CT-CV3-PRO)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.


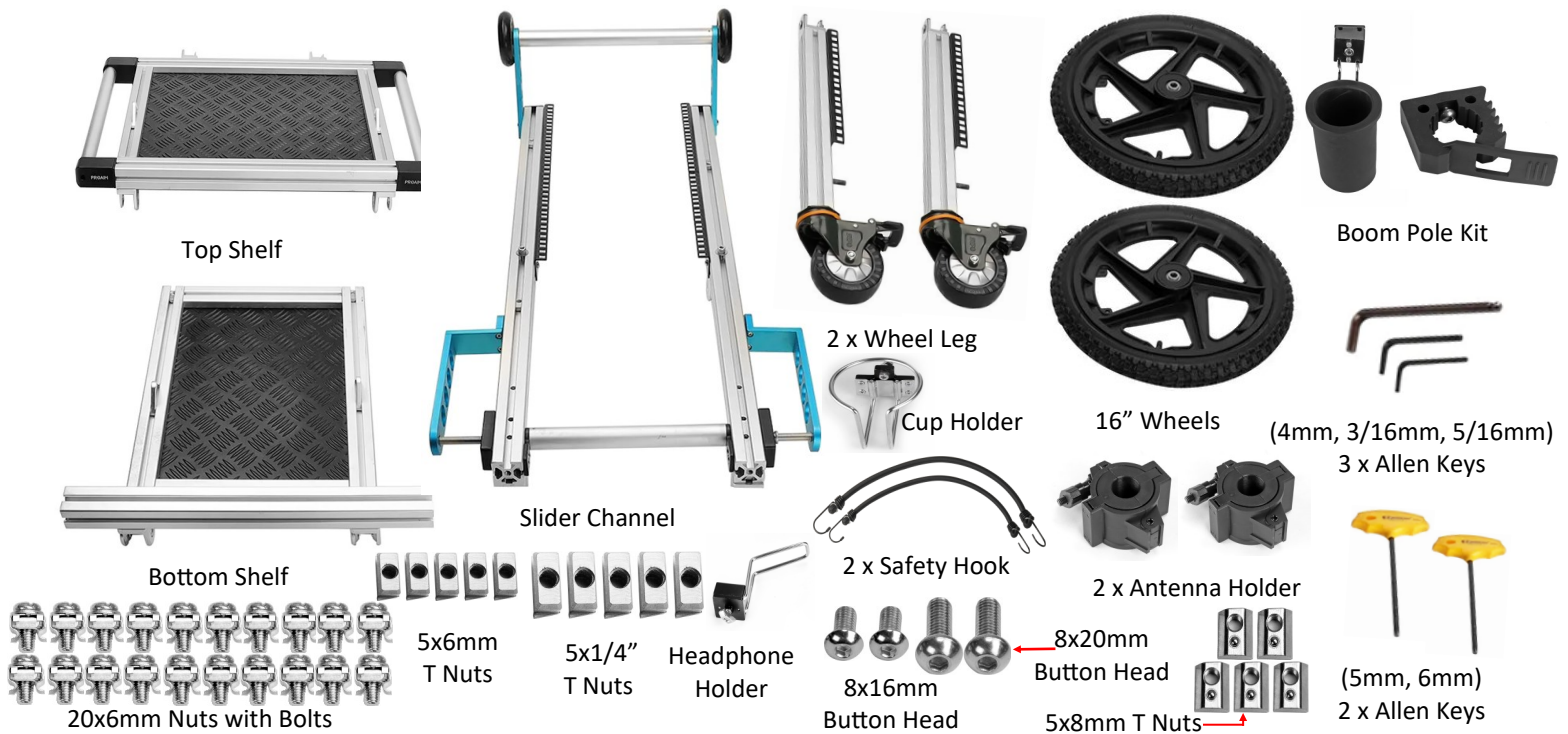


All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



Soundchief V1 Channel Cart Setup

- Loosen the bolts of the Panel Plate using the Allen key.
- After loosening the Panel Plate, slide it in the upward direction.
- Similarly, loosen the bolts inside the lower Panel using the Allen key.
- Slide the Panel Plate upwards from both sides and tighten it in place.

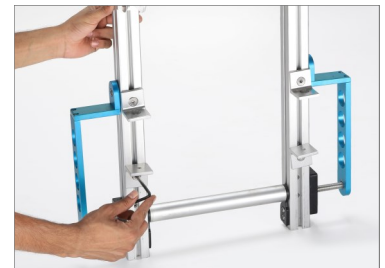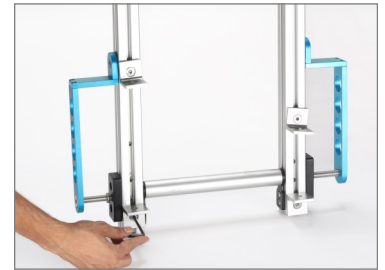

Bottom Shelf Assembly

- Attach the Bottom Shelf and Panel Plate by matching their threads, as shown in the image.
- NOTE:** The Cart is designed in a 2-section Channel version so you can fix the Shelves wherever you want, making it highly customizable.

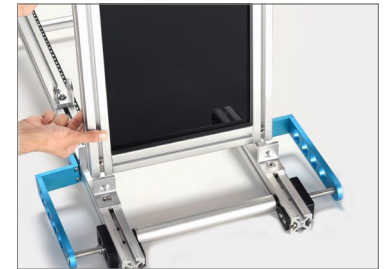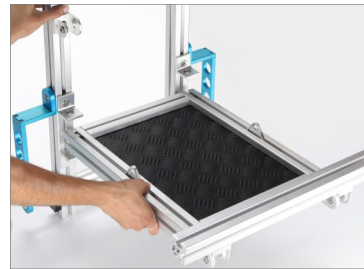

- Now, insert the bolts in the threads.




- After inserting the bolts, tighten them using the Allen key.




- Loosen the bottom bolts of the Panel Plate from both sides and slide the Bottom Shelf downwards.




- After sliding the Bottom Shelf, tighten the bolts using the Allen key.

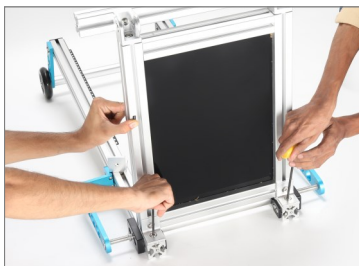


- Now, loosen the bolts present in the Panel Plate of the Slider Channel using the Allen key and slide it downwards.

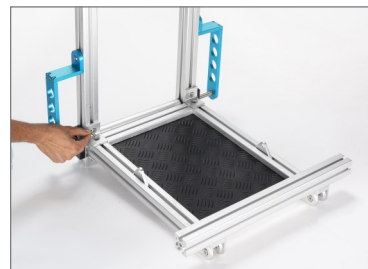

- After sliding the Panel Plate, tighten its bolts using the Allen key.

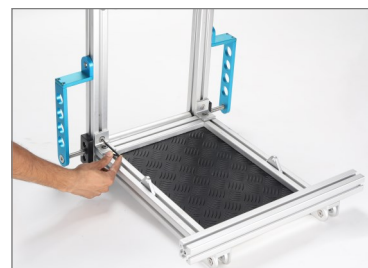

- Remove the center bolts from the Panel Plate of the Slider Channel using the Allen key.


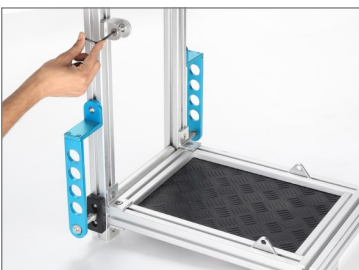


Top Shelf Assembly

- Attach the Top Shelf to the Panel Plate by matching its threads, as shown in the image.



- Now, insert the bolts by matching the threads.

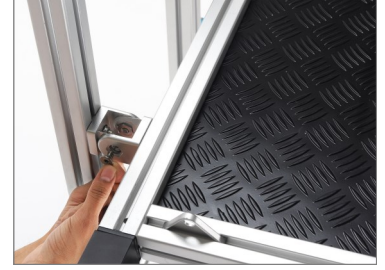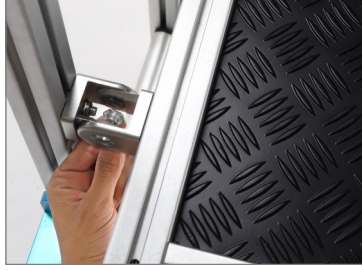


- After inserting the bolts, tighten them using the Allen key.
- The Top Shelf is properly assembled.

NOTE: The Cart is designed in the Channel version; allow Shelves wherever you want. The provided Rack Mount offers you the ease of accessorizing it.



Wheels Leg Assembly

- To assemble the Cart wheels, loosen and remove their bolts.

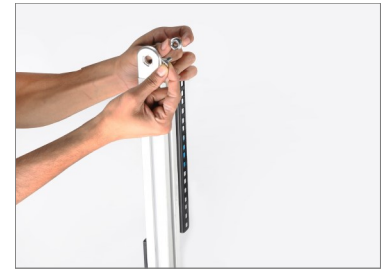

- To properly secure the leg wheels, tighten the screws present at the Bottom Shelf.
- Now, properly align it with the Top Shelf as shown in the image.



- After properly aligning the threads of the leg, insert the bolts in it.



- Tighten the bolts using the Allen key to secure the attachment.
- Follow the same procedure to attach the second leg.




- Loosen the vertically placed black Joints to place it in the horizontal position, as shown in the image.



- After horizontally positioning the Joint, insert the button head in it and tighten it using the Allen key.



- Similarly, tighten the second button head.
- The leg Channels are secured with the black Joints.

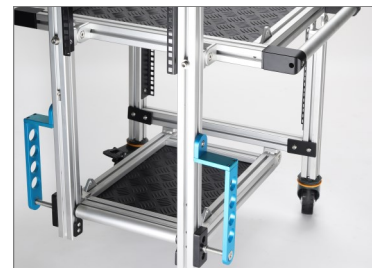

- Now, the wheel leg of the Cart is properly secured.

Feature: Foot brakes of the Cart keep it completely steady, stable, and secure for reliable parking when you are not close to the Cart.



Foot Brake

16" Wheel Assembly

- Loosen and remove the bolt and the washer from the blue bracket using the L-shaped Allen key.



- Matching the holes of the blue bracket with the wheel, insert the bottom most hole into the wheel.



- Insert the bolts and tighten them using the Allen Key.
- Follow the same process on the other side of the Cart.




- The Wheels are assembled, as shown in the image.




Multiple Accessories Assembled

- To mount a Boom Pole to the cart, attach it to the Cart and secure it using the Allen key.

NOTE: We have provided holders for a wide range of universal accessories like a head-phone holder, script holder, mounting points, boom pole holder, c-stand/antenna mast mount, and cup holder.

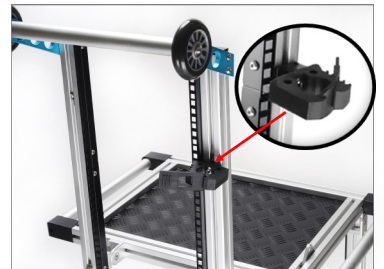

- Securely install the Boom Cup Mount below the already attached Boom Clamp.
- Now, insert the Boom Cup into the Cup Mount.

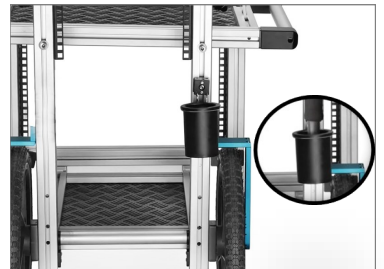

- Loosen the knob of the Antenna holder and remove the bush from inside it.




- Attach the Antenna holder to the Channel of the Cart through screws and then secure it using the Allen key.
- Now, insert the bush in it.



- The image shows the Antenna holder securely attached to the Cart



- Attach the Headphone holder to the Cart and tighten it using the Allen key.

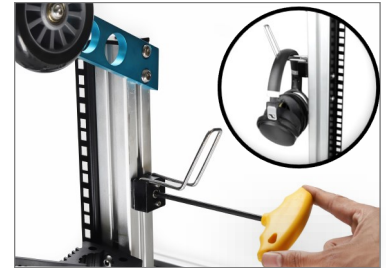

- Now, attach the Cup holder to the Cart using the Allen key, as shown in the image.




- Attach the safety hook to the Top Shelf & Bottom Shelf of the Cart, as shown in the image.



NOTE: With the help of the safety hooks, the luggage does not fall and remains stable even while moving the Cart.

Feature: The Cart can be collapsed to be stored in enclosed spaces, making traveling easy.

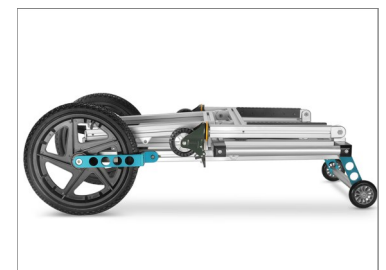

- The Rear Handle can be positioned in any height per the convenience of the operator.

Feature: The Cart can be accessorized with various audio devices, such as amplifiers, mixers, wireless receivers, and signal processors.



Multiple Accessory Holders



**YOUR PROAIM SOUNDCHIEF V1 CHANNEL CART
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.