

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



2 x Backdrop Brackets



iPhone Adapter



2 x Plastic Clips



BS100



1 x 3/16" L-Type Allen key
1 x 4mm T-Type Allen key

INDEX

Sr. No	Particulars	Page No.
1.	4ft Versatile Overhead Camera Setup	4
2.	Telescopic Poles & Pole Stand Assembly	4
3.	Height Adjustment	4-5
4.	Pole Connector Assembly	5
5.	Male & Female Rods Assembly	5
6.	Center Bar Assembly	6
7.	Accessory Clamps Assembly	6-7
8.	Backdrop Brackets Assembly	7-8
9.	Center Bar Positioning	8
10.	Center Bar Height Adjustment	8
11.	Camera Setup	9
12.	iPhone Adapter Assembly	9-10
13.	BS100 Mounting	10
14.	Final Setup	11

4ft Versatile Overhead Camera Setup

Telescopic Poles & Pole Stand Assembly

- Insert the telescopic pole into the pole stand.



- After inserting the pole stand, tighten the knob on the bottom side of the telescopic pole.
- Repeat the same process for inserting the second telescopic pole into the pole stand.



Height Adjustment

- Loosen the knob on the pole stand and adjust the height per your requirement and re-tighten the knob.




- After adjusting the height, use the 3/16" Allen Key to tighten the knob securely.
- Repeat the same process for height adjustment of the second pole.



- To adjust the pole stand, you can loosen or tighten its knobs.



- Adjust the position of the pole stand per your requirement.

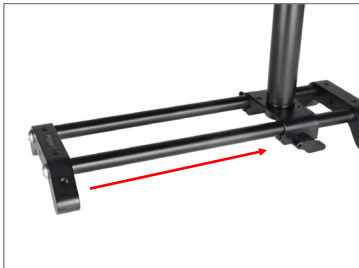

Pole Connector Assembly

- Loosen the bolt of the pole connector using a 4mm T-Type Allen key and mount it on the pole stand.




- After mounting the pole connector, re-tighten the bolt.
- Repeat the same process for the second pole connector.




Male & Female Rods Assembly

- Insert the two 300mm male rods into the 300mm female rods and tighten them securely.

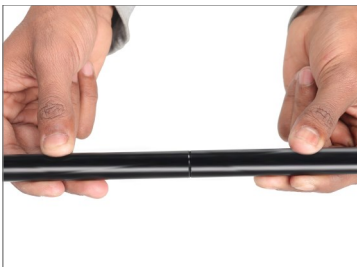

- Repeat the same process for inserting the remaining rods.
- NOTE:** Add or remove the rods per your requirement.

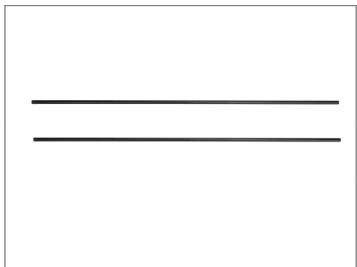

Center Bar Assembly

- Insert both side knobs into the Center Bar.



- Loosen the side knob of the Center Bar and insert the rod.



- After inserting the rod, securely tighten the knob.



- Repeat the same process for inserting the second rod.



Accessory Clamps Assembly


- Loosen the knob of the Accessory Clamp and insert the rods into it.



- After inserting the rods, tighten the knob securely.



- Loosen both knobs of the pole connector and insert both rods with clamp accessory into the pole connector, as shown in the image.

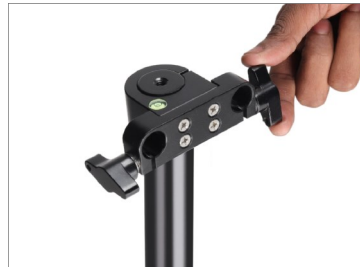

- After inserting the rods, re-tighten the pole connector knobs.
- Repeat the same process for inserting the other end of the rods into the pole connector.



- Insert female caps onto the ends of male rods and tighten them securely.
- Similarly, insert female caps to the other side of the rods.




Backdrop Brackets Assembly

- Remove the top knob from the accessory clamp.



- Insert backdrop brackets into the accessory clamp, ensuring the threads match. Insert and tighten the knob.

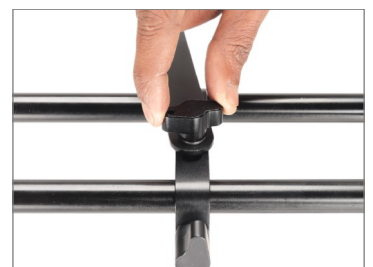

Feature: The knob can be loosened or tightened for adjusting the backdrop brackets.



Center Bar Positioning

- To adjust the position of the Center Bar, loosen its knobs and adjust the Center Bar per your requirement.



Different Positioning of Center Bar




Center Bar Height Adjustment

- To adjust the height of the center bar, loosen its knobs.



- After positioning it per your requirement, re-tighten its knob.

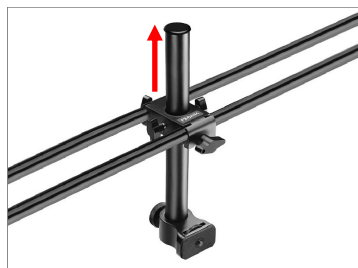

Camera Setup

- Loosen the knob on the camera mounting platform and position it per your requirement.



- Attach the Camera (Not Included) to the camera mounting platform and lock it securely.



- Your Camera is securely mounted.



- Use the two plastic clips to clamp your backdrop to the brackets.

NOTE: The Overhead Camera Platform does not include the backdrop and other Related Accessories.



iPhone Adapter Assembly

- Securely attach the iPhone Adapter to the camera mounting platform on the center bar.



- Slide the iPhone Adapter and mount your iPhone (**Not Included**) on it.




BS100 Mounting

- Attach the BS100 to the Camera Mount on the Center Bar.


NOTE: The Centre Bar, with an adjustable Camera Mount featuring a 1/4"-20 knob, is compatible with most Cameras. We include a conversion adapter for 3/8"-16 mounting for added flexibility, offering wide compatibility.



Height Adjustable Telescopic Pole

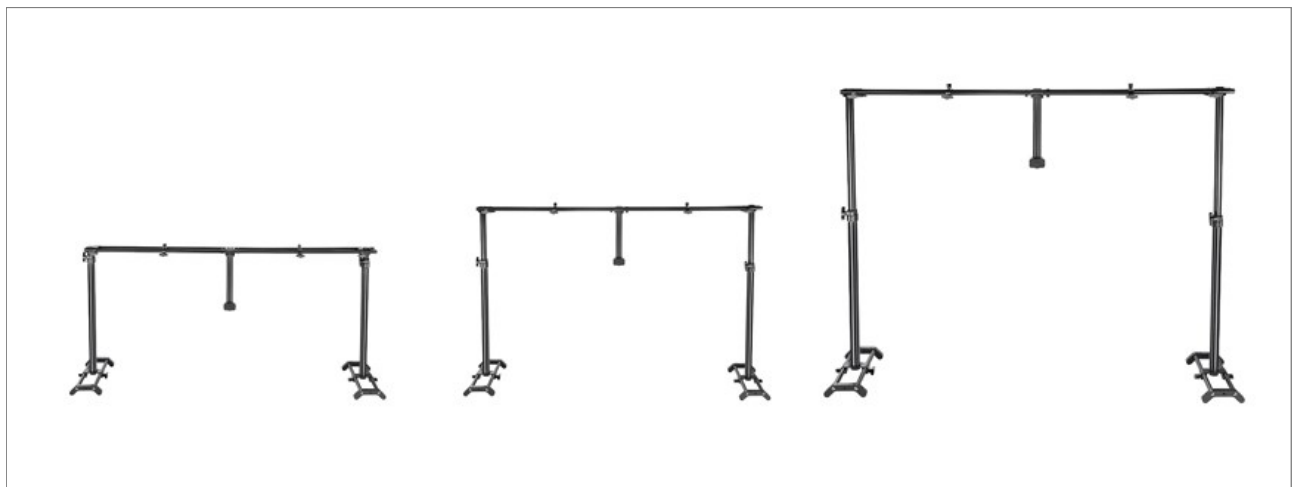

YOUR PROAIM 4FT VERSATILE OVERHEAD CAMERA PLATFORM SYSTEM ALL DRESSED UP AND READY TO GO!

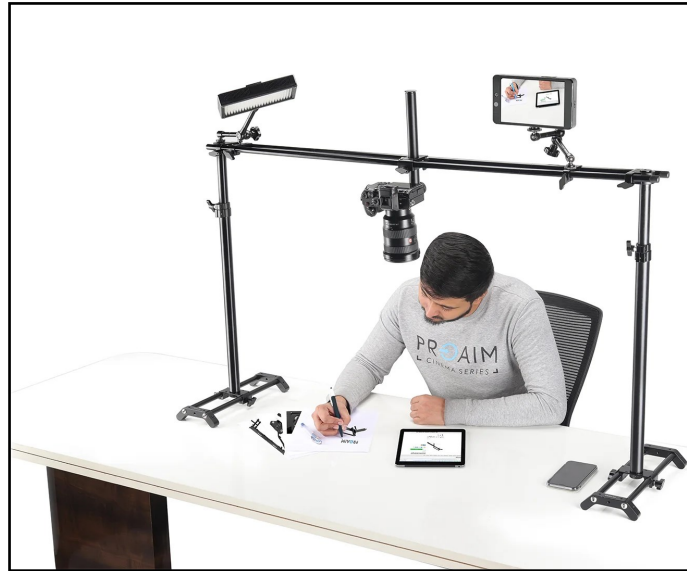

(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.