

PROAIM Widebase Autopan 2-Axis Camera Slider (SL-161)

Assembly Manual



Available Sizes: 2ft (SL-161-02), 3ft (SL-161-00), 4ft (SL-161-01)

■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Proaim Widebase Autopan 2-Axis Camera Slider



Bag Packing

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Widebase Autopan Camera Slider Setup

Assembling Your widebase Autopan 2-Axis Camera Slider

- Level the slider feet according to your surface. Next, tighten the carriage lock to keep the camera plate stable in one place.



- Screw-in the fluid head (Not Included) onto the camera mounting plate & mount your camera (Not Included) as shown in the image.



NOTE: For accurate movements, set both knobs of the slider to the angle of your camera.

FOR STRAIGHT MOVEMENTS




FOR PARALLEX MOVEMENTS



PANORAMIC MOVEMENTS



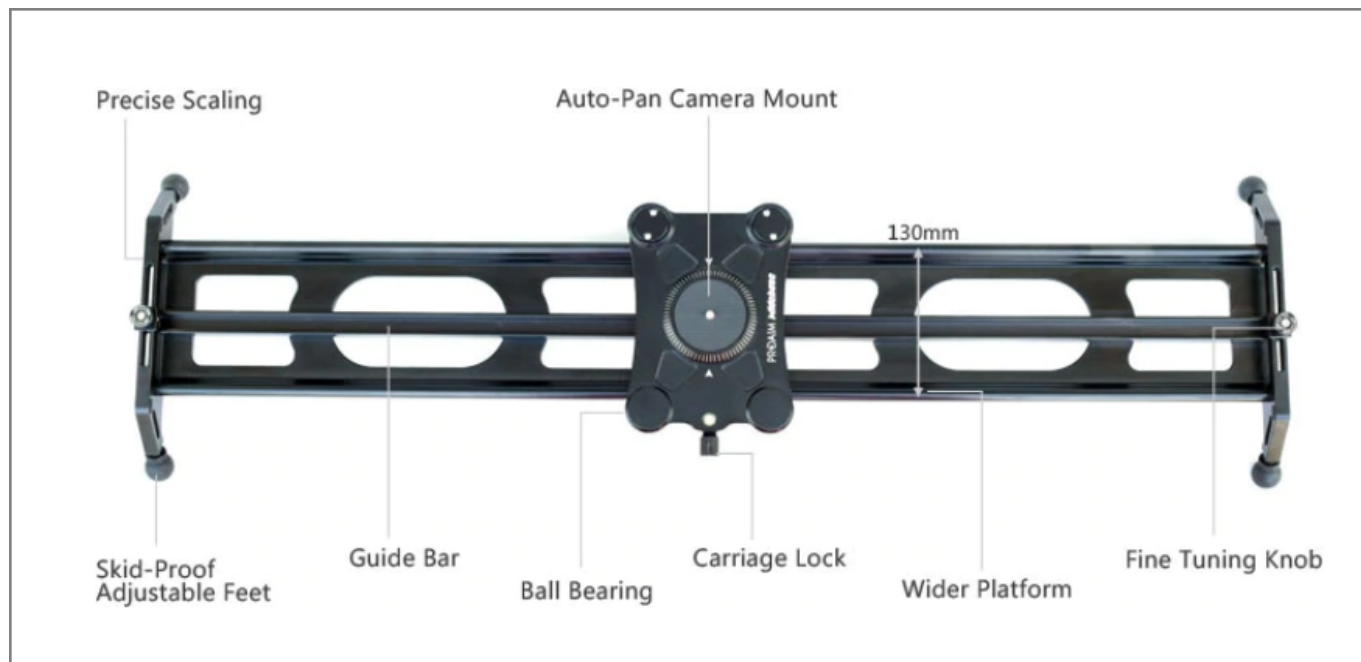

YOUR PROAIM WIDEBASE AUTOPAN 2-AXIS SLIDER ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.