

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Bottom Shelf



Top Shelf

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



Soundchief Cart Setup

9" Dovetail Wheels Assembly

- Unlock the 9" dovetail wheel's lever and insert the wheel by sliding into the cart bottom base and tighten it properly.
- Repeat the same process for the second 9" dovetail wheel.



Feature: The push and pull wheel brake system enables you to securely halt the movement of the wheels.



20" Pneumatic Wheels Assembly

- Insert the bolt into the center of the 20" wheel and then insert the bush from the opposite side, as shown in the image.



- Attach this wheel to the side of the cart and secure it by tightening the bolt using a spanner.
- Repeat the same process for the second 20" Pneumatic wheel.



Top Shelf Assembly

- Assemble the top shelf onto the bottom shelf ensuring a proper fit.
- Insert the shelf knobs from both sides and tighten them securely.

NOTE: Top shelf can be mounted onto the bottom shelf from both sides.



- Insert the handle into the top or bottom part per your requirement.




Speed Rail Clamps & Crossbar Assembly

- Loosen the knob of the Speed Rail Clamp and remove both the knob and the washer.



- Slide the Speed Rail Clamp into the crossbar and insert both the knob and washer.

NOTE: Ensure that you slide the Speed Rail Clamp from the flat side.

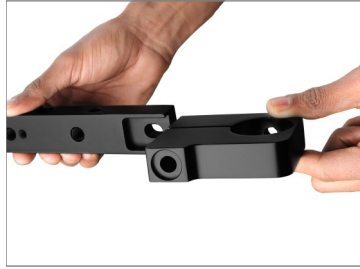

- After inserting the knob, securely tighten it.



- Repeat the same process to insert the Speed Rail Clamp on the other side of the crossbar.



- Attach the crossbar to the Cart by matching the threads.

- Now, insert the knob and tighten it.

NOTE: Attach the curved side of the Speed Rail Clamp to the cart; otherwise, the folding shelves will not close properly.



- Repeat the same process to insert the clamp on the other side.

NOTE: The Cart features two vertical poles at the back for holding a crossbar to mount multiple monitors.



- Extend the collapsible side wings by pulling them up.



- After opening the shelf, be sure to secure it by locking it.



- Attach the single speed rail clamp to the cart by aligning their threads, then insert the speed rail knob and tighten it securely.
- Insert the speed rail through the speed rail clamp holes and tighten it properly using the speed rail clamp knob.



Handle Assembly

- Open the rail clamp by turning the handle to the left, then connect it to the speed rail.
- Secure it by moving the handle towards the right. Repeat the same process for the other side.



NOTE: Adjust the handle position according to your requirement.





**YOUR PROAIM SOUNDCHIEF CART VERTICAL WORKSTATION
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.