

Cube PRO

Pairing

1. Search "**Cube Tracker**" on the Apple App Store or Google Play store.
Download and Install the Cube Tracker app on your smartphone or tablet.
2. Open the app and click the plus (+) sign to add a Cube.
3. Choose your Cube model & follow the on screen instructions to complete the setup.

Note: To add additional Cubes use the plus (+) button
on the Cube Tracker app home screen.

Find a Cube

Lost an item? That's what Cube is here for! Here's how to ring your lost item.

1. Open the Cube app, a list of connected Cubes will display. Choose the one you'd like to locate.

If your Cube is in range a "**Find**" button will display.

If your Cube is out of range you can choose to have the app notify you when your lost Cube is located – just press "**Notify me when located**" (This feature requires you to setup a username and password on the app. See Page 3 for more info.)

2. Select the Cube you want to locate and press the "**Find**" button to ring your lost Cube.

Find your phone

Lost your phone? Cube can help! Here's how to ring your lost phone using a Cube.

1. Double press the button on your Cube to make your phone ring. Even on silent!

If your Cube makes a quick beeping sound wait a couple minutes and try again. If your phone is out of bluetooth range your Cube won't be able to ring it. Try moving throughout the area you think your phone is located and double press the button on your Cube again.

Selfie / Remote Shutter Function

Select a Cube from the list on the Cube app homescreen. Press the **camera icon** at the top to open up the camera, then press the button on your Cube to take selfie.

Note: The following functions require you to set up a username and password on the app. **Crowd Find, Locate Cube with Another Phone, & Locate Cube Online.** You can choose “Continue as Guest” when setting up your app and a login will not be required but the below functions will not work. As always, all features of the Cube are free and we do not share your information with anyone.

Crowd Find

Crowd find allows the community to be your search party when a Cube is out of range. Anyone with the app who comes within proximity to your lost Cube will trigger an update on your Cubes last known location.

1. Mark a Cube as lost by clicking on your lost Cube in the app and pressing “**Notify me when located**”
2. Wait for a notification to pop up in your phones notification center and in the Cube Tracker app.

Locate Cube or Phone Online

1. Sign into your Cube account at: **www.cubetracker.com** to locate your Cube or Phone on a computer.

Locate Cube with another phone

Sign into your Cube account from as many phones as you like to locate your Cube, or see its last known location.

If your Cube is connected to a different phone your app will notify you what phone and give the current location.

You will have to use the connected phone to ring the Cube. Otherwise turn off Bluetooth on the connected phone and Cube will connect with the next closest phone that is signed into the account and has Bluetooth turned on. Double pressing the Cube button will only ring the phone connected to the Cube.

Cube Settings

You can adjust the settings for each Cube separately by selecting a Cube from the list then pressing the **gear icon** in the top right side of the screen to open the settings box.

Here you can personalize the settings such as:

- Name or picture of the Cube
- Phone or Cube notification of connection or disconnection
- Phone alarm settings
- Quiet times and zones
- Ringtones

Specifications

Dimensions:	L42mm x W42mm x H6.5mm
Weight:	21g
Wireless:	Bluetooth 4.0 (Bluetooth Low Energy)
Range:	0 - 200 Feet (Depending on the environment, its most effective at 30 ft indoors.)
Buzzer:	88dB
Battery:	CR2025 Button battery
Working Time:	Up to 12 months
Temperature Range:	-4 to 150 Fahrenheit
Water-Proof Rating:	IP67 (Up to 1 meter for up to 30 minutes)

Supported Phones

Supported Apple devices using iOS 7 or higher

iPhone 4S, 5, 5C, 5S, 6, 6P, 6S, 6SP, SE, 7, 7P, 8, 8P, X or later

iPad 3rd Gen, 4th Gen, Air or later

iPad Mini or later

iPod Touch5 or later

Supported Phones

Supported Android Devices using 4.4 or higher

Samsung Galaxy S4, 5, 6, 6E, 7, 7E, 8, 9

Samsung Note 3, 4, 5, 8

Nexus 4, 5, 5x, 6, 6p, Pixel, Pixel2

Moto Droid Turbo, Turbo2, G4

HTC One M8, M9, U1

LG G3, G4, G5, G6

If your device is not on this list but uses Android 4.4 and Bluetooth 4.0, there is a good chance Cube key finder will work fine, but we are not able to offer the same level of support in troubleshooting scenarios


About Bluetooth Low Energy

Cube key finders use Bluetooth Low Energy (BLE) technology to help you locate your items. While Bluetooth technology is a wireless technology, there are significant differences between Bluetooth, Wi-Fi, and GPS technology. The Bluetooth range of Cube key finder is up to 150 feet. Bluetooth is most effective at the 30 foot range, depending on the environment.

Replacing The Battery

If you find your Cube battery is low replace the battery by doing the following.

1. Turn your cube over and open the rear outer cover using a small flat screwdriver. Pry apart at the key chain loop. See figure below.
2. Replace the CR2025 battery. Please mind the polarity of battery.
3. Close the outer shell. That's it!

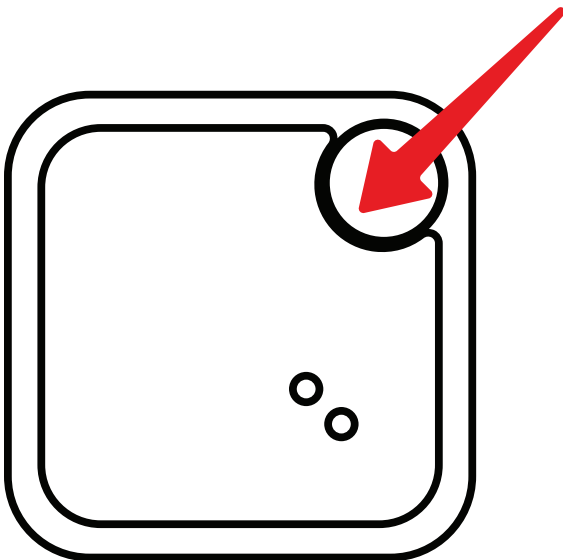

Note: Find the battery level of your Cube by choosing a Cube from the list and clicking the gear icon.

Safety & Instructions

1. The CUBE key finder can not be used without installing and running the CUBE Tracker App on your phone.
2. Keep it dry and away from moisture and corrosive material.
3. Do not disassemble this product or attempt to repair or modify it in any way.
4. CHOKING HAZARD-Cubes are not toys, please keep out of reach of young children.
5. All products have gone through a thorough quality assurance inspection.
6. Always return used batteries to your local battery-recycling center.

Cube Hardware Limited Warranty

Cube warrants that your Cube hardware product (“the Product”) will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase to the original retail purchaser (“the Warranty Period”). If a defect in the Product arises within the Warranty Period, Cube will, at its sole option and subject to applicable laws: (a) repair or replace it with a new or refurbished product or component; or (b) refund the original purchase price upon return of the defective Product. This Warranty does not apply to Products you purchase from unauthorized resellers, or where the instructions for use and activation of the Product are not complied with or where the Product is damaged as a result of abuse, accident modification or other causes beyond our reasonable control.

ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE PRODUCTS ARE LIMITED TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY. ALL OTHER EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF NON-INFRINGEMENT, ARE DISCLAIMED. Some jurisdictions do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary by jurisdiction.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL CUBE BE LIABLE FOR ANY LOST DATA OR REVENUE, OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES, HOWEVER CAUSED REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF OR RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, EVEN IF CUBE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL CUBE'S LIABILITY EXCEED THE AMOUNT PAID BY YOU FOR THE PRODUCT

The foregoing limitations will apply even if any warranty or remedy provided under this Agreement fails of its essential purpose. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Cube Refund Policy

We have worked very hard to create a product you will love and we believe you will love your CUBE product. However, we realize the Product you receive from CUBE may not be exactly what you expected. Should this rare occurrence take place, the original retail purchaser of the Product may return all Cubes purchased in the original transaction, in their original condition, with the original receipt and packaging, within 30 days of the date of purchase to the original retail purchaser and Cube will exchange it or provide a full refund of the original purchase price. Please note that this policy applies only to Products you purchase directly from Cube or an authorized Cube supplier. This is in addition to your legal rights and your rights under the Cube hardware one (1) year Limited Warranty referred to above.

Cube Tracker

www.CubeTracker.com

Info@CubeTracker.com