

**SAVE THESE
INSTRUCTIONS**

PONDMASTER®

MESH PUMP BAG

CARE AND OPERATING INSTRUCTIONS

18" x 24" ITEM # 12315

24" x 26" ITEM # 12320

WARNING! PONDS ARE DANGEROUS TO SMALL CHILDREN!
NEVER LEAVE CHILDREN UNSUPERVISED NEAR A POND.

Protect Your Pumps

Use Danner Pump Bags to prevent damage to all size pumps. The Pump Bag acts as a large prefilter to keep large debris and fish from pump intake.

- 1) Attach hoses to your pump. Place the pump into Pump Bag.
- 2) Use cable ties to crimp the top of the bag closed by weaving through mesh openings as needed.
- 3) Holding the pump by the discharge hose, place the assembly down into the pond or skimmer. Never use the power cord to lift or lower the pump.
- 4) If the flow decreases, the pump bag needs cleaning. Remove the bag assembly and rinse clean using a garden hose.

WARNING: ALWAYS UNPLUG PUMP BEFORE REMOVING PUMP BAG.



ELECTRICAL PRECAUTIONS

Always use a properly grounded outlet. Do not immerse the plug in water. DO NOT REACH INTO THE WATER TO REMOVE THE PLUG. TURN OFF CIRCUIT FIRST. A "drip loop" in the cords should be used. A "drip loop" is a loop in the cord below the level of the receptacle or plug that prevents water from traveling along the cord. The national Electric Code requires that a ground fault interrupter circuit (GFCI) be installed in every branch circuit supplying the fountain or pond equipment. Your dealer can supply GFCI units. NEVER REMOVE GROUND PIN FROM PLUG.

WARNING: FOR YOUR PROTECTION, ALWAYS UNPLUG THE UNIT FROM ITS POWER SOURCE BEFORE INSTALLING OR SERVICING. DO NOT REACH, REMOVE OR DISASSEMBLE BEFORE YOU DISCONNECT POWER.