



NAM6700r

AV Media Receiver

User Manual

Nakamichicaraudio.com

Nakamichi.Global

Nakamichi.caraudio



CONTENTS

Introduction of Touch Key Functions -----	1 EN
Functions and Applications -----	2 EN
Safety Instructions -----	2 EN
Main Menu -----	2 EN
Radio -----	3 EN
Music -----	4 EN
Video -----	5 EN
Bluetooth -----	5 EN
Bluetooth -----	6 EN
Input -----	7 EN
Navigation -----	7 EN
Setting up -----	8 EN
Setting up-----	9 EN
Setting up -----	10EN
Setting up -----	11EN
Wire Link-----	12EN
Technical Specification-----	13EN
Common Troubleshooting Guidelines-----	14EN
Precautions -----	15EN

INTRODUCTION OF TOUCH KEY FUNCTIONS

Accessory List

- 1、Power Cable----- 1 PCS
- 2、20P-RCA Wire----- 1 PCS
- 3、USB Wire ----- 2 PCS
- 4、Rear View Interface Wire ----- 1 PCS
- 5、GPS Antenna----- 1 PCS
- 6、User Manual ----- 1 pcs
- 7、Loading Bracket----- 1 PCS
- 8、Loading Screw-----12 PCS



- 1、Knob Key : Rotating left and right reduces and increases volume respectively ;
Short press: silence; Long press: shutdown.
- 2、Home Page Menu : Press to enter the main menu.
- 3、Return Key: Press to return to the previous page.

FUNCTIONS AND APPLICATIONS

Safety Instructions

1. Please read the instructions before operating the unit.
Damage caused by non-compliance with the instructions will not be covered under warranty.
2. In order for safe driving and to avoid violating any traffic regulations, please do not watch any videos and do not operate the unit while driving.
3. In order to avoid short circuiting the unit, please do not expose the unit to rain or any other source of water.
4. In order to avoid short circuiting the unit, please do not expose the unit to any bare metal during installation.
5. Do not attempt to dismantle the unit for maintenance, all service and maintenance should be performed by an authorized service centre or technician.
6. When the engine is turned off, avoid using the unit for an extended period of time as this might drain the car's battery.
7. Do not insert anything into the vent and other openings of the equipment.
8. Wipe the screen carefully! Do not use sharp objects to push against the screen.

Main Menu

The first boot defaults to the main menu, as shown in the following figure;





The functions are as follows:



: Click to enter the Bluetooth interface

FUNCTIONS AND APPLICATIONS

-  : Click to enter the music playing interface
-  : Click to enter the video playback interface
-  : Click to enter the mobile Internet interface
-  : Click to enter the radio interface
-  : Click to enter the navigation interface
-  : Click to enter the settings interface
-  : Click Close Screen, and click Lighting Screen again
-  : Click to enter the application interface, as follows:

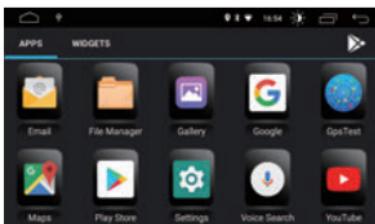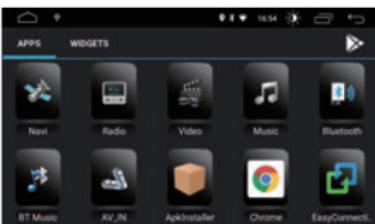

Radio

Touch the radio in the main menu to enter the radio interface

Touch the  icon to return to the main menu

Touch the  icon, move up

one frequency point

Touch the  icon, move down

one frequency point



FUNCTIONS AND APPLICATIONS

Touch the  icon to search automatically and save the strongest signal station in the list.

Touch the  icon, switch bands between FM1/FM2/FM3/AM1/AM2.

Touch the  icon, you can turn on/off the ST function.

Touch the  icon, you can open the keyboard input frequency point.

Touch the  icon to enter the sound settings.

Touch the  icon to turn off the radio and go back to the main interface.

Music

Touch the music from the main menu and enter the music playing interface, instructions as follows:



 : Return to the main menu.

 : Switch between single loop and all loop playback.

 : Enter the sound settings interface.

 : Turn on or off random playback

 : You can add your favorite songs to the collection list.

 : Return to the previous directory.

 : Close the music player and return to the home page.

 : Play the previous song.

 : Pause playback and click again to continue playing.

 : Play the next song.

 : Enter the music playlist.

FUNCTIONS AND APPLICATIONS

VIDEO

Click "Video" to enter the video playback interface




-  : Click to switch screen size
-  : Click to play a single song or play it all over again.
-  : Click to play the previous video.
-  : After clicking, pause playback and click again to continue playing.
-  : Play the next video.
-  : Click to add your favorite video to the playlist.
-  : Click to enter the playlist.

Bluetooth

This system supports Bluetooth connection of mobile phone. After connecting Bluetooth, you can make calls/answer calls/access contact list/music playback and other supported functions.

Bluetooth Connection Interface


Touch the icon to enter the Bluetooth connection interface.

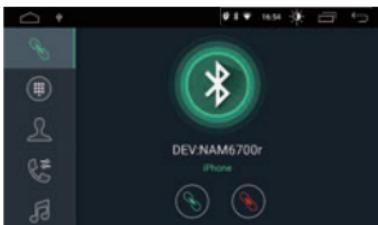

FUNCTIONS AND APPLICATIONS


Call

In this interface, calls can be made or answered.

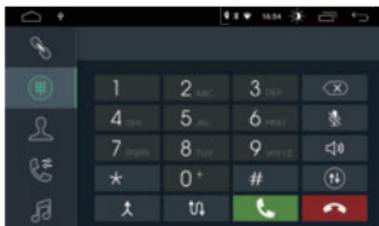

Call Records

This interface allows you to view call records.

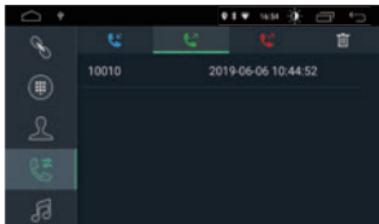

EasyConnection

Touch "EasyConnection" in the main menu to access to the mobile phone connection interface, you can project the mobile phone picture to the local machine.

Phone Book

The phone book can be viewed at this interface.



Bluetooth Music

Stream music from your device to the unit.




FUNCTIONS AND APPLICATIONS

INPUT

Insert the video input interface into the video input, and the audio input interface into the audio input.

In the application menu, touch the "image input" icon to enter the input interface.

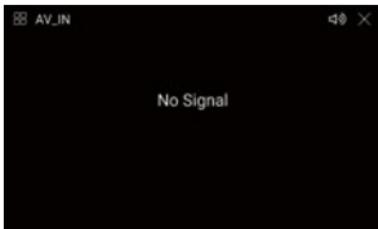

Navigation

Before using the navigation function, you need to install the navigation application APK. After installing the APK a corresponding icon will be created on the application desktop. Click on it to launch the corresponding navigation application. Users can also enter "Locomotive Settings - > Navigation Settings - > Navigation Program Selection" to access functions associated with the navigation application. After correct association, the navigation application can be activated by directly clicking on the "navigation" icon.



FUNCTIONS AND APPLICATIONS


Set up

Click on the "Settings" icon on the desktop to enter the Settings page. On this page, you can set relevant parameters according to your personal preferences.



Network and Internet

Find "Network and Internet" in the settings interface and click into the WIFI item to confirm that the WIFI switch is on. In the WIFI network list, select the network you want to link to, enter the password, click on the link, and complete the WIFI link.

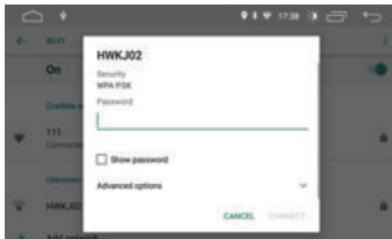

Locomotive Setting

Find "Locomotive Settings" in the Settings Interface and click to enter the Locomotive Settings Interface.



FUNCTIONS AND APPLICATIONS

Universal Settings

Standby time: Standby time can be set according to your own preference.

Auxiliary Contact: The suspension ball can be opened or closed. There are seven common function keys on the suspension ball.


Reversing Volume Suppression: You can choose "no, weak, medium and strong" settings.

Restore factory settings: After clicking, the system parameters can be restored to the default value.



Display Settings

Screen adjustment: Touch icon into display settings interface to change display settings.

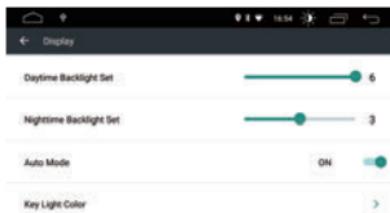

Volume Setting

Volume setting: After entering, the default volume of each mode can be adjusted according to your preference.



FUNCTIONS AND APPLICATIONS

Sound Effect Setting

Touch the "Sound Settings" icon to enter the settings interface and adjust the sound settings.

Smart Bass: You can turn on or off the Intelligent Bass with this function.

Balance : The speaker position can be set by clicking on the entry.

Delay : Click to enter and set the best sound location according to the needs.

Equalizer: Click to enter and set up different sound effects mode, there are "original sound, pop, rock, jazz, classical, user" mode to choose from.



Loudness : You can turn on or off the loudness when you click on it.

Filter : The HPF and LPF can be turned on or off by clicking here.

Driving Auxiliary Settings

Click to enter the Driving Assistant Setting Interface, where you can switch on and off the driving impact, reverse warning line, and front-end camera.



FUNCTIONS AND APPLICATIONS

System

Click "System" to enter the system interface.




Language and input settings: local menu language can be set;

Time and date: The current time zone can be set, or the time zone can be set automatically.


Bluetooth Settings

Click to enter the Bluetooth settings interface to turn on or turn off the automatic connection and answering.

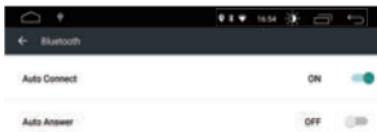

Fast Setting


Touch the "SWC" icon to go into the SWC settings interface

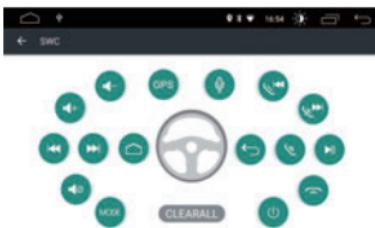

Click on the "CLEARALL" icon to start setting.

Click on the function icon corresponding to the "Quick Settings" interface, and the icon will flicker. Press the button on the SWC panel for a long time. When the corresponding function icon stops flickering, loosen your finger. This indicates that the setup is successful.

WIRE LINK

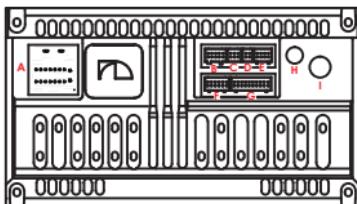

- A — Power Supply
- B — Rear View
- C — 6P-USB
- D — 4P-USB
- E — NA
- F — NA
- G — Extension
- H — GPS Antenna socket
- I — Radio antenna socket

	Label	Color	Function
A	GND	Black	Ground wire
	B+	Yellow	Battery wire
	ACC	Red	Ignition wire
	ILL	Orange	Lamp control wire
	Reverse	Brown	Reverse wire
	SWC1	White	Steering wheel control wire 1
	SWC2	Green	Steering wheel control wire 2
	ANT	Blue	Automatic antenna
	FR-FR-	Gray/Black	Front right speaker-
	FR+FR+	Gray	Front right speaker+
B	RL-RL+	Green/Black	Rear left speaker -
	FL-FL+	Green	Rear left speaker+
	FL-FL+	White / Black	Front left speaker-
	RR-RR+	White	Front left speaker+
G	RR-RR+	Purple/black	Rear right speaker-
	RR+RR+	Purple	Rear right speaker+
	Reverse camera input	Yellow	Reverse camera input
	Brake control	Pink	Brake control
G	WIFI ANT	Blue/White	WIFI antenna
	BT ANT	Blue/White	Bluetooth antenna
	Video in	Yellow	Video input
	Audio in-L	White	Left audio input
	Audio in-R	Red	Right audio input
	Video Out-1	Yellow	Video output 1
	Video Out-2	Yellow	Video output 2
	Audio Out-L	White	Left audio output
	Audio Out-R	Red	Right audio output
	Sub-woofer	Brown	Subwoofer output
	MIC	Black	Microphone interface
	Amp.Control	Orange	Power amplifier control wire

TECHNICAL SPECIFICATIONS

Routine

System: Android 9.0
Memory: 16G
Voltage : 14.4 (10.5-16V)
Size (WxHxD):
178x100x60MM
Working Temperature :
-10°C-+70 °C
Storage Temperature :
-20°C-+80 °C
Net Weight : 0.5Kg

TFT Display Options

Display Size : 7 “
Display Resolution:
1024x600 RGB
Contrast : 500

Radio Options

Frequency Modulation
Range : 87.5-108.0MHZ
Amplitude Modulation
Range : 522-1620KHZ

Supporting Video Format

H264 /WMV /DIVX /MKV /FLV

Audio Format Support

MP3/WMA/FLAC

USB Interface Options

Post-USB: Read (chargeable
5V/1A)

Video Options

External Video Input System:
NTSC/PAL/SECAM
External Video Input :
1VP-P/75Ω

Audio Options

Maximum Power : 4x50W
Pre-output(V):1V/10KΩ
Pre-output Impedance : ≤600Ω
Speaker Impedance : 4-8Ω

Bluetooth Options

Communication System:
BT4.0 + EDR
Output: Bluetooth Standard
Power Level 2
Maximum Communication
Range: About 5 meters
Band: 2.4G




COMMON TROUBLESHOOTING GUIDELINES

Fault	Reason	Resolvent
Can't boot	Power supply fuse burned out	Replace with the same type of fuse
	Other factors causing microprocessors to work abnormally	Reboot by pressing the reset hole on the panel with the pointed object point
When the ignition switch is turned off, all the information or setting is lost.	Replacement of batteries or fuses	Reset the information and save it
The radio is ineffective	Weak radio signal	Move the car to another location and search again
	Failure to connect radio antennas leads to weak signals	Connect the antenna and retrieve the station
No image	Other factors cause microprocessors to work abnormally	Reboot by pressing the reset hole on the panel with the point of a sharp object
Silent output	Low voice	Increase the volume
	Output line incorrectly connected	Check Output Line Connection
GPS can't locate	GPS antenna not inserted	Insert GPS antenna
	Possibly in the GPS signal shielding area	Please drive the car a distance and move to the signal area.

PRECAUTIONS

Regarding power supply and speaker connections:

Do not connect the speaker wire connector to the battery, otherwise the machine will be seriously damaged.
Check the speaker on your car before connecting the speaker wire connector to the speaker voice coil.

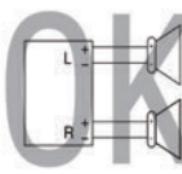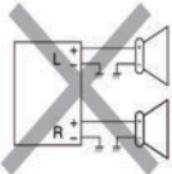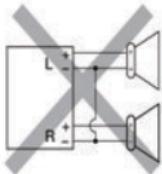



NAM6700r

AV媒體接收器

用戶手冊

Nakamichicaraudio.com

Nakamichi.Global Nakamichi.caraudio



目錄

觸摸按鍵功能介紹	1 CN
功能應用	2 CN
安全說明	2 CN
主菜單	2 CN
收音機	3 CN
音樂	4 CN
影片	5 CN
藍牙	5 CN
藍牙	6 CN
設置	6 CN
影響輸入	7 CN
導航	7 CN
設定	8 CN
設定	9CN
設定	10CN
線材鏈接	11CN
技術參數	12CN
常見故障排除指南	13CN
注意事项	14CN

觸摸按鍵功能介紹

附件清單

- 1、電源線-----1条
- 2、20P-RCA線-----1条
- 3、USB線-----2条
- 4、倒車後視接口線-----1条
- 5、GPS天線-----1条
- 6、用戶手冊-----1本
- 7、裝車支架-----1套
- 8、裝車螺絲-----12顆



- 1、旋鈕鍵：左右旋轉可減小和加大音量；
短按：靜音；長按：關機
- 2、主頁菜單：按下進入主菜單
- 3、返回鍵：按下返回前一頁面

功能應用

安全說明

- 1、使用本機前請閱讀說明書，不遵守說明書所造成的損壞將不享受保修。
- 2、為了安全駕駛並避免違反交通規則，請勿在駕駛時觀看程序並操作本機。
- 3、為避免短路，請勿將設備暴露在雨中。
- 4、為避免短路，請勿將設備或任何遺留的金屬物品放入。
- 5、請勿自行打開機器進行維修，請到專業維修站進行維修。
- 6、發動機關閉時，請勿長時間使用汽車音響，否則電池可能會耗盡。
- 7、請勿在設備的通風口和其他開口處插入任何物品。
- 8、小心擦拭屏幕！不用使用尖銳的物體推，擦，劃屏幕。

主菜单

第一次開機默認進入主菜單，如下圖所示



功能如下：

 : 點擊進入藍牙界面

 : 點擊進入音樂播放界面

 : 點擊進入視頻播放界面

功能應用

 : 點擊進入手机互联界面

 : 點擊進入收音机界面

 : 點擊进入导航界面

 : 點擊進入设置界面

 : 点击关闭屏幕，再次点击点亮屏幕

 : 點擊進入应用界面,如下图:



收音機

觸摸主菜單中的“收音機”進入收音機界面。

觸摸  圖標，可返回主菜單。

觸摸  圖標，向上調一個頻點。

觸摸  圖標，向下調一個頻點。



功能應用

觸摸【】圖標，可自動搜索並在列表中保存最強站台。

觸摸【】圖標，可切換FM1/FM2/FM3/AM1/AM2.

觸摸【】可以打開/關閉ST功能。

觸摸【】可以打開鍵盤輸入頻點。

觸摸【】進入音效設置。

觸摸【】關閉收音機並退回到主界面。

音樂

觸摸主菜單中的音樂進入音樂播放界面,如下圖:

觸摸【】圖標，可返回主菜單。

觸摸【】圖標，可單曲循環与全部循環播放切換。.

觸摸【】图标，可打開或關閉隨機播放。

觸摸【】進入音效設置界面。

觸摸【】可以添加您喜歡的歌曲到收藏列表。

觸摸【】返回上一級目錄。


觸摸【】关闭音乐播放器并退回到主页。

觸摸【】播放上一首音樂。

觸摸【】暫停播放，再次点击继续播放。

觸摸【】播放下一首音樂。

觸摸【】进入音乐播放列表。

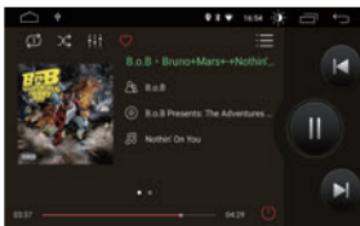

功能應用

影片

觸摸 “影片” 進入視頻播放界面
觸摸 【】 圖標，可切換畫面大小
觸摸 【】 圖標，可以單曲播放
或全部重複播放。

觸摸 【】 圖標，播放上一個視頻。

觸摸 【】 圖標，點擊後暫停播放，再次點擊繼續播放。

觸摸 【】 圖標，播放下一個視頻。

觸摸 【】 圖標，添加您喜歡的視頻到播放列表。

觸摸 【】 圖標，進入播放列表。




藍牙

本系統支持手機藍牙連接，連接藍牙後，可實現撥號/接聽/
電話簿/音樂播放等 功能。觸摸藍牙圖標進入BT界面。

藍牙連接界面

觸摸圖標後進入藍牙連接界面

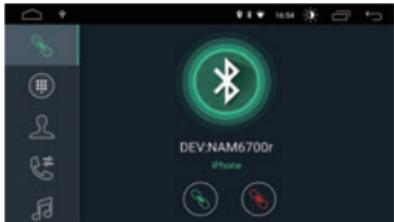




功能應用


撥打電話

在此界面可通過本機撥號或接聽來電

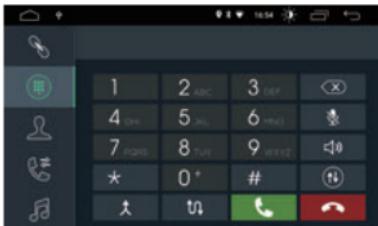


電話簿

在此界面可查看電話簿

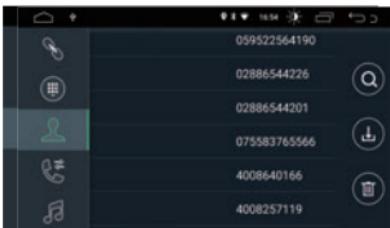


通話記錄

在此界面可查看通話記錄

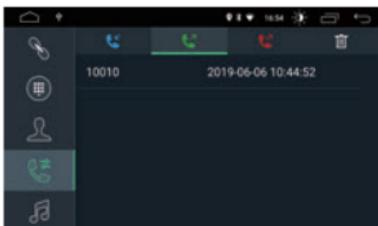

藍牙音樂

點擊可播放手機音樂

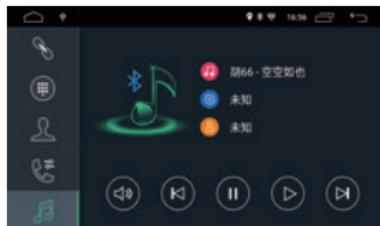

億聯手機互聯

觸摸主菜單中的“億連手機互聯”
進入手機連接界面，可將手機畫面
投射到本機。



功能應用


影像輸入

將視頻輸入接口插入視頻輸入插口，音頻輸入接口插入音頻輸入插口，在應用菜單觸摸“影像輸入”圖標進入輸入界面。



導航

使用導航功能前，需先安裝導航應用程序APK，安裝APK後，會在應用桌面生成一個對應的圖標，點擊它即可啟動對應的導航應用。用戶也可以進入“車機設置->導航設置->導航程序選擇”，將導航按鍵與此導航應用關聯，正確關聯後，可以通過直接點“導航”圖標來實現啟動導航應用。

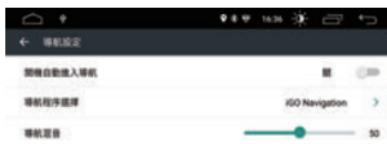

設定


在桌面點擊“設定”圖標進入設定頁面，在此頁面，可根據您的個人喜好設置相關參數。



功能應用

線路和網際網絡

在設置界面找到“網絡和網際網絡”點擊進入WIFI頁，確認WIFI開關處於開啟狀態，在WIFI網絡列表中選擇您要鏈接的網絡，輸入密碼，點擊鏈接，完成WIFI鏈接。

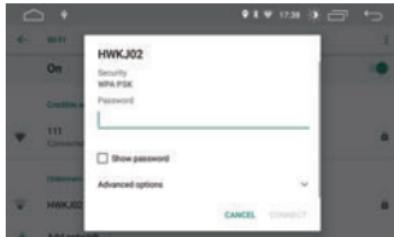

車機設定

在設置界面找到“車機設定”，點擊進入車機設定界面。



通用設定

待機時間：可根據需求設定待機時間。

輔助觸點：可打開或關閉懸浮球，懸浮球上有7個常用功能按鍵。

倒車音量抑制：可以選擇“無、弱、中、強”不同檔位。


恢復出廠設置：點擊後可恢復系統各項參數為默認值。



功能應用

顯示設置

屏幕調整：觸摸圖標進入顯示設置界面，可調整顯示效果

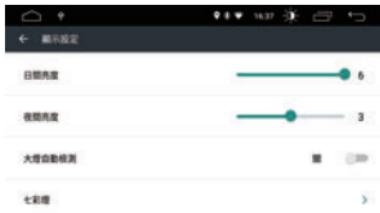

音量設置

音量設定：進入後可根據需求調節各模式的默認音量。



音效設定

觸摸“音效設定”圖標進入設置界面，可調整音效設定。

智能低音：點擊進入後可打開或關閉智能低音。

平衡：點擊進入後可設置揚聲器位置。

皇帝位：點擊進入後可根據需求設置最佳音效位置。

30EQ：點擊進入後可設置不同的音效模式，有“原音、流行、搖滾、爵士、古典、用戶”模式可供選擇。

響度：點擊進入後可打開或關閉響度。

濾波：點擊進入後可選擇打開或關閉HPF與LPF，即高通濾波與低通濾波。



功能應用

影響輔助設定

點擊進入影響輔助設定界面，在此界面可開關行車影響、倒車警告線、前置攝像。



快捷設定

觸摸“方向盤”圖標進設定界面



点击“CLEARALL”图标开始设置。

点击“快捷设定”界面对应的功能图标，图标会闪烁。此时长按SWC面板上面的按键，当对应的功能图标停止闪烁，松开手指。表示设置成功；

藍牙設定

點擊進入藍牙設定界面，可打開或關閉自動連接與自動接聽。



系統


点击“系统”进入系统界面。



語言與輸入設定：可設置本機菜單語言；

時間與日期：可設置當前時區，或設置自動確定時區。

線材鏈接

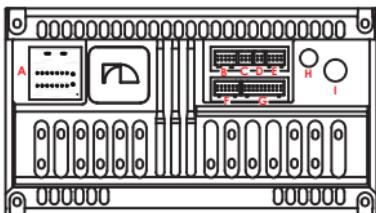

- A — 電源
- B — 倒車後視
- C — 6P-USB
- D — 4P-USB
- E — 無
- F — 無
- G — 擴展
- H — GPS天線插口
- I — 收音天線插口

	標籤	顏色	功能
A	GND	黑色	接地線
	B+	黃色	電源+
	ACC	紅色	點火線
	ILL	橙色	燈控制線
	Reverse	棕色	倒車控制線
	SWC1	白色	方控線1
	SWC2	綠色	方控線2
	ANT	藍色	ANT自動天線
	FR-	灰色/黑色	前右喇叭(-)
	FR+	灰色	前右喇叭(+)
B	RL-	綠色/黑色	後左喇叭(-)
	RL+	綠色	後左喇叭(+)
	FL-	白色 / 黑色	前左喇叭(-)
	FL+	白色	前左喇叭(+)
G	RR-	紫色/黑色	後右喇叭(-)
	RR+	紫色	後右喇叭(+)
	Reverse camera input	黃色	後攝像頭輸入
	Brake control	粉色	剎車檢測
G	WIFI ANT	藍色/白色	WIFI 天線 和 藍牙天線
	BT ANT	藍色/白色	WIFI 天線 和 藍牙天線
	Video in	黃色	視頻輸入
	Audio in-L	白色	左聲道輸入
G	Audio in-R	紅色	右聲道輸入
	Video Out-1	黃色	視頻輸出1
	Video Out-2	黃色	視頻輸出2
	Audio Out-L	白色	左音頻輸出
	Audio Out-R	紅色	右音頻輸出
	Sub-woofer	棕色	重低音輸出
	MIC	黑色	MIC接口
	Amp.Control	橙色	功放控制線

技術參數

常規

系統：安卓9.0

內存：16G

電壓：14.4 (10.5-16V)

尺寸 (WxHxD):

178x100x60MM

工作溫度：-10°C-+70 °C

儲存溫度：-20°C-+80 °C

淨重： 0.5Kg

TFT顯示器選項

顯示器尺寸：7寸

顯示分辨率：1024x600 RGB

對比度：500

收音機選項

FM調頻範圍：87.5-108.0MHz

AM調頻範圍：522-1620KHz

支持視頻格式

H264/WMV/DIVX/MKV/FLV

支持音頻格式

MP3/WMA/FLAC

USB界面選項

後置USB：讀取（可充電5V/1A）

視頻選項

外部視頻輸入系統：

NTSC/PAL/SECAM

外部視頻輸入：1VP-P/75Ω

音頻選項

最大功率：4x50W

前置輸出(V):1V/10KΩ

前置輸出阻抗： $\leq 600\Omega$

揚聲器阻抗：4-8Ω

藍牙選項

通信系統：BT4.0版 +EDR

輸出：藍牙標準功率2級

最大通信範圍：大概5米

頻段：2.4G




常見故障排除指南

故障	原因	解決方法
不能開機	電源供電保險絲燒壞	更換同型號保險絲
	其他因素造成微處理器工作異常	用尖端物點按面板上的複位孔，重新開機
點火開關關閉後，設置的信息全部丟失	更換蓄電池或保險絲	重新設置信息並保持
收音收臺效果差	電臺信號弱	將車移動到另外一個位置重新搜索
	收音天線未連接好導致信號弱	連接好天線重新搜臺
無圖像	其他因素造成微處理器工作異常	用尖端物體點按面板上的複位孔，重新開機
無聲音輸出	聲音小	加大到所需的音量
	輸出線未正確連接	檢查輸出線連接
GPS不能定位	GPS天線未插入	插入GPS天線
	可能處於GPS信號屏蔽區	請將車開出一段距離，移動到信號區域

電源和揚聲器接線注意事項

切勿把揚聲器導線接頭接至電池，否則本機將會嚴重損壞。

在把揚聲器導線接頭接至揚聲器之前，檢查您汽車上的揚
聲器線路。

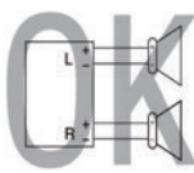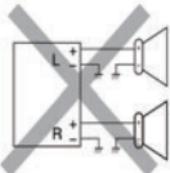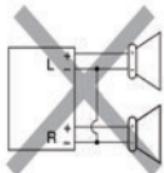

FIND US ON

-  www.nakamichicaraudio.com
-  [Nakamichi.Global](#)
-  [Nakamichi.caraudio](#)