



Step 1

Turn off the cold-water supply to your sink faucet.

Step 2

Disconnect the existing hose from the supply valve.

Step 3

Connect the inlet hose of the filter to the valve. Hand tighten, then give a $\frac{1}{4}$ turn with a wrench or pliers.

Step 4

Connect the outlet hose of the filter to the faucet hose and tighten.

Step 5

Secure the bracket/filter to a convenient location under the sink.

Step 6

Turn the cold-water supply valve back on.

Step 7

Flush the filter by turning on the cold-water faucet, and let it run for three minutes, or until the water runs clear.