


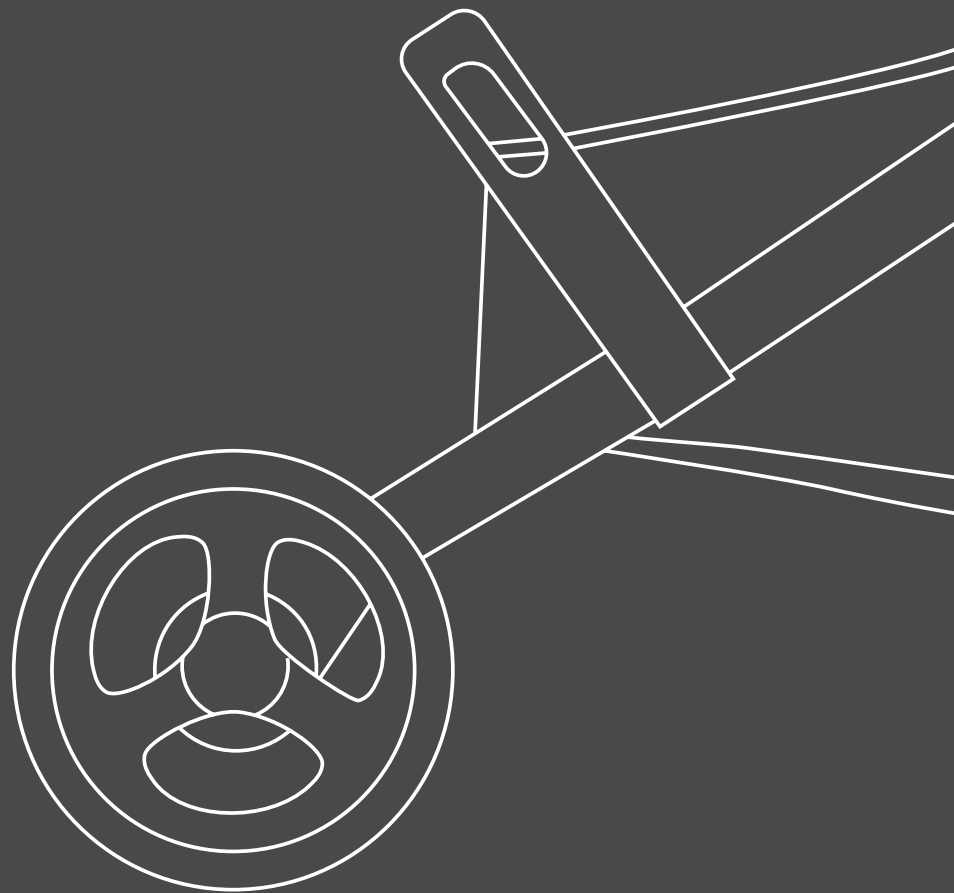

Miley rear wheel

Removal and installation manual



①

2

3

4

5

①

Pry off the wheel cap using a small flat head screw driver.



- ② Take off the lock pin using a long nose plier and remove the washer, the wheel can be taken off.



- 3** Place the new wheel and the washer.



4 Insert the lock pin.



5 And place back the wheel cap.



