



AquaFountain™

INSTALLATION INSTRUCTIONS



Thank you for your purchase of an EasyPro AquaFountain™. It will enhance the beauty of your pond or lake with reliable performance. Each EasyPro AquaFountain comes preassembled for easy installation.



SAFETY & HANDLING INSTRUCTIONS

• Under NO circumstances should anyone enter the water with the electrical plugged in and/or in operation.

- Exercise caution with any electrical equipment with moving parts.
- Never run the unit out of the water. This can cause damage to the unit and is dangerous for the operator.
- Units not for use in brackish or saltwater applications
- Never lift or pull the unit by the power cord.
- Do not use waders in deep ponds/lakes or in ponds/lakes with drop-offs, drastic slopes or soft bottom material.
- Do not use boats that tip easily for fountain installation. Follow ALL boating safety rules and regulations, including wearing a PFD (Personal Flotation Device).
- To reduce the risk of electric shock, the units should be plugged into a GFCI breaker that is properly grounded. Be sure to test the GFCI breaker upon installation and every month thereafter to ensure proper operation.

AF50 (1/2 hp, 115 volt)

AF100 (1 hp, 115 volt)

Both include timer & GFCI panel

AF1002 (1 hp, 230 volt)

Includes timer but NO GFCI

- For proper unit operation, you must purchase GFCI locally.

PRODUCT SPECS

AF50

1/2 hp • 115 volt • 6.0 amps
60 GPM (approx.)

Wide Umbrella Spray: 6' H x 15' Dia.

Rocket Spray: 8' H x 2' Dia.

AF100

1 hp • 115 volt • 11.5 amps
90 GPM (approx.)

Wide Umbrella Spray: 8' H x 26' Dia.

Rocket Spray: 16' H x 5' Dia.

AF1002

1 hp • 230 volt • 6.5 amps
90 GPM (approx.)

Wide Umbrella Spray: 8' H x 26' Dia.

Rocket Spray: 16' H x 5' Dia.

INSTALLATION


1. Remove unit and power cord from packaging. Inspect unit for any damages from shipping. Notify the shipping company immediately, or your EasyPro® dealer about any damages. *(Optional Step: A light kit may be installed on the fountain before launching unit in the water. Follow the installation instructions included with the EasyPro Light Kit.)*
2. Choose your nozzle from the Wide Umbrella or Rocket Spray option. To interchange the nozzles, simply remove the black cover, and thread the nozzle into the fountain head. Nozzle slots may vary slightly. *(Narrow Umbrella nozzle option sold separately.)*



Wide Umbrella



Rocket Spray

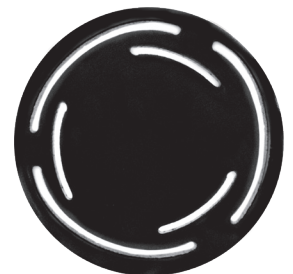

Narrow Umbrella

AF50 • AF100 • AF1002

INSTALLATION CONTINUED




Wide Umbrella Nozzle



Rocket Spray Nozzle

3. Determine the position of the preassembled unit in your lake or pond. To anchor the unit in position, cut two lengths of 1/4" polyethylene rope, allowing approximately 2 to 3-feet of rope per 1 foot of water depth. Tie one end of each rope to the float bottom with a secure knot. The other end of each rope can be secured to a standard 8"x8"x16" concrete block. (*See diagram*)

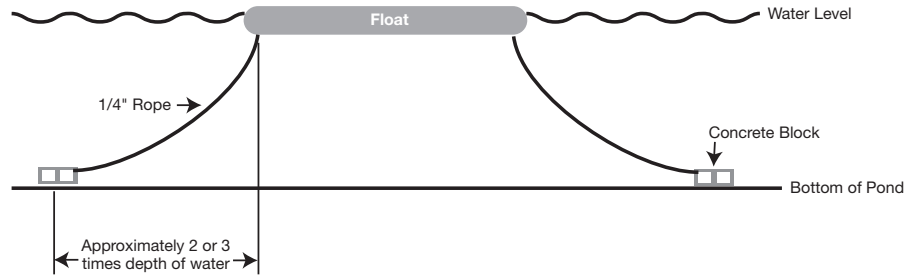

4. Mount the control panel on a post near the water's edge. Be sure to follow all national and local electric codes. The control panel should be installed upright to maintain proper weatherproofing. The **AF50** and **AF100** come with a timer and GFCI panel. The **AF1002** includes the time, but NOT GFCI (this must be purchased locally for proper operation of this unit.)
5. Set the timer and plug in the unit (and lights if installed earlier). Now it's time to enjoy your new EasyPro® AquaFountain™.

EasyPro® Pond Products Limited Warranty

EasyPro Pond Products ("EasyPro") warrants to the purchaser that this product ("Product") will be free from any mechanical or material defects for a period of **two years** from the date of purchase. Units not for use in salt or brackish water applications. For use in fresh water only. This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro's quality control standards. Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers.

This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim.

All returned items will be inspected to determine cause of failure before a warranty claim is approved. The exclusive remedies provided hereunder shall, upon EasyPro's inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

Making a Claim: A Return Authorization ("RA") number must first be obtained by calling EasyPro at 800-448-3873 or via email at warranty@easypro.com. It is the purchaser's responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential or incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.

