



Installation Instructions

Step 1: Disconnect battery.

Step 2: Remove side panels shown in picture.




Step 3: Remove Airbag mounting bolts and lower Airbag down (no need to unplug airbag)




**Step 4: Remove all screws holding in the glove box,
Then remove glove box.**



Step 5: Locate the 4x4 module and unplug the 40 pin and 10 pin connectors.

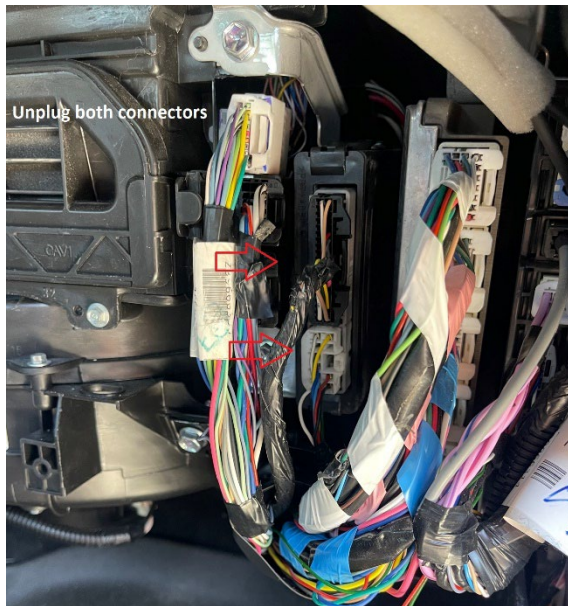


Step 6: Install the 40 pin and 10 pin jumper Harnesses into the 4x4 module and connect to the main wiring harness as shown in pictures below. Then secure any loose wires.

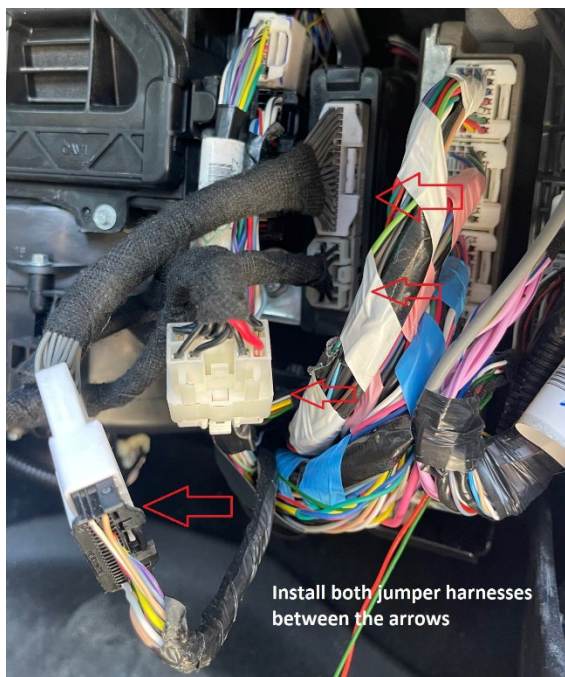

Step 7: Take the Gray loose wire (from the AnyTime Locker) and run It across and under the dash.

(White wire shown to Make it easier to see).

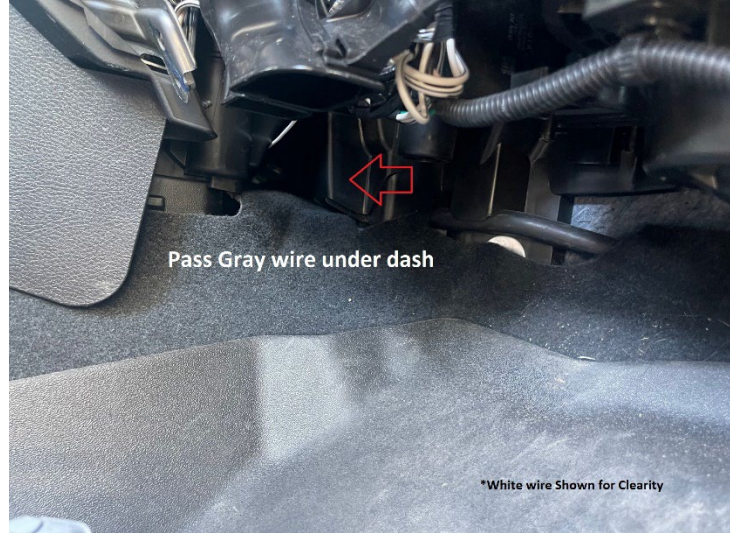

Step 8: Remove the passenger side kick panel and threshold panel.





Step 9: Locate and disconnect connector IA5 as shown in picture below.



Step 10: connect the T-Tap to the Gary wire on connector IA5.

(The Gray wire is Pin 19, use picture below for reference, the gray wire could be faded).

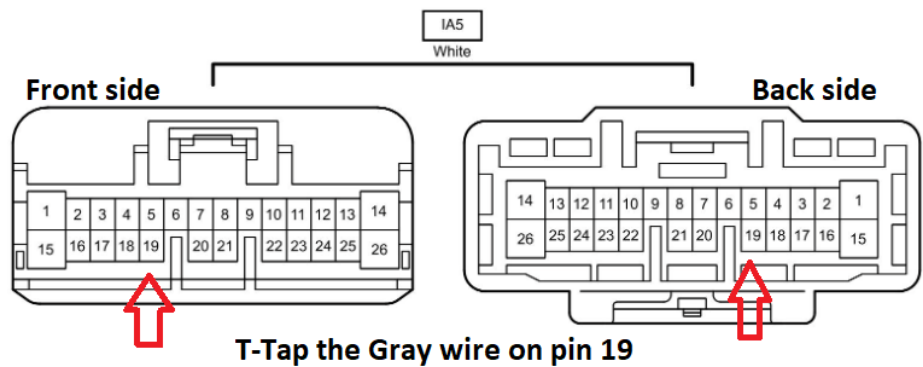


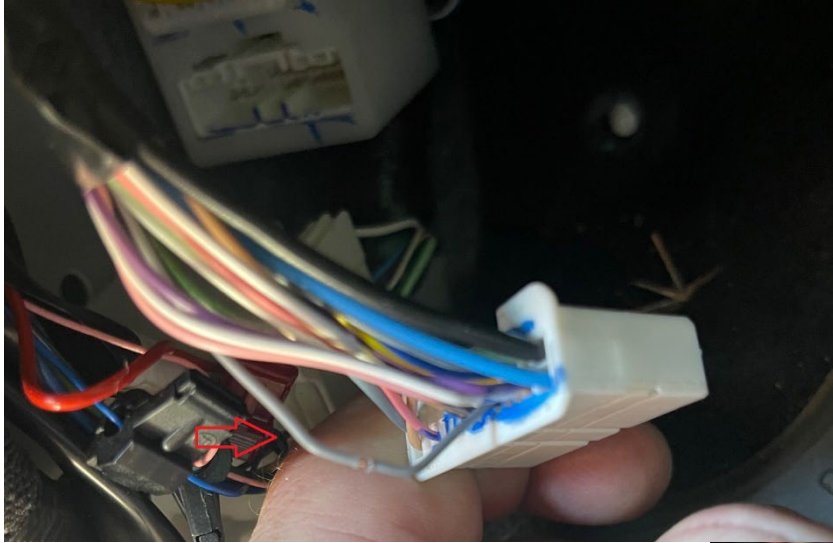

Connect T-Tap to Gray wire.



Step 11: Connect the AnyTime Locker's Gray/white wire with provided spade connector to the T-Tap and tie up and loose wires.

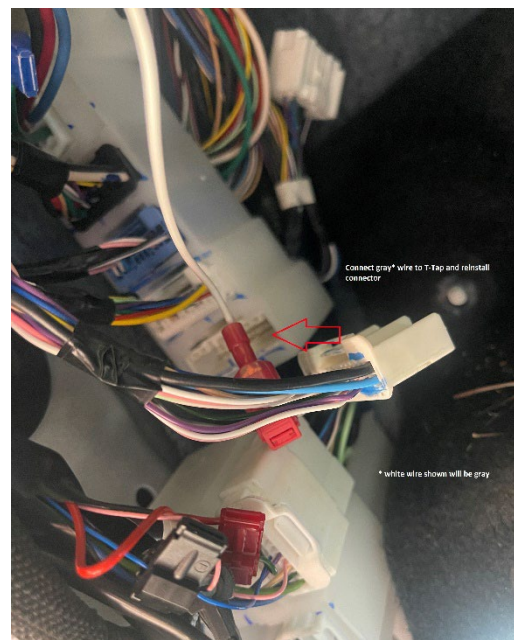

Step 12: (optional) connect the blue and black loose wires to the provided indicator light. (if indicator has two red wires then, the black and blue can be connect in either direction. If your indicator has a black and red wire, then connect blue to red and black to black).



Step 13: Confirm all loose wires and module and secure. Then reinstall kick panel, Threshold panel, glove box, Airbag, and side panels.

Step 14: Reconnect Battery and follow (How to Use) instructions to test for proper operation.

