

# nutribullet.

TWIN DRAWER  
AIR FRYER




# User guide.

# Important safeguards and cautionary information.

**Warning! To avoid the risk of serious injury, carefully read all instructions before operating your nutribullet® Twin Drawer Air Fryer. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.**

**WARNING: To prevent risk of severe personal injury and/or property damage, use extreme caution when cooking.**

## PERSONAL SAFETY

 **DO NOT TOUCH HOT SURFACES. Never touch the sides of the drawers, crisper plates or inside of the appliance during or after operation. Always use insulated oven gloves or use the drawer handles when using the appliance.**

**During hot air frying, hot steam is released through air vents located on the sides and back of the unit. Keep your hands and face away from the steam and from the air vents. Use caution when removing the Cooking Drawers from the appliance as there may be hot steam.**

Before moving or storing the unit, turn the unit OFF, UNPLUG the power cord, and wait for the appliance to cool.

Always turn the appliance OFF and UNPLUG from the outlet when not in use and before cleaning. Allow to cool down before assembling or

disassembling parts, and before cleaning the appliance.

DO NOT leave the appliance unattended when in use.

DO NOT attempt to remove the Cooking Drawers while the unit is in operation. Pause or turn the appliance off and ensure that the cooking action has completely stopped before removing the Cooking Drawers from the Base.

Removing the Cooking Drawer too quickly or forcefully may result in splattering of hot contents and may cause serious burns and injuries.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.

Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they DO NOT play with the appliance.

The use of attachments not recommended or sold by nutribullet® may cause personal injury or property damage.

**Never overfill ingredients. Leave at least 50mm of space between your food and the top of the Cooking Drawer. Keep all ingredients within the basket and prevent any direct contact with the heating element. Overfilling the unit may result in personal injury, property damage, or affect the safe use of the appliance.**

**Do not use the appliance for any other purpose than described in this manual. Misuse may cause injury.**

**Always use caution when operating the appliance with hot food. Improper use not in accordance with the safeguards contained in the user manual may result in serious personal injury or property damage.**

DO NOT immerse the appliance, or power cord in water or any other liquid. To prevent electric shock and short-circuit, avoid any liquid from entering the appliance.

NEVER pour oil into the Cooking Drawers as this could result in fire or personal injury.

## PRODUCT SAFETY

FOR COUNTERTOP USE ONLY. Make sure the surface is level, heat-resistant, stable, clean and dry. DO NOT place the unit near the edge of the countertop during use. Never use a power outlet below counter which can make the cord accessible to children.

We recommend placing a heat proof mat underneath your appliance when in use, to protect your benchtop from the risk of heat damage.

Any significant spillage onto the surface under or around the appliance, or onto the appliance itself, should be cleaned and dried before continuing to use the appliance.

Always ensure that the Cooking Drawer is thoroughly dried after cleaning and is positioned correctly before use.

DO NOT put any NON-food items into the Cooking Drawer for the purpose of frying or heating.

DO NOT use the appliance for deep frying with oil. DO NOT use the appliance for deep frying.

When using this appliance, provide adequate air space (at least 200mm) above, below, and on all sides for circulation.

DO NOT cover the air outlet vent, located on the back of the unit, while the unit is operating.

DO NOT place on or near a hot gas or electric burner, in a heated oven, or on a stovetop.

DO NOT place the appliance close to flammable materials such as curtains, and DO NOT place anything above or on top of the appliance when in use.

DO NOT use this appliance if any parts appear to be damaged. If you have any questions or concerns, please contact customer service (AU: 1300 285538 / NZ: 0800 232 633).

**WARNING!** This product is not intended for use outside of Australia and New Zealand. DO NOT use this product in locations with different electrical specifications or plug types. DO NOT operate with any type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury or product damage.

DO NOT modify the plug in any way.

To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

DO NOT let the power supply cord hang over the edge of a table or countertop.

DO NOT let the power supply cord touch hot surfaces, including stove, or become knotted or tangled.

Regularly inspect the power cord, plug, and appliance for any damage. **DO NOT operate any appliance with a damaged cord or plug or if the appliance malfunctions, or is dropped or damaged in any manner. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.**

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.

If your nutribullet® malfunctions in any way, immediately discontinue use and contact Customer Service. You may purchase new nutribullet® attachments or other parts at **bulletbrands.com.au/bulletbrands.co.nz** or by contacting customer service (AU: 1300 285538 / NZ: 0800 232 633).

Any maintenance other than cleaning should be performed by a qualified electrician. DO NOT attempt to repair or service this appliance yourself.

This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicle or boats. Do not use outdoors.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments

If you have any questions or comments or if some aspect of this user guide is not clear, please contact customer service for assistance at **bulletbrands.com.au/bulletbrands.co.nz**.

**! Save these instructions!**

 
# Contents.

- 08 What's included**
- 09 Assembly guide**
- 10 Control panel**
- 12 Usage instructions**
  - 12 Before first use
  - 13 Assembly
  - 14 Using the Air Fryer
- 18 Care & maintenance**
  - 18 Replacement parts
- 19 nutribullet® Twin Drawer Air Fryer  
One-year limited warranty**




Thank you for purchasing the nutribullet® Twin Drawer Air Fryer.


# What's included.

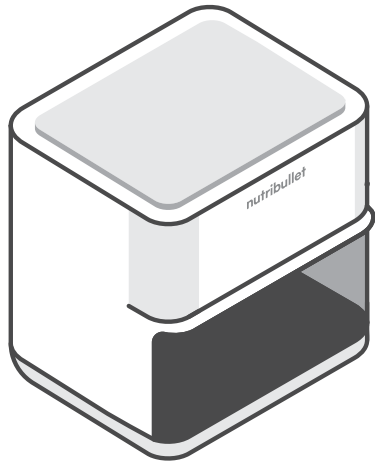

base

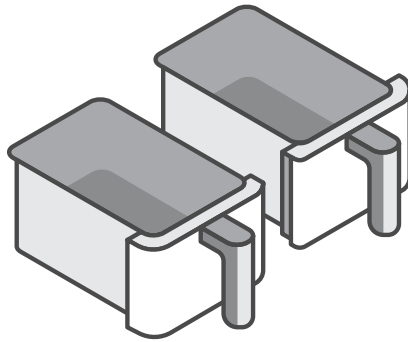 


2 cooking drawers

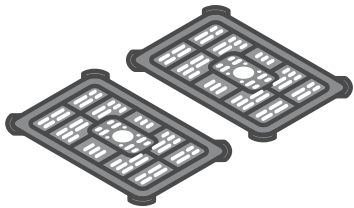 

2 crisping trays

# Assembly guide.

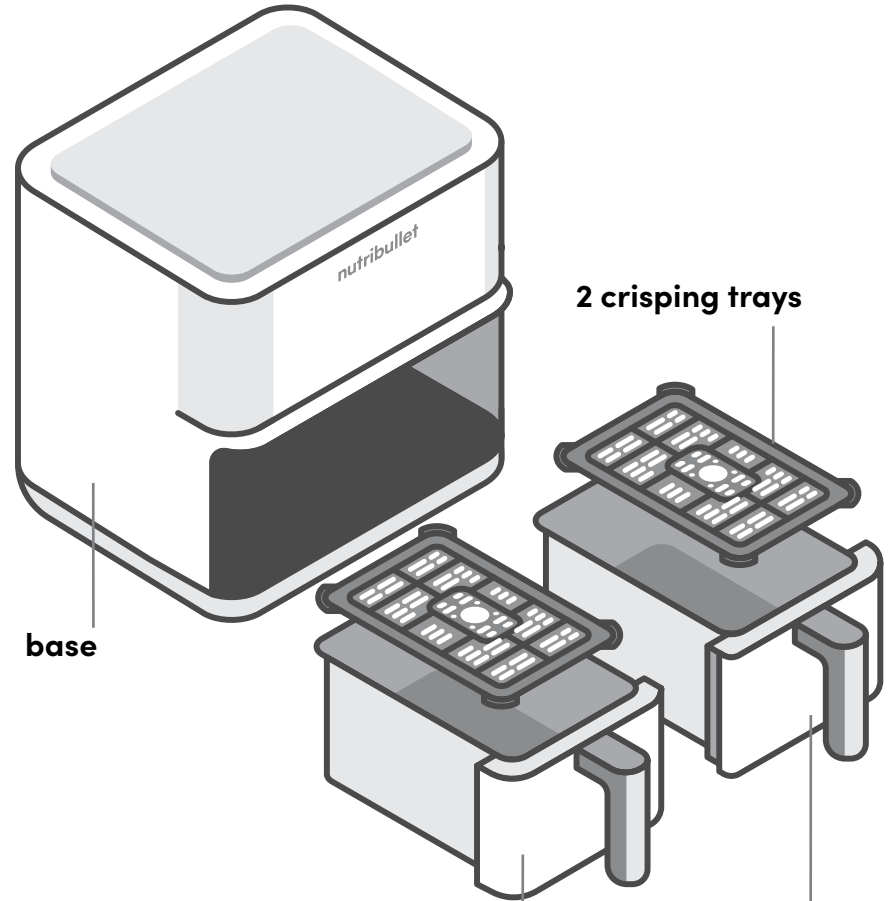 


base

2 crisping trays

2 cooking drawers

# Control panel.

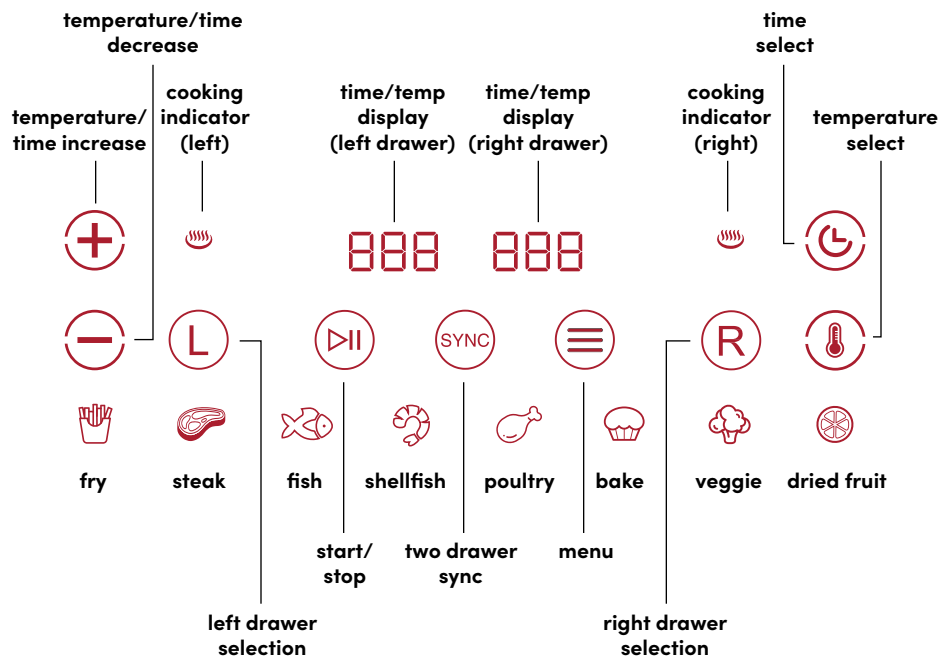 

To select a cooking mode, first select which Cooking Drawer you will be using (**L** or **R**). Then, press the **Menu** button until your desired cooking mode is fully illuminated. The mode will load with its default time and temperature, as noted in the table on the next page. Press the **Time/Temperature Select** buttons to view the settings on the display.

**NOTE:** The time is displayed in minutes for all modes except for **Dried Fruit**, which is displayed in hours and minutes.

To begin cooking, press the **Start/Stop** button, the icon for the selected mode will remain illuminated, all other icons will be extinguished. Once the mode has started, the **Cooking Indicator** icon will illuminate to indicate that the Air Fryer has started cooking.

Follow the same process for the other Cooking Drawer. To set the same mode for both Cooking Drawers, press **SYNC** and then press **Menu** to select your desired cooking mode.

Default settings for each mode are noted in the table below.

Icon	Mode	Default Temperature	Default Cooking Time
	Fry	200°C	20 minutes
	Steak	200°C	12 minutes
	Fish	200°C	12 minutes
	Shellfish	180°C	12 minutes
	Poultry	200°C	25 minutes
	Bake	180°C	12 minutes
	Veggie	160°C	16 minutes
	Dried Fruit	50°C	5 hours

**Disclaimer:** All default settings should be viewed as suggestions. As ingredients and recipes differ in origin, size, shape as well as brand, we cannot guarantee the best setting for your ingredients.

- To manually adjust the mode time or temperature, first press the **Time/Temperature Select** buttons, followed by the **+/-** buttons to adjust as needed. You can adjust either setting before cooking has started or at any time during the cooking process.
- The **Start/Stop** button can be used to pause the Cooking Drawer(s). Press and hold the **Start/Stop** button for 3 seconds to cancel cooking.

**NOTE:** For the **Dried Fruit** mode, the time can be increased or decreased in 15 minute increments, and the time displayed is indicated in hours (1:00 hour to 12:00 hours). For all other modes, time can be adjusted in 1 minute increments, and time displayed is in minutes (1:00 minute to 60:00 minutes). Cooking temperature can be adjusted in increments of 5 degrees).

- If no selections are made for 5 minutes, the unit will enter standby mode. To wake the unit from standby mode, press and hold **L**, **R**, or **SYNC**.

# Usage instructions.

## Before first use.

Before using your nutribullet® Twin Drawer Air Fryer for the first time, please take a moment to perform the steps below.

### 1. UNPACK

Open the box and remove the **Air Fryer Base** with **Cooking Drawers** and **Crisping Trays**, placing all parts on a flat, level, and dry surface. **Remove inserts under each drawer before first use.**

### 2. CLEAN

Rinse **Cooking Drawers** and **Crisping Trays** with hot soapy water. Wipe exterior of **Air Fryer Base** with a clean, damp cloth.

### 3. PREPARE COOKING AREA AND ENSURE PROPER VENTILATION

 
Ensure the **Air Fryer** is used on a clean, dry, flat surface. Do not use the unit outdoors. The **Air Fryer** should be at least 200mm away from the wall when in operation, to ensure proper air ventilation behind the unit.

**NOTE:** To eliminate any new-machine odors that may be present, you can run the **Air Fryer** at its highest temperature for about 5 minutes without putting any food inside.


**CAUTION:** ONLY place the **Air Fryer** on a heat resistant surface or mat to prevent heat damage.

## Assembly.

Review all warning and caution statements in the Important Safeguards section (pages 3-5) and in the previous section before proceeding to Step 1.

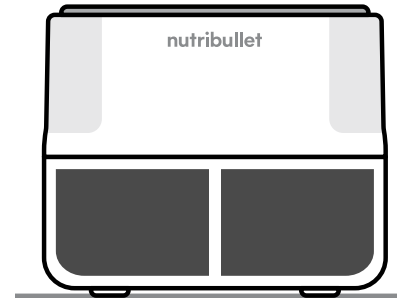


 - 1 Place the Base on a clean, dry, flat surface, like a countertop.**

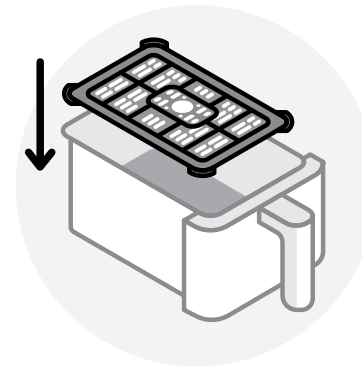


- 2 Insert the Crisping Trays into the bottoms of the Cooking Drawers. Make sure the Crisping Trays are seated securely and are level with the bottom of the Cooking Drawers.**

# Using the Air Fryer.

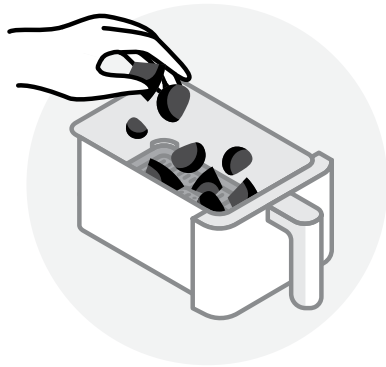 

 - 1 Place food into the Cooking Drawers, being careful not to overfill.** For best cooking results, leave at least 50mm of space between your food and the top of the **Cooking Drawer**.

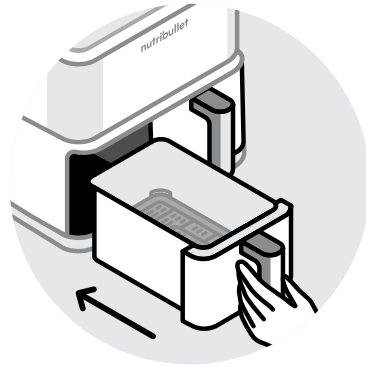

- 2 Holding the Cooking Drawers by their handles, place the Cooking Drawers into the Base.** Ensure the Air Fryer is properly assembled with the **Cooking Drawers** fully seated inside of the **Base**.

 
**NOTE:** The Air Fryer will not operate unless the **Cooking Drawers** are installed correctly.



- 3 TO USE A COOKING MODE:**

Press **L** or **R** to select the **Cooking Drawer** you are programming, or press **SYNC** to choose the same mode for both drawers. Press the **Menu** button until your desired cooking mode is fully illuminated (the other modes will dim). The default temperature and time for the selected mode will load on the display for the selected **Cooking Drawer(s)**. Press the **Start/Stop** button to begin cooking.

**TO MANUALLY SET COOKING TEMPERATURE/TIME:** Press **L** or **R** to select the **Cooking Drawer** you are programming, or **SYNC** to program the same temperature and time for both drawers. Next, press the **Time/Temperature Select** buttons and use the **+/-** buttons to set your cooking time and temperature. Press the **Start/Stop** button to begin cooking.

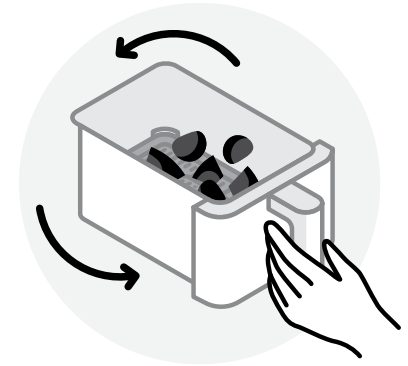


- 4 TURNING FOOD DURING COOKING:** Some recipes call for taking the **Cooking Drawers** out during cooking and turning food. If so, first press the **Start/Stop** button to pause the **Air Fryer**. When the cooking has paused, remove the **Cooking Drawers** from the **Base** using the handle. Turn your food using a utensil, and place the **Cooking Drawer** securely back in the **Base**. Press the **Start/Stop** button to resume cooking. If you remove a **Cooking Drawer** at any time during cooking, cooking will pause until the **Cooking Drawer** is reinserted.

**WARNING:** Contents may be very hot. Use caution when removing the **Cooking Drawers** as there may be hot steam or splattering that may cause bodily injury. Keep your hands and face away from the steam and from the air vents.





 **5** To adjust the time or temperature while cooking is already in progress, first select the **Cooking Drawer** you want to adjust (L, R, or SYNC). Press the **Time/Temperature Select** buttons and then use the +/- buttons to adjust either setting.

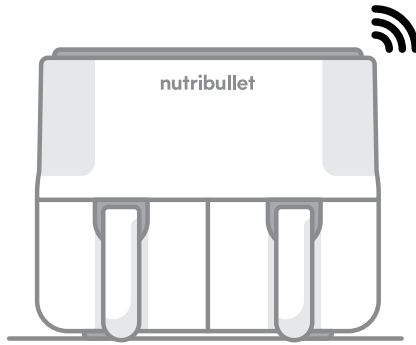


**6** Once the Air Fryer has reached the end of its cooking time, you will hear **5 beeps** to alert you that **the cooking has completed**. Wait a few seconds so the cooking action comes to a stop.

To cancel or end cooking before the time is complete, first select the **Cooking Drawer** you want to cancel (L or R). Then press and hold the **Start/Stop** button until the display turns off and the **Cooking Drawer** powers off.

**!** **CAUTION:** Removing the **Cooking Drawers** too quickly may result in splattering and could potentially be dangerous.

 **!** **CAUTION:** Be careful when opening the **Cooking Drawers** as there may be hot steam.

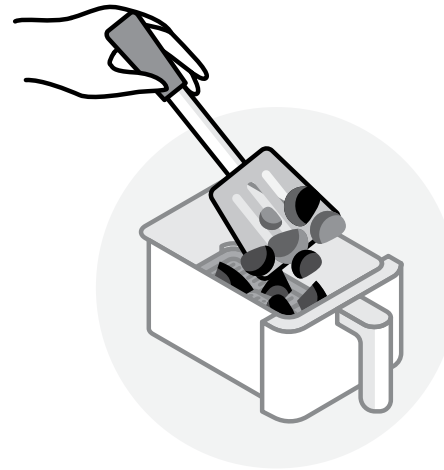

**7** Remove the food from the **Cooking Drawer** using a utensil – **NEVER** use your hands. Enjoy!

# Care & maintenance.


Cleaning the nutribullet® Twin Drawer Air Fryer is quick and easy. We recommend cleaning all removable parts after each use to reduce the buildup of residue.


## STEP 1:

Turn the Air Fryer **OFF, UNPLUG** the unit, and allow it to cool down thoroughly after use.

## STEP 2:


Remove the Cooking Drawers and Crisping Trays. The Cooking Drawers and Crisping Trays are **TOP RACK** dishwasher safe, or can be cleaned by rinsing in warm soapy water.

 **WARNING: NEVER** use the sanitise cycle. The temperature of the sanitise cycle can warp the plastic.

 **CAUTION: DO NOT** use an abrasive or metal cleaning tool to clean the Cooking Drawers or Crisping Trays. Doing so can damage the non-stick coating on the surface of these items.

## STEP 3:

Clean the inner wall of the Air Fryer Base by gently wiping off any residue with a warm cotton cloth, then dry it with a dry cloth. The interior and exterior of the Base should only be cleaned by wiping it with a damp cloth.

 **CAUTION: NEVER** submerge the Base in water or any other liquid. Allow the unit to fully cool before cleaning.

## STEP 4:

Once all parts have been cleaned and thoroughly dried, store the Air Fryer fully assembled in a safe, dry location.

# Replacement parts.

To order additional parts and accessories, please visit our website at [bulletbrands.com.au/bulletbrands.co.nz](http://bulletbrands.com.au/bulletbrands.co.nz).

# CDB GOLDAIR one (1) year limited replacement warranty statement.

**If your product becomes defective due to faulty material or workmanship within a period of One (1) Year from the date of purchase, we warrant to do the following:**

- **For New Zealand Consumers:**  
We will replace the defective product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:**  
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:**

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

**YOUR WARRANTY DOES NOT COVER:**

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

**This warranty does not replace but is in addition to your statutory rights.**

**This warranty does not apply to accessories supplied with the item.**

**This warranty applies only to the original purchaser and may not be transferred.**

**Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.**

**PLEASE NOTE:**

Only the defective product or parts returned to place of purchase will be replaced under this warranty.



**NEW ZEALAND**

PO Box 100-707  
NSMC  
Auckland 0745  
0800 232633  
[www.bulletbrands.co.nz](http://www.bulletbrands.co.nz)

**AUSTRALIA**

PO Box 574  
South Morang  
Victoria 3752  
1300 285538  
[www.bulletbrands.com.au](http://www.bulletbrands.com.au)

nutribullet is a registered trademark of CapBran Holdings, LLC.  
Copyright © 2022 CapBran Holdings, LLC. All rights reserved.  
Los Angeles, CA 90025, USA. Made in China.



**230-240V AC 50-60Hz 2100-2300W**

**Capital Brands Distribution, LLC | [bulletbrands.com.au](http://bulletbrands.com.au) / [bulletbrands.co.nz](http://bulletbrands.co.nz)  
All rights reserved.**

nutribullet® and the nutribullet® logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

**220715 \_NBA07200 (NBA-200A)**