

nutribullet®

SMART TOUCH
BLENDER™ COMBO



User guide.

Important safeguards & cautionary information.

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your NutriBullet®. When using any electrical appliance, basic safety precautions should always be observed, including the following critical information.

Save these instructions!

● FOR HOUSEHOLD USE ONLY

PERSONAL SAFETY

BLENDING WITH NUTRIBULLET® CUPS:



CUP

NEVER put hot liquids in any of the blending cups before blending.

WARNING! Start with cold or room temperature ingredients. Heated ingredients can create internal pressure in a sealed blending cup, which may erupt on opening and cause thermal injury.

Friction from the rotating blade will cause ingredients to heat and generate internal pressure in the sealed vessel.

Do not continuously operate for more than one minute. If the vessel is warm to touch, allow to cool before carefully opening pointed away from your body.

Never blend carbonated ingredients or liquids. Built-up pressure can cause the

blade and cup to separate, possibly resulting in personal injury.

WARNING! If storing blended ingredients, remove the blade from the cup and replace with the flip top lid.

Never store the extractor blade on the power base without a cup or vessel attached. Failure to do so may result in personal injury if the unit is accidentally turned on.

NEVER leave spoons or other foreign objects in the cup before blending. Failure to do so will result in damage to the cup and/or possible personal injury.

BLENDING WITH THE PITCHER:



PITCHER

HOT LIQUIDS:
Use caution when blending hot liquids in the pitcher.

WARNING!

Never turn the power on while using the pitcher without the vented lid cap inserted and locked into the pitcher lid, as ingredients can splash, and if hot or warm, could potentially cause thermal injury and/or property damage.

NEVER leave spoons or other foreign objects in the pitcher before blending. Failure to do so will result in damage to the pitcher and/or possible personal injury.

Never leave the NutriBullet® unattended while it is in use. Close supervision is necessary when any appliance is used by or near children.

To avoid risk of electric shock, never immerse the cord, plug, or power base of blender in water or other liquids.

At all times, avoid contact with moving parts.

VERY IMPORTANT: If there is a liquid spill, immediately disconnect the unit from the power source. If the spill is external only, clean with a warm, soapy cloth and allow the unit to dry completely before operating.

If the spill has leaked in to the internal components of the power base, cease use immediately. Unit must be checked by a Qualified Electrician and certified electrically safe before using again. Failure to do so may result in possible shock and/or personal injury.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Switch off the appliance and disconnect from power supply before changing accessories or handling moving parts.

To reduce the risk of personal injury or damage to the device, keep hands and utensils away from the cutting blade.

The cup, pitcher and blades are consumable components. Over time, if the unit starts to get louder or make unusual noise or vibration, it indicates that these consumable parts may need replacing.

The continued use of worn parts may result in part failure and/or personal injury.

You may purchase consumable components at **bulletbrands.com.au/ bulletbrands.co.nz**.

WARNING!

WARNING! If you are taking any medication, especially cholesterol-lowering medication, blood thinners, blood pressure drugs, tranquilizers, or anti-depressants, please check with your physician before consuming any NutriBullet® recipes.

The following list of seeds and pips contain chemicals that release cyanide into the body when ingested. Do not use the following seeds and pips in the NutriBullet®: apple seeds, apricot seeds, cherry pips, plum pips, and peach pips.

PRODUCT SAFETY

If the NutriBullet® malfunctions or is dropped, or damaged in any manner, discontinue use and contact Customer Service for further assistance.

To prevent overheating, never allow the motor to run continuously for more than one minute.

If the motor stops for any reason, unplug the power base and let it cool for at least 15 minutes.

Never use the NutriBullet® without adding liquid or when the cup is empty, as doing so may damage the blade.

TO AVOID LEAKAGE, DO NOT OVERFILL THE CUP OR PITCHER! The pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquid ingredients (lower line). Your NutriBullet® cups are also marked with a MAX line. When filling the cup or pitcher, make sure your ingredients do not exceed their respective MAX lines.

The NutriBullet® is not intended for use in microwave ovens. Do not place the NutriBullet® cups, power base or any accessories in a microwave as this may result in damage to the appliance.

Use of adapters and converters is considered a safety risk, and an unauthorised modification of the product and as such will void the warranty.

WARNING! This product is not intended for use outside of Australia and New Zealand. DO NOT use this product in locations with different electrical specifications or plug types. DO NOT operate with any type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury or product damage. This appliance has important markings on the plug blade. The cord is not suitable for replacement. If the cord is damaged, the appliance must be replaced

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be connected to an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Periodically inspect cord and plug for damage. Do not operate any appliance with a damaged cord or plug. If damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Do not allow the cord to hang over the side of the counter or table.

Do not allow cord to touch hot surfaces, including stove.

The use of any non-genuine NutriBullet® accessories is a safety risk and will void the warranty. Genuine Nutribullet® spares and accessories can be purchased from **bulletbrands.com.au / bulletbrands.co.nz**.

WARNING: **VENTILATION CAUTION**

WARNING! Always operate the NutriBullet® on a level surface, leaving unobstructed space beneath and around the power base to permit proper air circulation. Slots and openings on the bottom of the product are provided for ventilation to ensure reliable motor operation and to prevent over-heating.

WARNING: to prevent fire hazard, power base openings should be free of dust or lint and never obstructed with flammable materials such as newspapers, tablecloths, napkins, dishtowels, or place mats.

Extractor blades are  sharp! Handle carefully.

WARNING! Use care while handling the extractor blades. Do not touch the extractor blade edges to avoid injury.

Do not remove the rubber seal from your blade attachment. The seal is not designed to be removed. If seal is removed, cease use immediately and purchase a replacement blade assembly.

If, over time, the easy-twist extractor blade becomes loose or damaged, you may order a new easy-twist extractor blade at: **bulletbrands.com.au / bulletbrands.co.nz** or contact **Customer Service : AU: 1300 285 538 / NZ: 0800 232 633.**

AVOID CONTACT WITH MOVING PARTS! To reduce the risk of severe personal injury, keep hands and utensils out of and away from the cross blade while blending food.

The use of attachments not recommended or not sold by the manufacturer may cause fire, electric shock, or injury.

TO REDUCE THE RISK OF PERSONAL INJURY OR PROPERTY DAMAGE, make sure the easy-twist extractor blade is securely twisted (hand-tightened) onto the NutriBullet® blending cup before placing it on the motor base. Check to make sure the easy-twist extractor blade is aligned properly before placing it on the motor base and operating your NutriBullet®.

Always operate the pitcher with the pitcher lid securely in place.



PITCHER

With recipes that require added ingredients to be incorporated during blending, first add the base ingredients, seal the pitcher lid with vented lid cap attached, and begin blending. Then, once the ingredients are well mixed, twist open the vented lid cap and carefully pour or drop ingredients into the mixture.

If you need to push ingredients closer to the blade, **ONLY USE THE TAMPER PROVIDED** with the NutriBullet® Smart Touch Blender Combo. **DO NOT** use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools can make contact with the blade, which may result in damage to the machine, damage to property, and/or possible injury.

NEVER USE YOUR FINGERS OR ANY PART OF YOUR HAND TO PUSH INGREDIENTS DOWN TOWARD THE BLADE. Only use the provided tamper.

The cyclonic action® of your NutriBullet® requires the use of liquids to make smoothies and other nutritious items. The NutriBullet® is not intended to be used without liquids, or as an ice crusher. **ALWAYS ADD LIQUID** to your recipe.

The cup, pitcher and blades are consumable components. We recommend replacing your easy-twist extractor blade every 6 months for optimal performance. If, over time, the easy-twist extractor blade becomes loose, damaged, or needs replacing, you may order a new easy-twist extractor blade at: **bulletbrands.com.au / bulletbrands.co.nz** or contact Customer Service: **AU: 1300 285 538 / NZ: 0800 232 633.**

Blade attachments should not be placed in the dishwasher for cleaning. Exposure to hot water can cause damage to the seal in the outer rim of the attachment.

Do not use NutriBullet® outdoors. If exposed to inclement weather elements such as rain or other wet conditions, discontinue use. Unplug the NutriBullet® when it is not in use. Make sure the power base is unplugged before assembling, disassembling, adding additional parts, or cleaning.

Never remove cup/blade assembly from the power base until the motor comes to a complete stop. Removing the cup/blade assembly while power base is still running may cause damage to the blade, coupling, or motor gear.

Nutribullet® cups and pitchers are consumable, replaceable parts.

Periodically inspect your NutriBullet® cups for damage or wear that may impair proper function. Discontinue use and replace components if you detect cracking, crazing or cloudiness/discolouration, or other damage to the plastic cups, or tabs (on the side of the cup). You may purchase new cups and cross blades at **bulletbrands.com.au**, **nutribullet.co.nz** or by contacting Customer Service: **AU: 1300 285 538 / NZ: 0800 232 633.**

If you have any questions or comments or if some aspect of this user guide is not clear, please contact Customer Service for assistance at **bulletbrands.com.au/** **bulletbrands.co.nz** or call the Customer Service team at: : **AU: 1300 285 538 / NZ: 0800 232 633.**



Contents.

- 12 What's included**
- 13 Assembly guide**
- 14 Getting started**
 - 14 Safety guide
 - 14 Pitcher assembly & use
 - 18 NutriBullet® cup assembly & use
- 20 Blending control panel**
 - 20 Manual speeds
 - 22 Intelligent programs
- 24 Care & maintenance**
 - 24 How to clean the NutriBullet®
 - 26 How to store
- 26 Replacement parts**
- 26 Nutribullet® Smart Touch Blender™
Combo one-year warranty**

Thank you for purchasing the NutriBullet® Smart Touch Blender™ Combo.

What's included.



**1 900mL
cup**



**1 590mL
travel cup**



2 to-go lids



**1 pitcher with
integrated blade**



**1 pitcher lid
with lid cap
and pour spout**



**1 easy-twist
extractor blade**




1 motor base



1 tamper

Assembly guide.

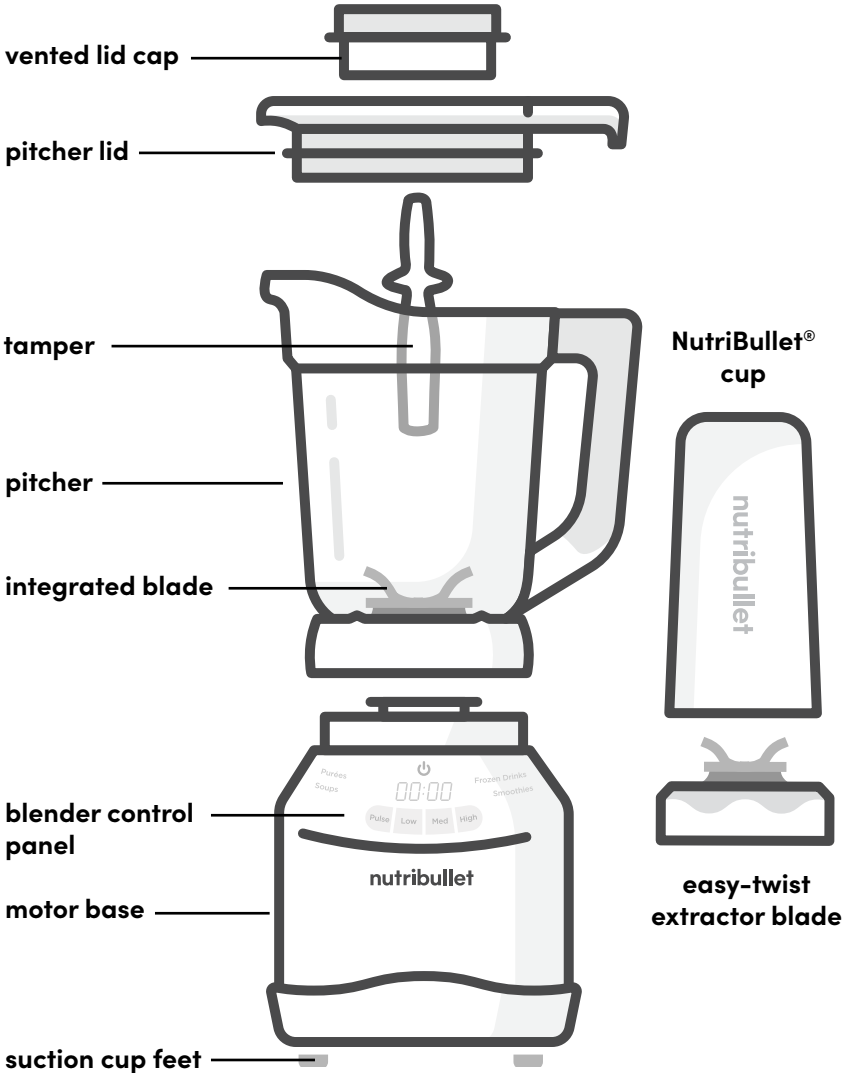

Getting started.

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

Never blend hot or carbonated liquids or ingredients when using any sealed NutriBullet CUPS.


WARNING: Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C/70°F or cooler).



Use extra caution when blending hot liquids or ingredients in the PITCHER.

WARNING: Steam and splatters can escape through the vented lid, potentially causing scalding and/or burns. **NEVER** blend hot liquids in your pitcher without the pitcher lid and vented lid cap attached.

WARNING! The vented lid cap is ventilated to allow steam and pressure to release, while guarding against excess splashing. **NEVER blend hot liquids in your NutriBullet cups or any other sealed vessel, only use the vented pitcher.**

When blending hot liquids in the vented pitcher, add liquid and solid ingredients to your pitcher below their respective MAX lines. Attach the pitcher lid with the vented lid cap inserted. Press **POWER** , then select desired program or begin blending on **LOW** setting. Once ingredients are integrated and the mixture is level (no splashing), increase speed as needed.

Always use care when opening the pitcher lid after blending hot ingredients making sure that excess pressure has been released.

- Make sure the base is plugged in for use.
- Never run the appliance while empty.
- Appliance accessories are not intended to be used in the microwave as it may damage the accessories.
- **Never** leave the appliance unattended while in use.

Pitcher assembly & use.

Review all warning and caution statements in the Important Safeguards section (pg 2-7) and on the previous page before proceeding to Step 1.

1



Place the motor base on a clean, dry, level surface such as a counter or table.


2



Place the pitcher on a clean, dry, level surface. Add the ingredients to the pitcher, making sure they do not exceed the MAX line.

NOTE: The blending pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquids (lower line). When filling the blender, make sure your ingredients do not exceed their respective MAX lines.

4

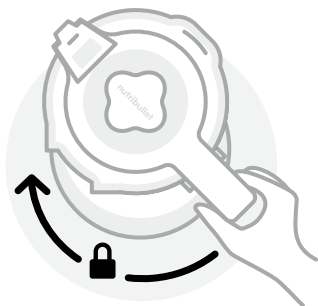

Place the pitcher (lid-side up) onto the motor base and twist clockwise to lock it into place. When you hear the click, it's locked and ready to blend.

NOTE: You may need to twist the pitcher slightly until you feel it settle into the grooves on top of the base.

3




Place the lid on top of the pitcher and press down firmly until locked in place. Place the lid cap over the lid opening, then press down and twist until locked in place.

NOTE: The motor will not run unless the lid is locked in place.

5



Plug the power cord into an electrical outlet and press **POWER**  to turn on the blender. Once the pitcher is fully locked and the unit is plugged in, the **Blending Control Panel** will illuminate and the unit will be ready to operate.

NOTE: If pitcher lid and pitcher are not fully secured onto the base, control panel will not illuminate.



6

To begin blending, select a manual speed or program on the **Blending Control Panel**. To pause blending, press the current speed or program once, the unit will stop running and the timer will pause. **To resume blending**, press a manual speed or the same program again.

NOTE: Go to the blending control panel section on pages 20-23 for speed and program definitions, images, and other information.



NOTE: If you need to add additional ingredients while blending, switch the setting to **LOW** and remove the lid cap from the pitcher lid, leaving the lid attached. Add ingredients through the hole in the top of the lid, followed by the tamper if necessary. Replace the lid cap, then increase to your desired speed. **DO NOT** attempt to add items through the vent hole when blending **HOT** ingredients.



CAUTION: Do not use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools are long enough to reach the blade, which may result in damage to the machine, damage to property, and possible injury.



7

When you have reached your desired consistency, stop the appliance by pressing **POWER** . If you are using a program, you will hear a beep when the program has completed. Wait for the blades to stop turning. The unit will enter standby-mode. The timer will reset and the **Blending Control Panel** will remain illuminated. Press **POWER**  again to turn off the unit completely and the illuminated display will turn off.



8

Twist pitcher counterclockwise and lift off the motor base. Pour and enjoy!



WARNING: Blades are sharp. Never insert your hands into the pitcher.



NOTE: Press up with your thumb on the tab near handle first to loosen pitcher lid for easy removal!

NutriBullet® cup assembly & use.

Review all warning and caution statements in the Important Safeguards section (pg 2-7) and on the previous page before proceeding to Step 1.



1

Place the motor base on a clean, dry, level surface such as a counter or table.




2

Add ingredients to the NutriBullet® cup.

NOTE: Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.



WARNING: NEVER BLEND HOT OR CARBONATED INGREDIENTS OR LIQUIDS IN THE SEALED VESSEL, as doing so may cause excessive pressure buildup, resulting in risk of personal injury and or property damage.

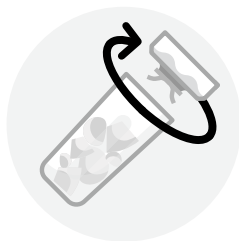


3

Twist the easy-twist extractor blade onto the cup until tightly sealed.



WARNING: Handle the easy-twist extractor blade assembly with care, as the blades are sharp.

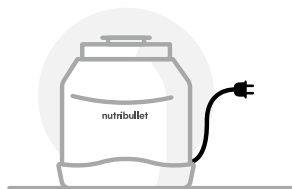


4

Turn the cup upside down and place it onto the motor base, gently turning the cup clockwise to lock into the motor base. You'll hear a click when the cup is locked in place.



5

Plug the power cord into an electrical outlet and press **POWER**  to turn on the blender.

NOTE: The cup must be locked onto the base for the unit to operate.





6

To begin blending, select a manual speed or program on the **Blending Control Panel**. **To pause blending**, press the current speed or program once, the unit will stop running and the timer will pause. **To resume blending**, press a manual speed or the same program.

NOTE: Proceed to the blending control panel chart on page 20 for speed definitions.



7

When you have reached your desired consistency, stop the appliance by pressing **POWER** . The unit will enter standby-mode. The timer will reset and the **Blending Control Panel** will remain illuminated. Press **POWER**  again to turn off the unit completely.

NOTE: speeds will automatically shut off after 60 seconds.



CAUTION

Do not remove the easy-twist extractor blade from the NutriBullet® cup until blending has completely ceased. Do not use the easy-twist extractor blade as a storage lid for your cup. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. When storing contents in the cup, use plastic wrap or foil to seal your container. Always point contents away from your body when unsealing.



8

Unlock the assembly by gently twisting the cup counterclockwise. You will hear a click. Enjoy!


NOTE: Blending should never take longer than one minute to yield smooth and creamy results.

Blending control panel: manual speeds.




TURNING ON/OFF

The power button controls the master power of the appliance. When pitcher with pitcher lid or NutriBullet® cup is locked in place, pressing **POWER** will indicate the motor is powered on and illuminate the **Blending Control Panel**.

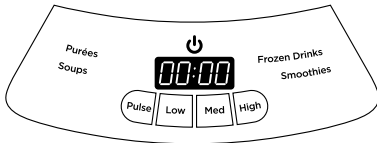

TIMER


When using a blending speed: timer starts at zero (00:00) and increases during operation, showing time elapsed since blending began. **When using program presets:** timer counts down during operation until program is completed.

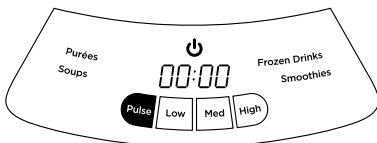

PULSE

Use to control chopping and processing.

WARNING: DO NOT use this setting with hot ingredients as ingredients may splash.

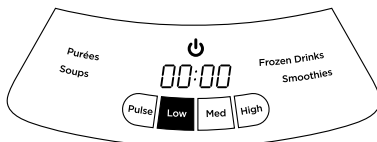


LOW SPEED

Use to mix thin batters, gravies and marinades. Or, to scramble eggs, process cooked foods and uncooked fruits.




WARNING!

NEVER BLEND HOT LIQUIDS OR OTHER HOT INGREDIENTS IN ANY SEALED NUTRIBULLET® CUP. Doing so may cause excessive pressure buildup, resulting in risk of personal injury or property damage. Hot items should only be blended in the pitcher using proper safeguards.

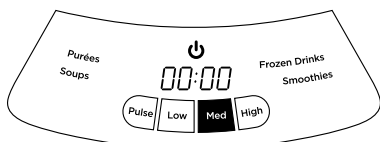

MEDIUM SPEED



Use to cream soups, blend sauces and spreads, or mix dips. Also great for grinding nuts, making mixed drinks, powdered drinks or milkshakes.

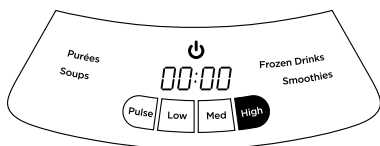

HIGH SPEED

Use to liquefy thick mixtures and extract frozen fruits and vegetables into smoothies.

  TO SELECT A SPEED


Press the desired speed once to begin blending. The selected speed will illuminate and the rest of the speeds will dim. To toggle to another blending speed, press the inactive, dimmed speed desired. To pause blending at any point, press the active speed, the motor will stop and the timer will pause counting. To resume blending, press a manual speed button again. To return to main blending control panel, press **POWER**  once. To fully power down after pausing, press **POWER**  twice and unplug the unit.

PULSE

Press and release the **PULSE** button to chop ingredients. If you hold the **PULSE** button down, it will continue to run until you release it. Do not hold and run the pulse continuously for more than one minute.

NOTE: If the unit stops running and power and timer display are flashing, your device may be overheated. Unplug your device and wait 15 minutes. Plug back in to reset.

Blending control panel: intelligent programs.

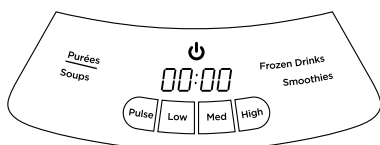

PURÉES


Delivers a perfectly smooth texture — ideal for dips, sauces and spreads of all kinds.



SOUPS


Blends sweet or savory ingredients into the silkiest of ready to heat soups and chilled gazpachos. **The Soups program is only available when using the pitcher.**

NOTE: The **Soups program** does not heat the ingredients you are blending. Always be careful when opening the pitcher after blending hot or warm ingredients.

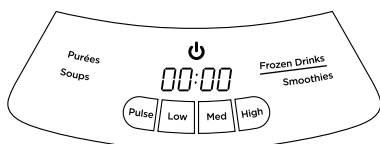

FROZEN DRINKS

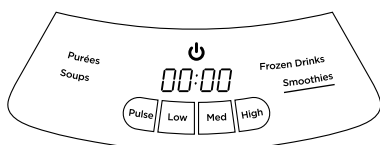

Perfect for ice-blended mocktails or cocktails, and frappe style drinks.



SMOOTHIES

Easily turn fresh or frozen fruits and vegetables into sippable nutritious smoothies.

TO SELECT A PROGRAM

Press the desired program to activate blending. The selected program will illuminate and the rest of the blending control panel will disappear. The program will start to run, and timer will countdown until the program is complete. When the program is complete, there will be an audible alert and the main blending control panel will reappear. To pause a program before completion, press the active program. The motor will stop and the timer will pause counting. To resume the program, press the program button again. To return to main blending control panel, press **POWER**  once. To fully power down, press **POWER**  twice and unplug the unit.

Our intelligent programs are expertly designed to give you the perfect results every time. During each program, the unit may pulse, change speeds, and blend as needed until the program is complete.

NOTE: If the unit stops running and power and timer display are flashing, your device may be overheated. Unplug your device and wait 15 minutes. Plug back in to reset.

Care & maintenance.

Cleaning the NutriBullet® is easy. The pitcher is dishwasher-safe while the cups and to-go lids are **TOP RACK** dishwasher-safe. The easy-twist extractor blade and motor base can be quickly hand-washed with soap and water. Read on for best practices.



WARNING: Never submerge the motor base in water.

Here's how to clean the NutriBullet®:

STEP 1:

The most important thing — **ALWAYS POWER OFF THE UNIT** and **UNPLUG** the motor base from the power outlet when it is not in use. Do not attempt to handle the appliance until all parts have stopped moving! This includes during assembly and disassembly, while changing accessories during cleaning, and any time you leave the machine unattended.

STEP 2:

Detach the NutriBullet® cup / easy-twist extractor blade or pitcher from the motor base.

STEP 3:

Clean the individual components (motor base, easy-twist extractor blade, NutriBullet® cups) as recommended on the following pages.

MOTOR BASE:

- To avoid risk of injury, **NEVER** attempt to clean the actuator system on the motor base while the NutriBullet® Smart Touch Blender™ Combo is plugged in.
- Do not attempt to remove any pieces from the motor base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the motor base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.
- To clean leakage residue from the motor base, wipe with a damp sponge and warm water.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.

CONSUMABLE PARTS:

- The CUPS, PITCHER, and BLADE are consumable components. We recommend replacing your extractor blade every 6 months for optimal performance.

EASY-TWIST EXTRACTOR BLADE:

- **Blades are sharp! Handle the easy-twist extractor blade with care when cleaning!** It is best to clean blades immediately after use to reduce buildup of residue. If food particles get stuck, use a small brush or sponge to target and dislodge them.
- **Do not remove any components of the easy-twist extractor blade;** this can result in permanent damage to the blade, resulting in leakage when blending. If, over time, the easy-twist extractor blade becomes loose or damaged, you may order a new easy-twist extractor blade at bullebrands.com.au / bullebrands.co.nz or contact Customer Service at: **1300 285 538 (AUS) / 0800 232 633 (NZ).**
- Dry the easy-twist extractor blade completely after every use.

- Regularly check the condition of the bottom of the blade for cracking or breakage. If damaged, replace easy-twist extractor blade immediately to prevent possible personal injury.

NUTRIBULLET® CUPS & TO-GO LIDS:

These items are **TOP RACK** dishwasher-safe. We recommend rinsing and briefly scrubbing them with a dish brush to remove any remaining debris before placing in the dishwasher. **NEVER** use the sanitize cycle to wash the cups — heat this high can warp the plastic.

NUTRIBULLET® PITCHER:



WARNING: Blades are sharp! Use caution when cleaning the pitcher.

- The pitcher is dishwasher-safe. We recommend rinsing and briefly scrubbing it with a dish brush to remove any remaining debris before placing in the dishwasher. **NEVER** use the sanitize cycle to wash the pitcher — heat this high can warp the plastic.
- If preferred, hand-wash the pitcher with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge. **The blades are sharp. Take care not to touch while hand-washing.**

- Regularly check the structure of the pitcher and twisting threads for cracking, crazing, or breakage. If damaged, replace immediately to prevent possible personal injury.

TAMPER

- Always hand-wash the tamper with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge.

How to store:

Store the NutriBullet® Smart Touch Blender™ Combo pitcher upright with the pitcher lid secured on top. Do not place anything on top of the pitcher lid. Store remaining pieces in a safe place where they will not be damaged and won't cause harm.



WARNING: NEVER store the easy-twist extractor blade on the motor base without a NutriBullet® cup or the pitcher as the exposed blades pose a serious laceration hazard.

Replacement parts.

To order additional parts and accessories, please visit our website at bulletbrands.com.au / bulletbrands.co.nz.

one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:**
We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:**
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect reassembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

YOUR WARRANTY DOES NOT COVER:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.



NEW ZEALAND

PO Box 100-707
NSMC
Auckland 0745
0800 232633
www.bulletbrands.co.nz

AUSTRALIA

PO Box 574
South Morang
Victoria 3752
1300 285538
www.bulletbrands.com.au

NutriBullet is a registered trademark of CapBran Holdings, LLC.
Copyright © 2021 CapBran Holdings, LLC. All rights reserved.
Los Angeles, CA 90025, USA. Made in China.

Capital Brands Distribution, LLC. | bulletbrands.com.au / bulletbrands.co.nz
All rights reserved. NutriBullet® and the NutriBullet logo are trademarks of
CapBran Holdings, LLC registered in the U.S.A. and worldwide.

220-240VAC 50-60Hz 1500W

Illustrations may differ from the actual product. We are constantly striving
to improve our products, therefore the specifications contained herein
are subject to change without notice.

210610_NBF07520 (NBT-15)