

nutribullet
JUICER PRO™



User guide.

Important safeguards.

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your NutriBullet Juicer™. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

PERSONAL SAFETY

WARNING! This juicer system has sharp blades and moving parts, and is **NOT** intended for use by children who lack experience and knowledge of its safe operation. They require close supervision and thorough instruction on its proper use and safe operation.

Keep the appliance and its cord out of reach of children. Children shall not play with the appliance. To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this juicer.

AVOID CONTACT WITH MOVING PARTS.

Keep hands, fingers, hair, clothing as well as spatulas and other utensils away from the appliance during operation.

WARNING! This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SIEVE AND BLADES ARE SHARP! HANDLE WITH EXTREME CARE!

Do not touch the small cutting blades/teeth on the bottom/base of the sieve. Keep fingers away from the sharp blade in the feed chute.

Do not leave the appliance unattended when in use.

Hard fruits and vegetables will put excess strain onto the motor if a low speed is selected.

If there is a spill under, around or onto the juicer itself, disconnect the unit from the power source. Clean with a cloth and allow unit to dry completely before operating.

Do not push food into the feed chute with your fingers or utensils. Only use the food pusher provided. Do not place your hand or fingers into the feed chute when it is attached to the juicer. If food becomes lodged in the feed chute, use the food pusher provided or another piece of fruit or vegetable to push it down. Turn the motor off and ensure that all moving parts have stopped before disassembling the juicer to remove the remaining pulp.

Do not operate this or any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Always ensure the juicer is turned OFF after each use. Before disassembling, make sure the sieve has stopped rotating and the motor has completely stopped.

PRODUCT SAFETY

This juicer is only designed to juice fruits and vegetables. Please refer to the juicing guide to determine the correct speed for the fruits and vegetables selected for juicing. Do not use any frozen fruits or vegetables.

Do not use the juicer without the pulp basin and basin lid attached to the motor base. Please see assembly instructions for proper placement.

Remove and safely discard any packaging material or promotional labels before using the juicer for the first time.

Ensure that the surface where the appliance operates is stable, level, clean and dry.

Remove rind from all citrus fruits before juicing.

Do not juice stone fruit unless pits of the seed stone has been removed.

Always make sure the pulp basin cover is clamped securely in place (with locking handle) before the motor is turned on. Do not unfasten the clamps (locking handle) while the juicer is in operation.

When using this juicer, make sure there is adequate air space around and under it for proper air circulation.

The use of attachments not recommended or sold by NutriBullet® may cause fire, electric shock or injury. This juicer is for household use only. Do not use this juicer for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.

If no speed is selected after 10 minutes, the unit will power off.

If the motor stops for any reason, unplug the power base and let it cool for at least 15 minutes.

Turn the juicer **OFF**, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

Do not let the power cord hang over the edge of a table or counter-top.

Do not let the power cord touch hot surfaces, such as a stove or let it become tangled or knotted.

Regularly inspect the power cord, plug and the actual juicer for any damage.

To protect against fire, electrical shock and injury to persons, do not immerse the juicer, Motor Base, cord or plug in water or any other liquid.

The cleaning brush and sieve are consumable components. Over time, if the unit starts to get louder or make unusual noises or vibration, it indicates that this consumable part may need replacing. The continued use of worn parts may result in part failure and/or personal injury.

Do not use the juicer if the rotating sieve is damaged; if the filter mesh is torn, crinkled or deformed in anyway. For high use users, we recommend replacing your sieve every 12 months or as needed for optimal performance. You can purchase both the sieve and the cleaning brush at **www.bulletbrands.com.au / www.bulletbrands.co.nz** or contact customer service.

Keep the juicer clean. Refer to care and cleaning section for further information.

WARNING! Vibration can occur during normal operation.

If extreme vibration occurs, discontinue use and call Customer Service.

Any maintenance other than cleaning should be performed by an authorized electrician. Do not attempt to repair or service the juicer, contact Customer Service for assistance at www.bulletbrands.com.au / www.bulletbrands.co.nz

**! Save these
• instructions!**

**FOR HOUSEHOLD
USE ONLY**



Contents.

03	Important safeguards
09	What's included
10	Assembly guide
11	Assembly & use
13	Usage instructions
18	Control panel
19	Juicing tips
23	Disassembly
25	Care and maintenance
26	Juice and unit storage
27	Troubleshooting guide
27	Replacement parts
28	NutriBullet Juicer Pro™ one-year limited warranty

Thank you for purchasing the NutriBullet Juicer Pro™.


What's included.




**1000 WATT MOTOR
BASE WITH
LOCKING HANDLE**



**PULP BASIN COVER
WITH 76 MM FEED
CHUTE**

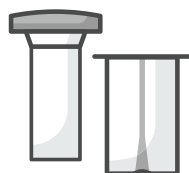

**DUAL-SIZE
FOOD PUSHER**

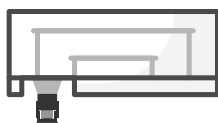

**2L PULP BASIN
WITH NO-DRIP SPOUT**



STAINLESS STEEL SIEVE



800 ML JUICE PITCHER




**JUICE PITCHER LID
WITH FROTH SEPARATOR**




CLEANING BRUSH



**TWO 350 ML GLASS
STORAGE BOTTLES**

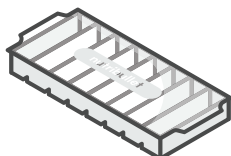


60 ML FREEZER TRAY

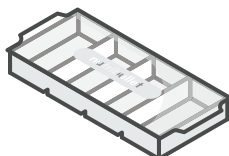


118 ML FREEZER TRAY


Assembly guide.

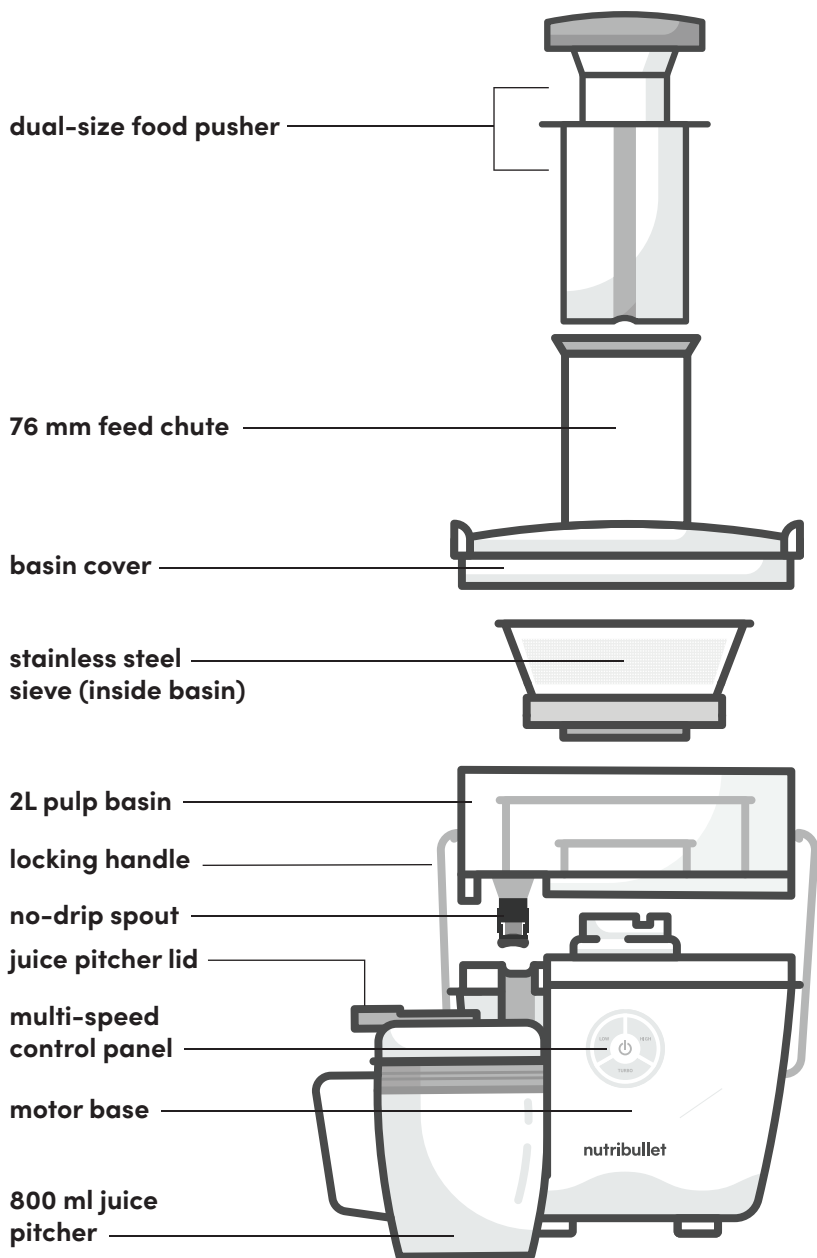


Assembly & use.

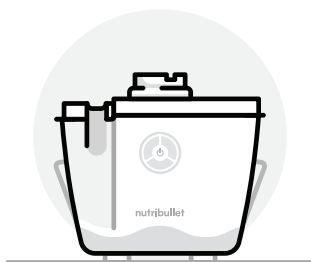


- 1 Place the **Motor Base** on a dry, level counter top. Ensure the dial is set to the "OFF" position and the unit is unplugged.

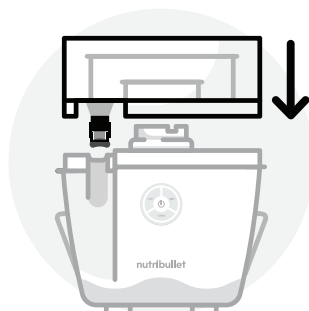


- 2 Place the **Pulp Basin** on top of the Motor Base. Align the **Pulp Basin** with the Motor Base so that the spout is aligned with the dimpled side of the Motor Base.

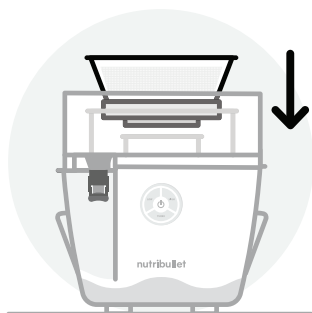

- 3 Align the **Sieve** with the motor drive coupling and push down until it clicks into place. Handle the **Sieve** by gripping the top edges being careful not touch the sharp teeth on the base of the **Sieve**. Ensure the **Sieve** is properly seated in place and securely inside of the Pulp Basin.

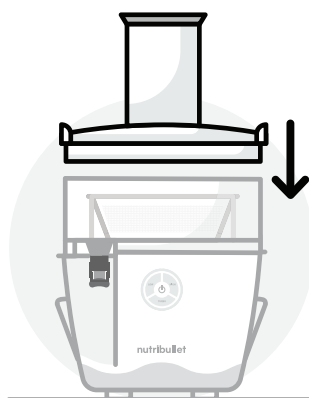


- 4 Place the **Basin Cover** over the Sieve and Pulp Basin. The side "ears" on the **Basin Cover** should align with the "ears" on the sides of the Pulp Basin.

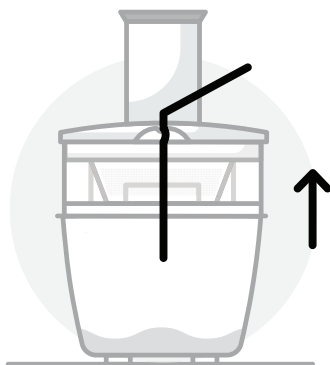

- 5** Raise the **Locking Handle** and move it into the “ears” on each side of the Basin Cover. The **Locking Handle** should be in a vertical position and locked into place.

NOTE: if the **Locking Handle** is not securely in place, the juicer will not power on.

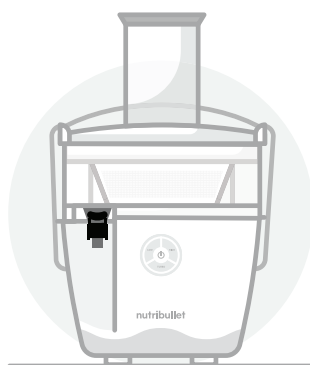

- 6** Swing the **No-Drip Spout** cover up vertically so that it is no longer covering the juice spout.



- 7** Place the **Juice Pitcher Lid** on top of the Juice Pitcher, and open the locking lid latch.




- 8** Slightly angle the **Juice Pitcher** and place it under the juice spout. Align the spout with the hole in the **Juice Pitcher Lid** and level out the **Juice Pitcher**. It will fit snugly into the spout to hold it in place.


Usage instructions.



- 1 Gather all of your desired ingredients. Wash and prepare them for juicing.

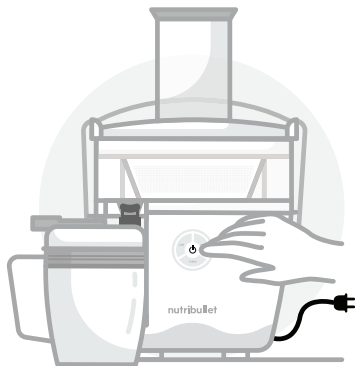

- 2 After the juicer is fully assembled, plug the power cord into an outlet.

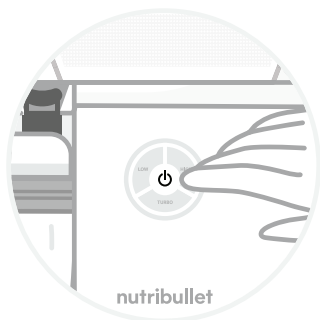

NOTE: If no speed is selected after 10 minutes, the unit will power off.




- 3** Select a speed to begin juicing. The speed selected will illuminate on the control panel. You may start at any speed and can toggle between speeds as desired depending on the type of produce (refer to the chart on page 18 for recommended speeds for each type of produce).

NOTE: always start the juicer before putting food in the feed chute.




- 4** To operate the **Dual-Size Food Pusher**, grip the outer edge of the top of the pusher with one hand and the bottom of the pusher with the other hand. Twist the top of the pusher clockwise to unlock the inner pusher. (The inner pusher is thinner than the full pusher.)

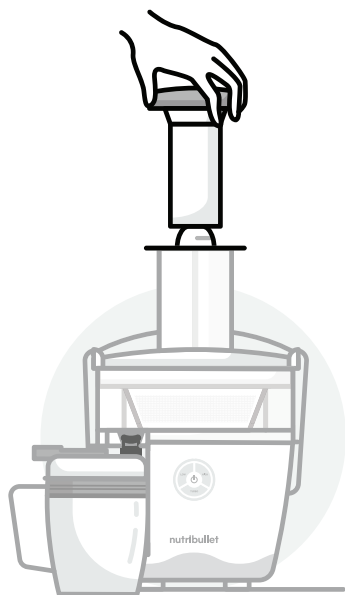

- 5** If you are using smaller ingredients (smaller fruits, leafy greens, stalk vegetables like celery or carrots), place the outer part of the pusher into the chute, making the chute more narrow. While the motor is running, begin gently guiding ingredients into the internal chute using the inner pusher.

TIP: When using the narrow chute for juicing leafy greens, take a small handful of greens and squeeze them into a tighter bunch. Place the bunch into the chute and slowly push down into the Sieve. Using the narrow chute will help to prevent any pieces from flying up out of the chute.

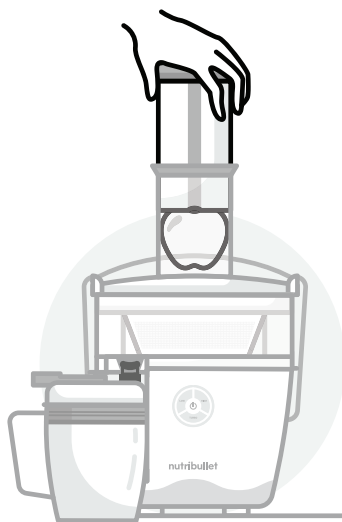

- 6** If you are using larger ingredients, keep the feed chute empty (creating a wider chute) and lock the inner pusher back inside the outer pusher. While the motor is running, begin gently guiding your ingredients into the feed chute using the full **Dual-Size Food Pusher**.


NOTE: You may alternate between the two chute sizes (narrow and wide) as you are juicing.



WARNING: Do not use excess force when pushing food down with the **Food Pusher**, as it will not allow for maximum juice yield.



WARNING: Never use hands/fingers or other tools to push ingredients down the feed chute into the Sieve. Only the **Food Pusher** should be used to push down ingredients.

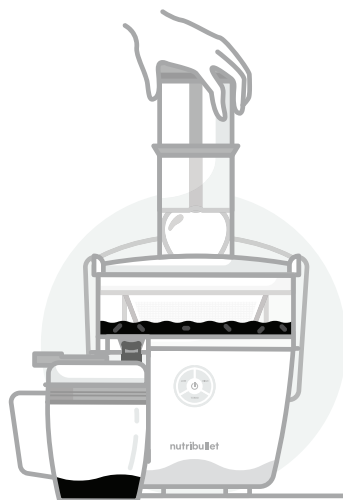

- 7** Juice will begin to flow out of the spout and into the **Juice Pitcher**, while the pulp will be separated and stored in the **Pulp Basin**.



- 8** When the **Pulp Basin** is completely full, it must be emptied before continuing juicing. See disassembly instructions.




- 9** To stop juicing, press the speed at which you are currently juicing. To completely power off the juicer, press the center power button and wait for the **Sieve** to stop spinning. Unplug the unit after each use.



- 10** Remove the **Juice Pitcher** from under the spout. You may close the **Juice Pitcher Lid** and store juice in the **Juice Pitcher** if desired.

NOTE: To do this, you'll first need to tip the **Juice Pitcher** forward at a slight angle, so that the lid's large hole has some separation from the spout, then you can slide out the pitcher. This is the reverse of what you did during assembly.

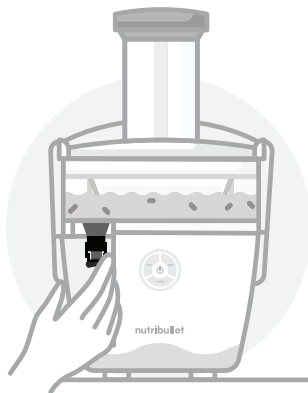


- 11** Immediately move the **No-Drip Spout** cover downward over the spout to avoid any residual drips onto the unit or onto the surface below the juicer.

TIP: We recommend using your left hand to pull the **Juice Pitcher** away, while using your right hand to swing the **No-Drip Spout** cover down and over the spout opening.


Control panel.

MULTI-SPEED CONTROL PANEL & JUICING SETTINGS.

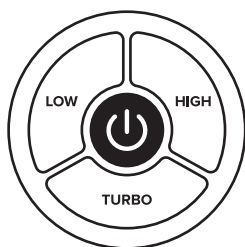


OFF:

Power is **OFF**. If the unit is **ON**, the center power button will be illuminated. Pressing the center button will turn the unit **OFF**.

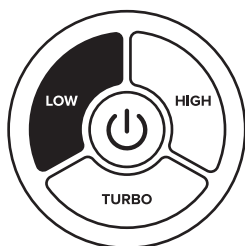


LOW:

Best for juicing softer fruits and vegetables.

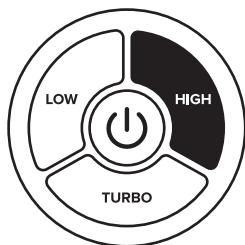

HIGH:

Best for harder produce like pineapples.

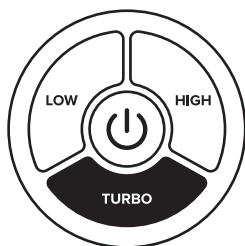

TURBO:

Best for juicing the toughest vegetables like beets or carrots.

Juicing tips.

JUICING SPEED SELECTION GUIDE

INGREDIENTS	SPEEDS	SEASONS
Apple	High	All Year
Beets	High	Spring / Summer
Blueberry	High	Winter / Spring / Summer
Broccoli	High	Autumn / Winter / Spring
Brussels Sprouts	High	All Year
Cabbage	Low	Spring / Summer / Autumn
Carrots	High	Autumn / Winter / Spring
Cauliflower	High	Spring / Summer
Celery	High	All Year
Cucumber	Low	All Year
Fennel	High	All Year
Ginger	High	All Year
Grapes	Low	Spring / Summer
Grapefruit	Low	All Year
Kale	High	All Year
Kiwi	Low	All Year
Lemon	Low	All Year
Lime	Low	All Year
Melons (all)	Low	Summer
Orange	High	Winter
Peaches	Low	Spring / Summer
Pears	High	Autumn / Winter
Pineapple	High	Spring / Summer
Plums	High	Summer / Autumn
Raspberries	Low	Summer / Autumn
Spinach	Low	Spring / Summer
Sweet Potato (raw)	High	Summer / Autumn
Tomatoes	Low	All Year

VITAMINS / NUTRIENTS

source of quercetin

excellent source of folate

good source of vitamin C

high in vitamin C, high in folate, good source of potassium

high in vitamin C, good source of folate

high in vitamin C

excellent source of vitamin A, good source of vitamin C

high in vitamin C, good source of folate

good source of vitamin C, good source of vitamin A

good source of vitamin C

good source of vitamin C and potassium

contains vitamin C, magnesium, and potassium

good source of vitamin K

high in vitamin A, high in vitamin C

excellent source of vitamin A and vitamin C, good source of calcium and potassium

high in vitamin C, good source of potassium and vitamin E

high in vitamin C

high in vitamin C

high in vitamin A, high in vitamin C

high in vitamin C

good source of vitamin C

good source of vitamin C

high in vitamin C

good source of vitamin C

high in vitamin C

high in vitamin A, vitamin C, iron, and folate, good source of magnesium

good source of potassium, high in vitamin A and vitamin C

high in vitamin A, high in vitamin C, good source of potassium

PROPER PRODUCE PREP

Prepare fruit and veggies before inserting them into the juicer:

- Properly clean produce (rinse with produce wash, or lukewarm water and apple cider vinegar).
- Peel or remove skin as needed, and chop food items down to the right size – just small enough to fit easily into the feed chute, without having to force the pieces down with the **Food Pusher**.
- Remove rind from all citrus fruits before juicing.
- Remove large pits and seeds from stone fruits before juicing.

FEED CHUTE

Selecting which **Food Pusher** to use (narrow or wide) affects feed chute thickness. If you pull out the thinner inner food pusher from within the full pusher, you'll place the outer part into the chute, making the chute narrow. If you use the full (wide) pusher, the feed chute will be wider.

- Never place your hand or fingers into the feed chute when it is attached to the juicer.
- Always start the juicer before adding food to the feed chute. The unit must be running when items enter it.
- Do not overload the feed chute. Items must be added gradually, at a pace the juicer can keep up with.
- Use only the provided **Food Pusher** to push food into the feed chute. Never use fingers, utensils, or any other apparatus.
- Never use excessive force to push items into the feed chute.
- When juicing, ensure all produce has moved through the feed chute and into the **Sieve** before adding more.
- If any food gets stuck in the feed chute, use the **Food Pusher** to move it down the chute and into the **Sieve**.

CONSUMING JUICE AND PULP

Instead of composting or throwing away the pulp left over after juicing, you can choose to consume it. See our **Recipe Guide** for some fun tips on what to do with the leftover pulp. By using these creative ideas, you can enjoy pulp in a variety of delicious (and healthy) ways.

- Whether you prefer sweet or savory, you can use pulp to create some tasty treats!
- For best taste, consume fresh juice and pulp within 48 hours of juicing.

NO-GO FOODS

Foods that should NEVER be used in this juicer:

- Thicker foods that do not contain juice to extract (for example, bananas or avocados).
- Frozen fruits or vegetables.
- Stone fruits that have large pits or seeds that have not been removed. Stone fruits may be used only if the seed or pit has been removed.


OVERHEATING, SPEED SELECTION, & AUTO SHUT-OFF

- If the motor overheats, the juicer will turn off.
- If the juicer stops working, unplug it and allow it to cool down for at least fifteen minutes before attempting to use again.
- Refer to the Troubleshooting Guide for instructions on what to do if the unit turns off or is not working.


Disassembly.




- 1 Ensure the unit is powered **"OFF"** and unplugged.

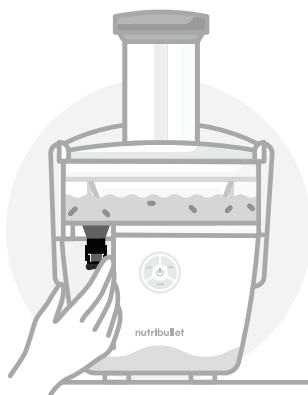


- 2 Remove the pitcher from under the spout. To prevent drips use the **No-Drip Spout** cover to close the juice spout.

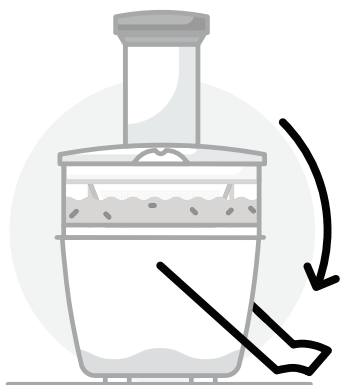


- 3 Unlock the **Locking Handle** from the **Basin Cover** by pulling the handle backward out of the "ears" on either side of the **Basin Cover**. Move the handle down.

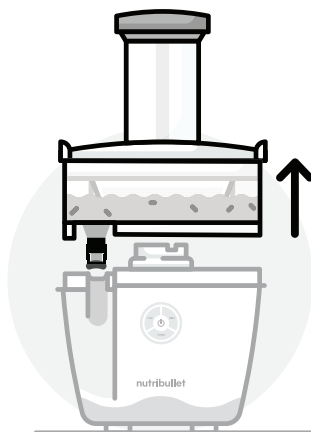


- 4 Remove the **Pulp Basin** from the Motor Base by pulling upwards with the **Basin Cover** and **Sieve** still in place, and take it directly to your sink.

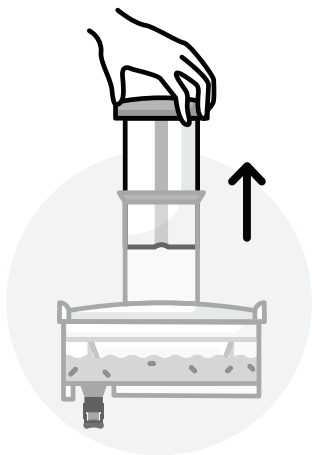


- 5** Remove the **Food Pusher** by lifting it out of the feed chute.

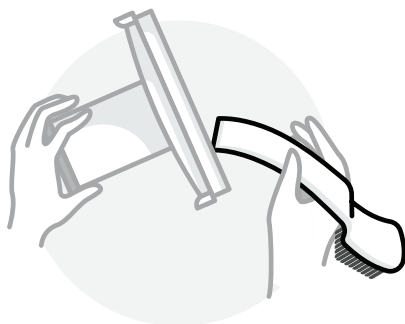

- 6** Lift the Basin Cover vertically off of the Pulp Basin and remove any pulp from the inside of the cover. You may use the flat end of the **Cleaning Brush** to scrape pulp off of the cover.

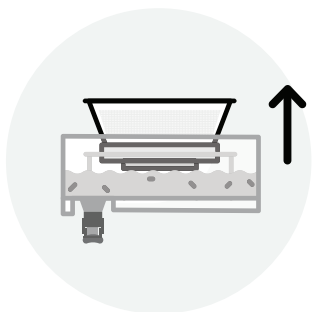

- 7** Gently lift the **Sieve** vertically out of the center of the Pulp Basin. Clean the **Sieve** right away (see care instructions).

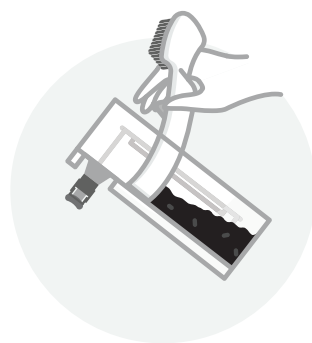

- 8** Empty the **Pulp Basin**. Use the flat end of the **Cleaning Brush** to easily scrape out the pulp and set it aside for use in other recipes or composting. Or empty the pulp into your waste bin or compost.

Care & maintenance.

Cleaning the NutriBullet Juicer Pro™ is quick and easy. All components except for the Food Pusher and Motor Base are dishwasher safe. Read on for some cleaning tips and best practices.

- 1** Always ensure the **Motor Base** is unplugged before you begin assembly, disassembly, cleaning or storage of the unit.
- 2** Once the **Pulp Basin** is emptied, rinse all parts under running water.
- 3** Use the **Cleaning Brush** to scrub the **Sieve** under running water. Be sure to properly clean the **Sieve** every time you juice, as minerals from fruits and vegetables can cause build-up in the **Sieve** which may prohibit maximum juice extraction.



WARNING: Always use precaution when cleaning the **Sieve**, as it contains sharp blade teeth on the flat disc part.

TIP: Always clean the **Sieve** as soon as possible after juicing using the **Cleaning Brush**. If allowed to sit, pulp will dry on the **Sieve** and it will become more difficult to scrub blocked holes. If this happens, be sure to allow the **Sieve** to soak in hot water for 30 minutes.

- 4** All Juicer Pro components except the **Motor Base** are dishwasher safe. You may also hand wash with warm soapy water.

TIP: Do not use the Sterilize cycle on your dishwasher to clean your juicer as it may cause parts to deform.

- 5** Wipe down **Motor Base** with a clean, damp cloth.

WARNING: Never submerge **Motor Base** into water or other liquid.



Cleaning instructions for your NutriBullet Juicer Pro™ storage accessories:

- **Glass Storage Bottles** and lids are dishwasher safe.
- **Freezer Trays** and lids are dishwasher safe.

Juice & unit storage.

Included with your Juicer Pro are some great storage accessories: a Juice Pitcher, two Juice Storage Bottles, and two Freezer Trays.

The storage accessories give you three options for storing juice:

1 IN THE PITCHER:

The **Juice Pitcher** stores up to 800 ml. Make sure to store the pitcher upright in your refrigerator, with lid tightly sealed, latch closed, and nothing atop the lid.

2 IN THE BOTTLES:

Use each **Storage Bottle** to save up to 350 ml of juice, so you can enjoy it later — either at home or on the go. Fill up the bottles leaving about .6 cm of room at the top, leaving just enough air in the bottle.

3 IN THE TRAYS:

Each **Freezer Tray** holds a total of 470 ml: one tray has eight 60 ml wells, and the other tray has four 120 ml wells. These are a great way to preserve juice longer-term, then defrost it anytime for a full drinkable portion. Or, use the trays to make frozen juice shots. (See our **Recipe Guide** for some inspiring recipes for frozen juice shots to add to your favorite beverages, or to drink on their own.)

For best taste, consume fresh juice and pulp within 48 hours of juicing.

Do not place anything on top of the Pitcher Lid when storing in the refrigerator.

Store remaining pieces of the unit in a safe place where they will not be damaged and won't cause harm as some pieces are sharp!

Troubleshooting guide.

- 1 PROBLEM:** The power button flashes three times and then remains illuminated when I select a speed.

SOLUTION: This means that the unit is not properly assembled. Ensure the **Pulp Basin** is properly seated on top of the **Motor Base**, and the **Locking Handle** is locked into place.

- 2 PROBLEM:** The juicer stopped in the middle of juicing, and the power button flashed.

SOLUTION: Ensure the **Locking Handle** is securely locked into place.

- 3 PROBLEM:** The juicer stopped in the middle of juicing, and the power button remains illuminated.

SOLUTION: You have exceeded 10 minutes of continuous running time. Unplug the juicer and keep the unit off for 15 minutes before continuing use.

- 4 PROBLEM:** The juicer has stopped running, and all lights flashed three times.

SOLUTION: The juicer has overheated. Unplug the unit and allow it to cool down for 15 minutes before continuing use.

Replacement parts.

To order additional parts and accessories, please visit our website at bulletbrands.com.au / bulletbrands.co.nz.

CDB  GOLDAIR

one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:**

We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.

- **For Australian Consumers:**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

**YOUR WARRANTY
DOES NOT COVER:**

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.

CDB  **GOLDAIR**

NEW ZEALAND

PO Box 100-707
NSMC
Auckland 0745
0800 285538
www.bulletbrands.co.nz

AUSTRALIA

PO Box 574
South Morang
Victoria 3752
1300 285538
www.bulletbrands.com.au

NutriBullet is a registered trademark of CapBran Holdings, LLC.
Copyright © 2020 CapBran Holdings, LLC. All rights reserved.
Los Angeles, CA 90025, USA. Made in China.

NutriBullet, LLC | All rights reserved.
NutriBullet and the NutriBullet logo are trademarks of
CapBran Holdings, LLC registered in the U.S.A. and worldwide.

220-240VAC 50-60Hz 1000W

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

200821_NBJ07200 (NBj-200)