

# nutribullet® ultra 1200



## User guide.

**⚠ WARNING!** To reduce the risk of serious injury, read the User guide before operating your nutribullet® Ultra. Save these instructions. Be sure anyone who uses the nutribullet® knows how to do so safely.

# Important safeguards.

When operating your nutribullet® Ultra, remember:  
**SAFETY COMES FIRST.**

**WARNING! To avoid the risk of serious injury, death, property damage or damage to your device carefully read all instructions before operating your nutribullet® Ultra.** When using any electrical appliance, basic safety precautions should always be observed, including the following important information. **READ CAREFULLY AND THOROUGHLY BEFORE OPERATING.**

If you let anyone else use your nutribullet® Ultra, make sure that they understand the health and safety information in this User Guide, as well as any additional safety or usage instructions provided. Each person using a device should completely read the User Guide and become familiar with the safe operation of the unit.

## ! Save these instructions! ● FOR HOUSEHOLD USE ONLY

### PERSONAL SAFETY



**WARNING!** Failure to follow all instructions regarding the use of your nutribullet® Ultra may result in serious personal injury, death, or property damage. Be aware of possible hazards when using or storing your nutribullet® Ultra.

**NEVER** blend hot, warm, or carbonated ingredients or liquid in the nutribullet® Cup! Such use may over-pressurize the nutribullet® Cup, causing the Cup to separate with force when removed from the Motor Base or opened, which may result in bodily injury from the hot contents or exposed blades.

- **DO NOT blend hot or warm ingredients.**

- Starting with hot or warm ingredients allows more heat and pressure to build inside the Cup when blending. This may cause the Cup to separate, expelling hot contents or exposing the blade, both of which may cause injury.

- Only blend room-temperature or refrigerated ingredients (21°C or cooler).

- **DO NOT blend for more than one minute.**

- Blending causes ingredients to heat up, which builds pressure in the Cup over time. Continuous blending for more than one minute may cause the Cup to separate, exposing the blade, or expel heated contents, causing injury.

- Allow contents to settle at least 10 to 15 minutes after running multiple consecutive extraction cycles. **DO NOT** attempt to open the Cup if it feels hot or warm to the touch. See **Cup Caution** section for details.

- **DO NOT blend anything carbonated or effervescent — no bubbles.**

- Carbonated and effervescent ingredients (e.g., soda, baking powder, baking soda, yeast, some batters, cake mix, dry ice, or other things that become bubbly) release gasses that increase pressure. Pressure from released gases can cause a sealed nutribullet® Cup to burst, resulting in possible injury and/or property damage. **Note: Some protein powders include effervescent**

**ingredients. Always check the ingredients of all supplements before adding.**

- **DO NOT overfill.**

- Filling above the MAX line can result in leakage. The cyclonic action of the nutribullet® requires space to extract effectively. Exceeding the MAX line can result in leakage and may create a dangerous pressurization which can cause the Cup and Rapid Extractor Blade assembly to separate.

- **DO NOT leave blended foods inside sealed Cup.**

- Blended mixtures can spoil and ferment, increasing pressure when left inside the Cup.
- Use the To-Go Lid or transfer to another container for storage after blending.

- **Do not leave any non-food items in the Cup when blending. Remove all utensils from the Cup.**



**WARNING!**

**NEVER** attempt to open a sealed nutribullet® Cup if it feels hot or warm to the touch. The contents may be heated and pressurized, which can cause the Cup to separate with force when opened, potentially resulting in bodily injury. **If the Cup feels hot or warm, take the following steps:**

1. **LEAVE ALONE, DO NOT OPEN.** Leave the Cup where it is and do not touch it or allow another individual to touch. **DO NOT** attempt to disengage the Cup from the Motor Base or separate the Cup from the Rapid Extractor Blade by applying heat, force, or prying apart the components, which may crack or shatter the Cup and result in bodily injury.

2. Do not continue to blend.
3. Allow the Cup to cool for at least 30 minutes. Do not put in the fridge or freezer to cool down.
4. After 30 minutes, check if the Cup is completely cooled. If still warm, allow to cool more.
5. If cool to the touch, slowly disengage the Cup from the Motor Base.
6. With the Cup pointed away from your face and body, use a towel to slowly untwist the Cup from the Rapid Extractor Blade and gently release any residual pressure. If you are still unable to remove the Cup from the Rapid Extractor Blade, contact Customer Service: **AU: 1300 285 538 / NZ: 0800 232 633.** **If you are unable to untwist the Cup from the Rapid Extractor Blade, NEVER** leave the sealed contents out

for a prolonged period of time. The contents may ferment causing the Cup to separate with force, which can result in bodily injury or property damage. Dispose of the Cup and contents properly so you or others will not be injured if fermentation causes the Cup to separate.



WARNING:

**BLADES ARE SHARP!  
HANDLE WITH CARE TO  
AVOID BODILY INJURY.**

Non-food items or hard ingredients may damage the blades. Routinely inspect the blades and discontinue use if damaged. Continued use with a damaged blade or use inconsistent with these instructions may result in bodily injury, property damage, or damage to your unit.

- Do not touch the sharp edges of the blades. To avoid laceration injury, do not handle or touch any blade edge.

- **NEVER** store any exposed Rapid Extractor Blade in the Motor Base unattached to a nutribullet® Cup. An exposed blade can present a laceration hazard.
- **AVOID CONTACT WITH MOVING PARTS!** Keep hands and utensils out of and away from the blade while blending to reduce the risk of severe personal injury or damage to the unit.
- Do not use this blender for anything other than its intended use
- Close supervision is necessary when any appliance is used by or near children to ensure they do not play with the appliance. Keep cord out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they

are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.

Always make sure the Cup is securely locked on the Motor Base before blending. The motor will not turn on unless the Cup is set in the locked position.

- Do not exceed the MAX line. Exceeding the MAX line can result in leakage.
- Do not remove the Cup while the unit is in operation.
- Periodically inspect your nutribullet® Ultra blender components for damage or wear that may impair proper function or create a safety hazard.
- The Rapid Extractor Blade is designed for longevity and comes with a 5-year warranty.

- We recommend replacing at least every 5 years or at first signs of wear and tear.
- Periodically inspect the blades for damage. **DO NOT** use the Rapid Extractor Blade if the blades do not rotate freely or if the gasket is missing or damaged.
- **NEVER** operate your nutribullet® Ultra if the Cup is empty.
- Do not overfill Cup with ice. Always use sufficient liquid ingredients when blending.
- Do not attempt to plug the unit into an electrical outlet outlet with wet hands.
- Cups and To-Go Lids are **NOT** microwave safe.
- Do not use the Cup if you detect cracking, cloudiness, or other damage. You may purchase new Cups at: **bulletbrands.com.au / bulletbrands.co.nz**
- Do not use the Rapid Extractor Blade as a storage lid as the blended mixture can ferment, increasing pressure within the Cup that may cause the Cup and blade to separate, potentially resulting in bodily injury and property damage. Use the To-Go Lid or transfer to a vented container for storage after blending.
- Do not use after-market replacement parts for your nutribullet® Ultra. Use of after-market replacement parts may result in damage to your nutribullet® or create safety hazards resulting in bodily injury or damage. Only order replacement parts from **bulletbrands.com.au / bulletbrands.co.nz** or by contacting **Customer Service: AU: 1300 285 538 / NZ: 0800 232 633**, please specify the model for parts that are compatible with your unit.
- **ALWAYS** securely tighten the Rapid Extractor Blade to the Cup to prevent leakage.
- Do not attempt to disengage the Cup from the Motor Base if the Cup starts to leak during blending. Allow the motor to come to a complete stop before removing the Cup.
- Do not crush ice. Sufficient liquid must be blended with ice and other frozen ingredients. Your nutribullet® Ultra is not intended to be used as an ice crusher.
- Do not blend stone fruit in this appliance unless pits/seeds have been removed. Fruit pits may damage the Cup, potentially resulting in shattering and personal injury. In addition, apple seeds and the pits of cherries, plums, peaches, and apricots contain a chemical known to release cyanide into the body when ingested.
- **DO NOT USE** the Rapid Extractor Blade for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor and/or the blade.
- Always **POWER OFF** and **DISCONNECT** the unit when assembling, disassembling, changing accessories, or cleaning.
- Do not overload the Cup by exceeding the MAX line. The blades may stop turning if the Cup is overloaded. If this occurs, turn off the unit, empty contents down to the Max line, reattach the Cup, and resume blending.
- Always consult your physician regarding health and nutrition concerns and advice. The information contained in this User Guide, accompanied Recipe Guide, and/or online recipes are general suggestions and ideals and are not meant to replace the advice of your physician.

- **MEDICATION INTERACTIONS** If you are taking any medication, especially cholesterol-lowering medication, blood thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before trying any of the smoothie recipes contained in the Recipe Guide or online recipes.

## PRODUCT SAFETY



**WARNING!** NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.

- Do not place your nutribullet® blender on uneven or unstable surfaces.
- Do not operate if the Motor Base, Cup, or blade are damaged in any manner. Contact Customer Service for assistance at:  
**AU: 1300 285 538 / NZ: 0800 232 633.**

- Use only genuine nutribullet® attachments/ accessories specifically designed for your nutribullet® Ultra blender. Aftermarket parts are not made to nutribullet® specifications and may damage your unit or cause serious injury.
- The risk of fire, shock or damage to nutribullet® Ultra during cleaning can be reduced by taking the following precautions:
  - Unplug and turn your device off before cleaning.
  - Only clean the exterior of your device.
  - Clean your device with a dry cloth.
- **NEVER** immerse in water or other cleaning liquids when cleaning . Only gently wipe and dry with a clean cloth.
- Do not place any of the nutribullet® Ultra parts in a microwave, conventional oven, air fryer or stovetop pot,

or immerse in boiling water, as this will damage the part.

- **NEVER** use the sanitize or heat cycle on any nutribullet® part or accessory when using the dishwasher. This may cause warping and possibly hazardous conditions.
- **NEVER** place a nutribullet® Cup in the freezer or use the Cup as a storage container in the freezer.
- Make sure your nutribullet® Ultra is powered off and the motor and blades are completely stopped before removing or cleaning unit.
- Do not remove the Cup until blades have come to a complete stop. Removing before the blades come to a complete stop can cause damage to the Rapid Extractor Blade coupling or motor gear.
- **DO NOT USE OUTDOORS.**
- **ALWAYS UNPLUG THE NUTRIBULLET® WHEN NOT IN USE.**
- Modification, improper use, and failure to follow the instructions for proper set up, use, and care of your nutribullet® Ultra blender can increase the risk of serious personal injury, death, or property damage.
- Do not use the unit in locations with different electrical specifications or plug types.
- **Do not use the unit with a voltage converter device as it may cause electrical shorting, fire, or electric shock, resulting in personal injury or product damage.**
- Do not use the unit in an area that is wet or anywhere it could become wet.
- Do not use if the cord, plug, or Motor Base was immersed in water or other liquids.

- Do not modify the electrical cord in any way.
- Do not operate with a damaged electrical cord or plug. The electrical cord and plug are not suitable for replacement. If damaged, the appliance should be replaced. Contact Customer Service for assistance at: **AU: 1300 285 538 / NZ: 0800 232 633.**
- Do not allow or place the electrical cord near or touching any hot surfaces, heat source, or flame, including the stove.
- Do not allow the electrical cord to hang over the edge of the table or counter.
- Do not pull, twist, or damage the power cord.
- Overloading the Cup with ice or other hard ingredients, or use without sufficient liquids may overheat the motor

and engage the thermal breaker. If the internal thermal breaker shuts off the motor, unplug the Motor Base and let it cool for an hour before attempting to use it again. The thermal breaker will reset when the unit is unplugged and the thermal breaker cools down.

- Always **UNPLUG** the nutribullet® Ultra when it is not in use, and when assembling, disassembling, changing accessories, or cleaning.
- Use of incompatible parts or aftermarket parts may result in damage to your nutribullet® Ultra or create safety hazards that may cause personal injury or damage. When ordering replacement parts always use genuine nutribullet® parts and accessories from **bulletbrands.com.au / bulletbrands.co.nz** or contact Customer Service at:

**AU: 1300 285 538 / NZ: 0800 232 633.**

- **NEVER** obstruct the ventilation openings on the bottom of the Motor Base of your nutribullet® Ultra. Openings on the bottom of the Motor Base should be free of dust or lint and never obstructed. Obstructing the ventilation openings may overheat the motor and result in a fire, increasing the risk of serious personal injury, death, or property damage.
- **ALWAYS** operate the nutribullet® on a level surface, leaving unobstructed space beneath and around the Motor Base to permit proper air circulation. Slots on the bottom of the Motor Base are provided for ventilation to ensure reliable operation and to prevent motor overheating.
- **NEVER** place your nutribullet® Ultra on top

of flammable materials such as newspapers, tablecloths, napkins, dishtowels, place mats, or other similar types of materials

- Periodically inspect your nutribullet® Ultra components for damage or wear that may impair proper function or present a danger or safety hazard. Discontinue use if you detect cracking, cloudiness, or damage to the Cups or other parts. Ensure that the blades to the Rapid Extractor Blade rotates freely and that gasket is not missing or damaged. Make sure that the motor base is unobstructed and clean. Follow maintenance instructions in this user guide on pages 23–26. Never operate your nutribullet® Ultra with damaged parts or components. If your nutribullet® Ultra malfunctions or is damaged or

compromised in any way, immediately discontinue use and contact customer service at:

**AU: 1300 285 538 /**

**NZ: 0800 232 633**

with any comments, questions, or concerns.

**! Save these  
• instructions!**

 
# Contents.

- 2 Important safeguards**
- 16 Assembly guide**
- 17 Control panel**
- 18 Using your nutribullet® Ultra**
- 22 Maintenance & Troubleshooting**
- 23 Care & maintenance**
  - 26 Replacement parts**
- 27 nutribullet® Ultra  
one-year limited warranty**
- 29 nutribullet® Ultra  
Rapid Extractor Blade  
5-year limited warranty**

Thank you for purchasing the nutribullet® Ultra.



# Assembly guide.

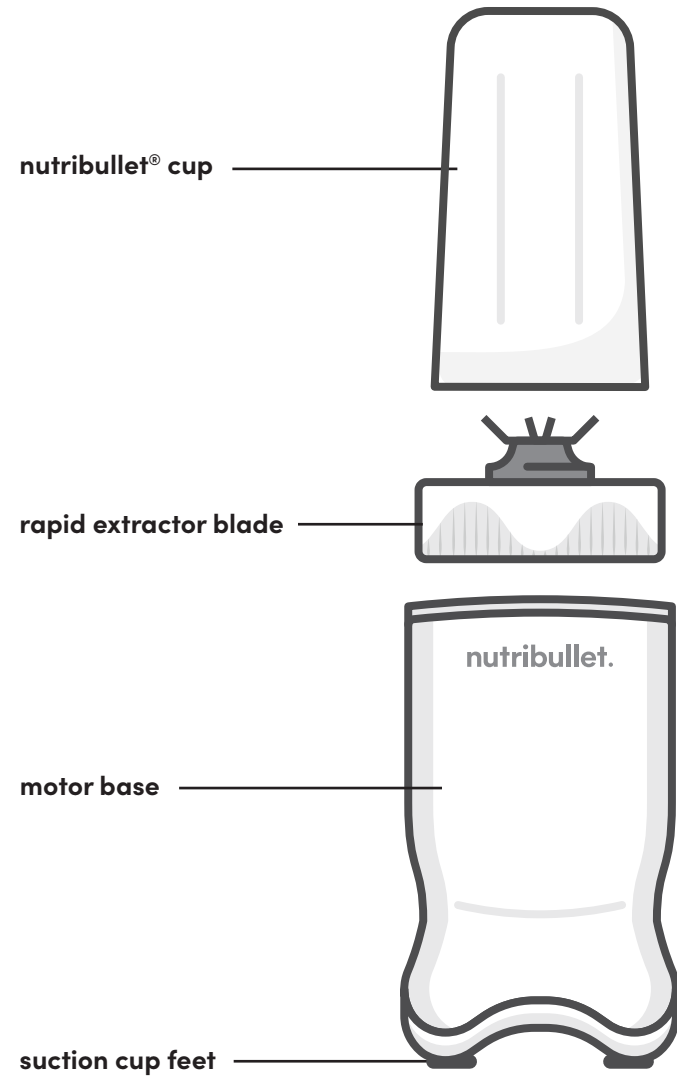

NOTE: different nutribullet® Ultra configurations may come with different accessories.

# Control panel.



## OFF

The Control Panel is not illuminated.



## BLEND

After twisting the Blade/Cup assembly onto the Motor Base, the Control Panel will appear. Touch the illuminated Solid Circle icon on the Control Panel to activate the automatic 30-second blending program.



## PULSE

After twisting the Blade/Cup assembly onto the Motor Base, the Control Panel will appear. Press and hold the Dashed Circle on the Control Panel to activate the pulse feature. For short, intermittent pulses, tap the Pulse icon. For longer pulses, tap and hold the Pulse icon until your desired consistency is reached.

# Using your nutribullet® Ultra.

 


## PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE NUTRIBULLET®:

Creating too much pressure in the nutribullet® Cup can result in injury from hot contents, flying components, or blade exposure.

- **DO NOT** blend hot or warm ingredients, carbonated liquids, or effervescent ingredients.
- Do not overfill the Cup.
- **DO NOT** blend ingredients for more than one minute.
- Do not store blended foods in sealed Cup.
- **DO NOT** attempt to open a sealed nutribullet® Cup if it feels hot or warm to the touch. The contents may be heated and pressurized, causing the Cup to separate with force when opened, and potentially resulting in bodily injury.
- **Blades are sharp! Handle with care to avoid bodily injury. NEVER** store any exposed Rapid Extractor Blade in the Motor Base unattached to a nutribullet® Cup.

- 1** Review all warning and caution statements in the Important Safeguards section (pg. 2-13) and on the previous page before proceeding to Step 2.

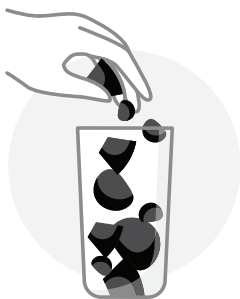

- 3** Add ingredients and liquid to the **nutribullet® Cup**.

**!** **WARNING!** To avoid leakage and over-pressurizing, do not overfill beyond the **MAX** line.

- 2** Place the **Motor Base** on a clean, dry, level surface such as a counter or table.



- 4** Twist the **Rapid Extractor Blade** onto the **nutribullet® Cup** until it's tightly sealed.

 
**!** **WARNING!** Rapid Extractor Blade is sharp. Handle with care.




- 5** Plug the **Motor Base's Power Cord** into an electrical outlet.



- 7** Twist the **Cup** clockwise onto the **Motor Base** to lock it into place. (A "click" signals that the **Cup** is locked.) This will illuminate the **Control Panel**.

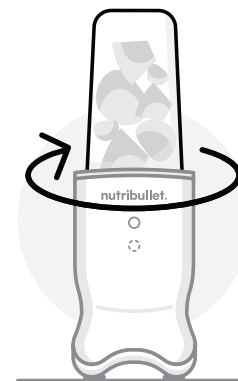


 - 6** Flip the **Cup** downward and set it onto the **Motor Base**.

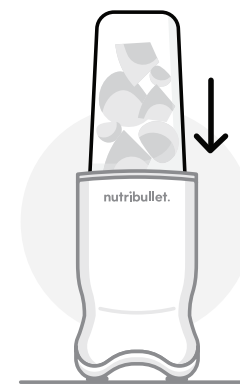

 - 8** Pressing the **Solid Circle** will start an automated blending cycle. When the blending cycle is activated, it will automatically stop after 30 seconds. Pressing and holding the **Dashed Circle** will pulse blend your ingredients. Release the **Dashed Circle** to stop blending.



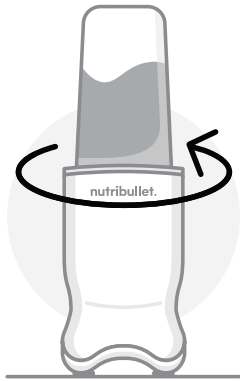

- 9** Twist the **Cup** counterclockwise to unlock and remove it from the **Motor Base**. You will hear a “click” when the **Cup** unlocks. Enjoy!

**! WARNING! NEVER blend hot, warm, or carbonated ingredients or liquid in the nutribullet® Cup! Such use may over-pressurize the nutribullet® Cup, causing the Cup to separate with force when removed from the Motor Base or opened, which may result in bodily injury from the hot contents or exposed blades.**

**NEVER apply heat or force, or attempt to pry apart the Cup from the Rapid Extractor Blade. Doing so may crack or shatter the Cup resulting in severe bodily injury. Allow the contents of the Cup to settle down for at least 30 minutes before attempting to open again. If still unable to open, contact Customer Service.**

# Maintenance & Troubleshooting.

## PROBLEM:

The unit does not power on **OR** the Control Panel does not appear.

## SOLUTIONS:

- Make sure the Power Cord is plugged into an electrical outlet, and that outlet has power.
- Make sure that the Cup/ Blade assembly is securely attached to the Motor Base. You will hear a ‘Click’ when they are securely attached.

## PROBLEM:

The Control Panel flashes continuously.

## SOLUTIONS:

- You have consecutively blended for too many cycles, **OR** the unit has overheated. If this has occurred, unplug the unit and allow it to cool down for at least 15 minutes before attempting to use again.

## PROBLEM:

The unit has become very loud during the blending cycle.

## SOLUTIONS:

- Check that you have not exceeded the MAX fill line on the Cup when filling with ingredients. Overfilled Cups can cause strain on the motor which will result in an increased noise level.

## PROBLEM:

There is an odor coming from the Motor Base when it is in use.

## SOLUTIONS:

- During the first few uses of the unit, there may be a smell emitted from the Motor Base, but this is normal with the first use of the product and should not cause alarm.
- If you notice a smell after using the product several times, check to ensure that you have not exceeded the MAX fill line on the Cup with ingredients. Overfilled Cups can cause strain on the motor which can result in an odor.

# Care & maintenance.

 


## PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE NTRIBULLET®:

- Always power off and unplug your nutribullet® Ultra when not in use or when assembling, disassembling, changing accessories, or cleaning.
- Always wait until the motor comes to a complete stop before removing the Cup or handling the unit.
- Do not place Cups and To-Go Lids in the microwave, they are not microwave safe.
- Do not store an exposed Rapid Extractor Blade on the Motor Base without attaching a Cup.
- **NEVER** place the Rapid Extractor Blade, Cups, or To-Go Lids on the bottom rack or use the heat/sanitize cycle of your dishwasher when cleaning. It may cause warping and possible safety hazards.
- **NEVER** immerse in water or other cleaning liquids when cleaning. Gently wipe and dry with a clean cloth.
- Do not place any parts or accessories in a microwave, conventional oven, air fryer or stovetop pot, or immerse in boiling water to clean or sanitize, as this will damage the part.
- Make sure that the Motor Base ventilation areas are unobstructed and clean.
- Periodically inspect your nutribullet® Ultra components for damage or wear that may impair proper function or present a danger or safety hazard. Never operate your nutribullet® Ultra with damaged parts or components:
  - Discontinue use if you detect cracking, cloudiness, warping, or damage to the Cups.
  - Discontinue use if the Rapid Extractor Blade does not rotate freely, or if the gasket is missing or damaged. Continued use with a damaged blade, or use inconsistent with these instructions may result in bodily injury, property damage, or damage to your unit.
- **NEVER** attempt to use your nutribullet® Ultra if it malfunctions or is damaged or compromised in any way. Immediately contact customer service at:  
**AU: 1300 285 538 /**  
**NZ: 0800 232 633.**
- Depending on use, it is recommend that the Rapid Extractor Blade be replaced at least every 5 years.
- **NEVER** use after-market replacement parts for your nutribullet® Ultra. Aftermarket parts are not made to nutribullet® specifications and may damage your unit or cause serious injury. Use only genuine nutribullet® attachments/accessories specifically designed for your nutribullet® Ultra blender by calling Customer Service at:  
**AU: 1300 285 538 /**  
**NZ: 0800 232 633.**



- 1 Once blending is complete, make sure your **nutribullet® Ultra Motor Base** is powered off and unplugged from its outlet.

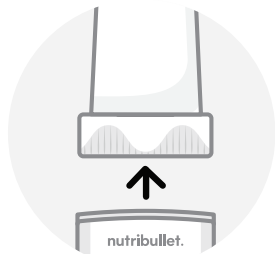

- 2 Detach the **nutribullet® Cup** and **Rapid Extractor Blade** from the **Motor Base**.
- 3 Clean the individual components as follows:

#### EXTRACTOR BLADES:

- Rinse the Rapid Extractor Blade with warm, soapy water.
- Use a small brush or sponge dampened in soapy water to remove any residue on the Rapid Extractor Blade.

**NOTE:** It's best to clean the Rapid Extractor Blade immediately after use to avoid the buildup of residue.

#### MOTOR BASE:

- Use a sponge or dishcloth dampened with soapy water to clean the surface of the Motor Base.
- Use a small brush to scrub the actuator system of the Motor Base.

#### CUPS & TO-GO LIDS:

- Cups and To-Go Lids are top rack dishwasher-safe. Rinse or scrub beforehand to remove any debris.

**! WARNING! NEVER place the Rapid Extractor Blade, Cups or To-Go Lids on the bottom rack or use the heat/sanitize cycle of your dishwasher when cleaning, as this may cause warping and possible safety hazards.**

#### STUCK INGREDIENTS:

- For stuck ingredients on Cups or Rapid Extractor Blades, fill with room temperature water to the MAX line and add 1-2 drops of dish soap.
- Twist on the Rapid Extractor Blade and blend for 20-30 seconds to loosen debris enough to scrub away with soap and water.

#### STORAGE:

- Always store your **nutribullet® Ultra** upright without any objects placed on top of it. Store accessories in a safe place until use.

---

### For replacement parts.

Visit:  
**bulletbrands.com.au**  
**bulletbrands.co.nz.**  
 or call customer service at  
**AU: 1300 285 538 /**  
**NZ: 0800 232 633.**

# CDB GOLDAIR

## one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:**  
We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:**  
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:**

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

**YOUR WARRANTY DOES NOT COVER:**

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

**This warranty does not replace but is in addition to your statutory rights.**

**This warranty does not apply to accessories supplied with the item.**

**This warranty applies only to the original purchaser and may not be transferred.**

**Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.**

**PLEASE NOTE:**

Only the defective product or parts returned to place of purchase will be replaced under this warranty.

---

# CDB GOLDAIR

**NEW ZEALAND**  
PO Box 100-707  
NSMC  
Auckland 0745  
0800 232633  
bulletbrands.co.nz

**AUSTRALIA**  
PO Box 574  
South Morang  
Victoria 3752  
1300 285538  
bulletbrands.com.au

nutribullet® is a registered trademark of CapBran Holdings, LLC.  
Copyright © 2023 CapBran Holdings, LLC. All rights reserved.  
Los Angeles, CA 90025, USA. Made in China.

# nutribullet® Ultra Rapid Extractor Blade 5-year limited warranty.

The Ultra Rapid Extractor Blade that comes with your nutribullet® Ultra or that is purchased separately, is covered by a five (5) year limited warranty that applies to purchases made from authorized retailers of the nutribullet® products.

nutribullet® warrants, subject to the conditions and exclusions described herein, that the Ultra Rapid Extractor Blade shall be free from defects in material and workmanship for a period of five (5) years from the date of delivery of the product to the consumer when it used under normal household conditions and is maintained according to the requirements discussed in the Owner's Guide.

## What is covered by the Ultra Rapid Extractor Blade limited warranty?

Your nutribullet® Ultra Rapid Extractor Blade will be replaced within five (5) years from the date of delivery of the product to the consumer under the terms of this limited warranty if:

- The blade breaks due to a manufacturing defect.
- There is a bearing failure.
- There is a grinding sound from the blade assembly when running.
- The blade gasket leaks or becomes damaged. Note: removal of blade gasket will void the warranty.
- The blade stops rotating.
- The blade threading for the mixing cup becomes

damaged when used according to the User Guide.

- The drive coupling loosens or becomes damaged.
- The plastic blade housing cracks or breaks when used according to the User Guide.
- The blade to base engagement and recognition system becomes damaged.

## Is there a replacement blade warranty?

In the event a replacement Ultra Rapid Extractor Blade is issued, the warranty coverage ends upon the later of six (6) months following the receipt date of the replacement Ultra Rapid Extractor Blade, **OR** the remainder of the existing 5-year limited warranty.

## What is not covered by this warranty?

- Normal wear and tear, such as scratching,

subtle wear, or fading of the titanium coating of the Ultra Rapid Extractor Blade.

- Any Ultra Rapid Extractor Blade that has been tampered with or used for commercial purposes.
- Any Ultra Rapid Extractor Blade that has been modified.
- Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance or damage due to any mishandling.
- Damage caused by a failure to follow the operating instructions in the User Guide.
- Consequential and incidental damages.
- Defects caused by repair persons not authorized by nutribullet, including without limitation, defects include damages caused in the process of shipping, altering, or repairing the Ultra Rapid Extractor Blade when the repair is performed by a repair



person not authorized by nutribullet®.

- Products purchased, used, or operated outside of Australia and New Zealand.
- Shipping and handling fees associated with replacing your Ultra Rapid Extractor Blade under the terms of this limited warranty.
- Any Ultra Rapid Extractor Blades with a date code that is over 6 years old.
- Cosmetic changes to the color of the plastic blade housing that does not affect performance, such as discoloration.

### **How to initiate a warranty claim for your Ultra Rapid Extractor Blade.**

You must visit our website at: **bulletbrands.com.au / bulletbrands.co.nz** or call: **AU: 1300 285 538 / NZ: 0800 232 633**, to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask to have the

nutribullet® Ultra base on hand when you call, so we may better assist you. A Customer Service Specialist will review your Ultra Rapid Extractor Blade issue with you and provide you with further guidance.

**MODEL: (NB-500A) NB07500**

**RATING: AC 220-240V 50-60Hz 1000W**

**Capital Brands Distribution, LLC | All rights reserved.**

nutribullet® Ultra is the trademark of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

**230706\_NB07500**