

cation requires a looping video and 3 mechanical buttons that each play a specific video (photo or audio) file when pressed. First you would load 4 videos on your SD/USB (46). These files would need to be labeled 000.mov (mov, mp4, jpg, mp3, etc..), 001.mov, 002.mov and 003.mov (47). The video file 000.mov represents the video that will loop endlessly until either button 1 (001.mov will play), 2 (002.mov will play) or 3 (003.mov will play) is pressed.

• Instant mode (40) will trigger a different video even if the first video has not finished playing. For example: If 3 buttons are available and button 2 is pressed, video 002.mov will begin playing. If button 3 is pressed, then video 002. mov will stop and video 003.mov will instantly play.

tive

- Delayed mode (41) will ignore any additional button or sensor triggers until the 1st video is finished playing. For example: If 3 buttons are available and button 2 is pressed, video 002.mov will begin playing, play once and then loop the 000.mov video again. If button 3 is pressed during video 002.mov, the VP72 4K will ignore all requests for a new video until the 1st selected video is done playing.
- Note: The file names MUST start with 3 numbers but you can add additional verbiage after the first 3. For example: 000 - Main Looping Video.mp4 001 - Learn More About Our Museum.mov 002.mpeg
  - 003 The Music Of The Wascanegi People.mp3