




(13)

What is in the box

- 1 - VP90 Video Player
- 1 - 32-256 GB Micro SD (installed)
- 1 - Remote Control
- 1 - 5' HDMI Cable
- 1 - USB Power Supply
- 1 - 5' USB Power Cable
- 1 - 5' 3.5mm to RCA A/V Cable
- 1 - Wifi Antenna
- 4 - Mounting Screws

Connections

The VP90 is capable of outputting video from either Composite Video (6) or HDMI (7). The VP90 is capable of outputting audio through HDMI or R/L audio plugs (6) (using the included 3.5mm A/V cable), while HDMI is being used. The I/O port (4) is used for RS232 communication and connecting to our line of interactive solutions including PUSH, MOVE, SENSE, WAVE and ELEVATE. The USB on the front or back (3) can be used for a keyboard and/or mouse. Use the enclosed Wifi antenna and attach to the threaded plug (8) if you plan to use Wifi. The Micro SD (9) is for storing files when using FTP/LAN/URL/ Web Server. The IR jack (7) is only used for an external sensor (the remote uses an IR sensor on the front of the VP90) or external control. Use the enclosed power supply and make sure to line up the pins on the plug and then "Twist & Lock" the plug into the jack (1).

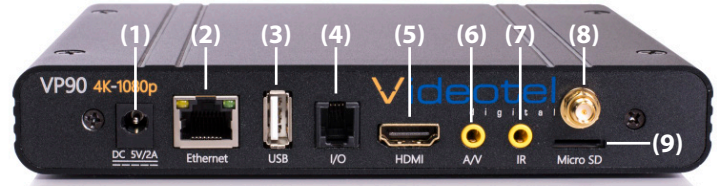


Remote Functions

- Power On & Off** - [Power Button]
- Settings** - [Settings Button]
- Change Video Output - HDMI and A/V** - [A/V Composite, HDMI 720p, HDMI 1080p, HDMI 4K]
- ALL - Lists all content on SD/USB/Micro SD** - [ALL Button]
- Mouse Mode - Press to enter & exit "mouse mode", then use arrow keys** - [Mouse Mode Button]
- Turns on & off OSD** - [Display Button]
- Arrow and SELECT - Navigate all options on home screen and setting menu** - [Arrow and SELECT Buttons]
- Home - Returns to start up screen** - [Home Button]
- Return/Last - Returns to previous screen** - [Return/Last Button]
- Fast Forward** - [Fast Forward Button]
- Next Video** - [Next Video Button]
- Stop Video** - [Stop Video Button]
- Mute Audio** - [Mute Audio Button]
- Scale - Various output options 4:3/16:9/ full screen/origin** - [ROTATE, ZOOM, ASPECT Buttons]
- Zoom - Trim screen size with 11 pre set options** - [ZOOM Button]
- Rewind** - [Rewind Button]
- Play / Pause** - [Play / Pause Button]
- Previous Video** - [Previous Video Button]
- Volume Down** - [Volume Down Button]
- Volume Up** - [Volume Up Button]
- Rotate - Rotates video counter clockwise / clockwise / normal** - [ROTATE Button]


Content Playback Options

The VP90 has 2 main groups for playing content. To switch between the 2 groups, press the Settings button on the remote and then select the "Play Mode" option (10).

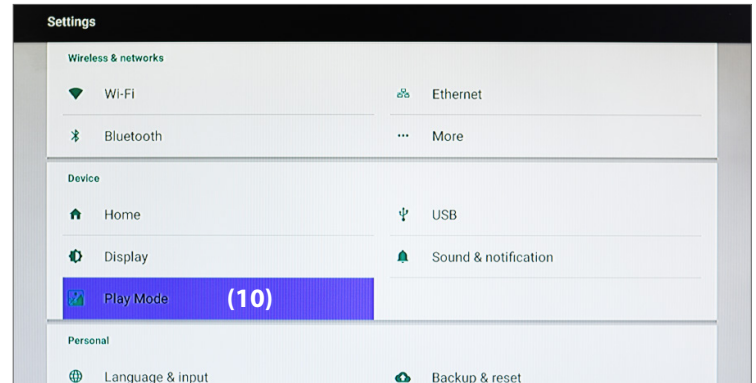

Once the Play Mode options are listed you can select from 1 of 2 options. To play from USB, SD, FTP, LAN or URL select the "Repeat (In Order) option (11), then press the "Return/Last" button. To play from the Web Server, select the "Play Content From The Web Server" option (12) and press the "Return/Last" button. Next, power off the VP90 by pressing the power button on the remote or the front of the player (13). Wait a few seconds then power the VP90 back on.

Note: Even though the USB/SD/FTP/LAN/URL options says "Repeat (In Order), you will be able to play content Randomly, in interactive mode and in scheduling mode. The next firmware update will correct the verbiage on the below menu.

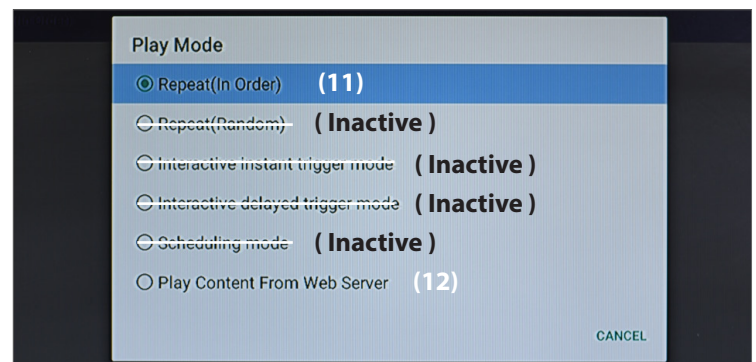

Access the USB/SD/FTP/LAN/ URL Settings

When first setting up the VP90 - To access the various content playback options or to select different playback modes (random, schedule or interactive) simply reboot the player and the settings menu shown to the right will appear. Once your content is playing you can access the menu by clicking the upper right corner of the screen using a mouse or "mouse mode" on the remote.

Note: If the "Settings Guidelines" (14) is checked an animated on screen display will show settings access instructions each time the settings are saved.

Play Content From USB/SD

The VP90 is pre-set to play from USB or SD, which will auto power on and auto loop any video, audio and/or photos loaded on the SD or USB drive. Once you connect the player to a TV or monitor, simply load your video, audio and/or photo files onto any SD Card or USB drive and insert it into the player. The order in which the files are sorted on the card is the order in which they play. Your player will start play and continue to auto loop until power is turned off. Once power is restored the VP90 will auto start and auto play without any manual interaction.

Note: There is no need to select the USB or SD CARD option (15) if the "Play Immediately on Insertion of USB - SD CARD" is checked (16). If you plan to play content from FTP, LAN or URL and you **DO NOT** wish to have the playback interrupted by the insertion of a USB or SD then un-check these boxes.

The screenshot shows the 'Videotel Digital USB/SD/FTP/LAN/URL Settings' interface. The 'Play Content From' section has 'USB' selected. 'File Playback Mode' is set to 'In Order'. 'Image Delay' is 5 Seconds, 'Image Transition Effect In' is Fade In, and 'Image Scale Type' is Center Crop. 'Image Transition Delay' is 300 Milliseconds and 'Image Transition Effect Out' is Fade Out. 'Play Immediately on Insertion of' has both 'USB' and 'SD CARD' checked. Storage shows 192.12 MB Used and 14.83 GB Total Space. 'Files last updated' is Aug 16, 2018 - 03:57 PM. 'Settings Guidelines' (14) is checked. A 'Save and Exit' button is at the bottom.

See page 3 regarding "File Playback Modes" (17)

Repeat (In Order) • Repeat (Random) • Interactive (Instant) • Interactive (Delayed) • Schedule

See page 5 for regarding Image Settings (18)

Image Delay • Transitions & Delay • Image Scale

Play Content From FTP

FTP is an acronym for File Transfer Protocol. The VP90 will basically download and update files according to what content is loaded in specific folder. Servers that have FTP available are very common. Your company website can be used or you can set up a basic FTP with a company like [Google](#), [AWS](#) and [Azure](#).

The VP90 will scan the FTP folder you designate at an interval (19) of your choosing (we recommend a refresh time of 5 minutes to 180 minutes). If the VP90 detects new files on the server, those files will be downloaded and begin looping (once fully transferred). If no new files were added to the server but some files were deleted, the deleted files will be removed from the VP90. If new files were added and other files were deleted, the VP90 will download and loop all new files completely BEFORE deleting the removed files.

The screenshot shows the 'Videotel Digital USB/SD/FTP/LAN/URL Settings' interface for FTP playback. 'Play Content From' has 'FTP' selected (15). 'File Playback Mode' is 'In Order'. 'Refresh FTP/LAN Content Every' is 5 Minutes (19). 'User Name' (20) is user_name_here, 'Password' (21) is 123456, 'Host Name' (22) is 165.32.4511, 'Port No.' (23) is 22, and 'Folder Path' (24) is /files. Image settings (18) are the same as in the previous screenshot. 'Play Immediately on Insertion of' has both 'USB' and 'SD CARD' checked (16). Storage shows 44.97 MB Used and 14.83 GB Total Space. 'Files last updated' is Aug 21, 2018 - 11:21 AM. 'Settings Guidelines' is checked. 'Check Connection' (25) and 'Save and Exit' (26) buttons are at the bottom.

VP90 Settings and Options

Refresh FTP/LAN Content Every: (19) Enter the number (in minutes) that you want the VP90 to check your FTP server for updates

User Name: (20) This will be the user name you would use to access your FTP server

Password: (21) This will be the password you use to access your FTP server

Host Name: (22) Enter the IP Address or url. **Tip:** If you are using a website, the url will usually look like this - ftp.yourwebsitename.com

Port No: (23) The most common port numbers will be 21 (unsecured) or 22 (secured)

Folder Path: (24) Enter the name of the folder where your files will be located

Once you have these settings entered and you have an internet connection, click the "Check Connection" button (25) on the bottom. The VP90 will check your settings and attempt to connect to the folder indicated. The most common connection issues are: #1) incorrect port #2) the folder path must include any and all sub folders and begin with a /

Once the VP90 reports a successful connection we suggest loading some files in the FTP folder on your server before clicking the "Save and Exit" button (26). Once "Save and Exist" is clicked the VP90 will begin downloading files from your FTP folder. Once the 1st file is downloaded, it will begin looping while the remaining files are downloaded in the background.

Play Content From LAN

LAN is an acronym for Local Area Network, which is typically a closed network within a single building or institution. The VP90 will download and update files according to what content is loaded in specific folder on your LAN. The main requirement for the VP90 to access the folder is that the path to the folder must be smb and "open" without requiring a user name or password.

The VP90 will scan the LAN folder you designate at an interval (30) of your choosing (we recommend a refresh time of 5 minutes to 180 minutes). If the VP90 detects new files in the folder, those files will be transferred and begin looping, once fully downloaded. If no new files were added to the server but some files were deleted, the deleted files will be removed from the VP90. If new files were added and other files were deleted, the VP90 will download and loop all new files completely BEFORE deleting the removed files.

Note: Make sure to include the LAN IP address and then include all the folders and sub folder names separated by a forward slash / (31)

Once you have entered the LAN Path, loaded some files in the designated folder and you have an internet connection, click the "Save and Exit" button (32) on the bottom. The VP90 will check your path and attempt to connect to the folder indicated. If a connection can not be established and error message will appear. Once the VP90 detects a successful connection it will begin downloading files from your LAN folder. Once the 1st file is downloaded, it will begin looping while the remaining files are downloaded in the background.

Videotel Digital USB/SD/FTP/LAN/URL Settings

Play Content From: USB SD CARD FTP LAN URL

File Playback Mode: In Order Random Schedule Trigger Instant Trigger Delayed

Refresh FTP/LAN Content Every: 5 Minutes (30)

Lan Folder Path: smb://192.168.0.101/Videos (31)

Image Delay: 5 Seconds

Image Transition Delay: 300 Milliseconds

Image Transition Effect In: Fade In

Image Transition Effect Out: Fade Out

Image Scale Type: Center Crop

Play Immediately on Insertion of: USB SD CARD

Storage: 192.12 MB Used Total Space: 14.83 GB 14.64 GB Free

Files last updated: Aug 16, 2018 - 03:57 PM

Settings Guidelines: Always show settings access instructions on exit

Save and Exit (32)

Play Content From URL

In the settings menu, simply select the URL option and enter the URL (33) of the video, photo or audio file you wish to play. Next select a "Refresh Day" (34) (any day of the week or daily) and "Refresh Hour" (35). In the example to the right, once the settings are saved the VP90 will download the file indicated. At 11pm everyday the VP90 will download (in the background) the file located on the same URL and compare the files. If the file is different from the current content playing the new file will begin playing and the old file will be deleted.

Videotel Digital USB/SD/FTP/LAN/URL Settings

Play Content From: USB SD CARD FTP LAN URL

Video URL: www.videoteldigital.com/videos/east_coast/perfume_counter_ads.mp4 (33)

Refresh Day: Daily (34)

Refresh Hour: 23:00 (35)

Play Immediately on Insertion of: USB SD CARD

Storage: 363.09 MB Used Total Space: 14.83 GB 14.48 GB Free

Files last updated: N/A

Settings Guidelines: Always show settings access instructions on exit

Save and Exit

Once the player is set up it will simply loop what ever file is loaded onto the URL. Example: 10 VP90's are connected to 10 screens that are playing a single video containing 5 perfume ads. These ads need to be updated once a month. At the beginning of the month the administrator would log into your web site and replace the file named "perfume_counter_ads.mp4". The video of ads is different but the name is the same. When the VP90 downloads the same video file "name" it will see if the content is different. If it is the, new video will begin to play and loop. **Note:** Make sure the URL you enter is a true video file and not a URL of a web page that "contains" a video.

Playback Modes (In Order and Random)

Below is a brief description of what each File Playback Mode does. All 5 modes can be used when playing from USB, SD, FTP or LAN.

Videotel Digital USB/SD/FTP/LAN/URL Settings

Play Content From: USB SD CARD FTP LAN URL

File Playback Mode: In Order (36) Random (38) Schedule (39) Trigger Instant (40) Trigger Delayed (41)

In Order: (36) All the content loaded either on an SD/USB or in a LAN/FTP folder will be played in alpha numeric order. In the example below (37) the first file to be played would be "Adams.mpeg", then "Break Dancer.mov" and lastly, "Costa Rica.mov". Once the last file has played, the VP90 will automatically begin playing the first file and continue looping all loaded files endlessly.

Random: (38) This mode functions the same as "In Order" except all the files loaded on the SD/USB or LAN/FTP folder will loop randomly.

Note: Both of these modes can be used with any combination of videos, photos and/or audio files. If you desire to mix photos with videos and use transitions, the transitions only work on photos and not videos. Also, make sure ONLY your desired files are loaded on the SD/USB or LAN/FTP folder. The VP90 will play all content on the device/folder the regardless if there are files in sub-folders.

Any Folder Name				
Name	Date Modified	Size	Kind	
Adams.mpeg	Nov 6, 2014 at 2:16 PM	71.9 MB	MPEG movie	
Break Dancer.mov (37)	Oct 14, 2014 at 12:45 PM	26.2 MB	QT movie	
Costa Rica.mov	Mar 23, 2018 at 3:20 PM	405.8 MB	QT movie	

Playback Modes (Interactive-Instant/Delayed)

These modes would be used if you have an application that requires interactive video triggering using one of our solutions (45) (PUSH, MOVE, WAVE, SENSE and ELEVATE). For example: Lets say your application requires a looping video and 3 mechanical buttons that each play a specific video (photo or audio) file when pressed. First you would load 4 videos on your SD/USB or FTP/LAN folder (46). These files would need to be labeled 000.mov (mov, mp4, jpg, mp3, etc.), 001.mov, 002.mov and 003.mov (47). The video file 000.mov represents the video that will loop endlessly until either button 1 (001.mov will play), 2 (002.mov will play) or 3 (003.mov will play) is pressed.



(46) Any SD / USB or Folder on a LAN / FTP				
Name	^	Date Modified	Size	Kind
000.mov		Dec 30, 2013 at 5:10 PM	242.2 MB	QT movie
001.mov	(47)	May 21, 2014 at 2:58 PM	76 MB	QT movie
002.mov		May 21, 2014 at 3:08 PM	83.6 MB	QT movie
003.mov		May 21, 2014 at 3:18 PM	80 MB	QT movie

- **Instant mode (40)** will trigger a different video even if the first video has not finished playing. For example: If 3 buttons are available and button 2 is pressed, video 002.mov will begin playing. If button 3 is pressed, then video 002.mov will stop and video 003.mov will instantly play.
- **Delayed mode (41)** will ignore any additional button or sensor triggers until the 1st video is finished playing. For example: If 3 buttons are available and button 2 is pressed, video 002.mov will begin playing, play once and then loop the 000.mov video again. If button 3 is pressed during video 002.mov, the VP90 will ignore all requests for a new video until the 1st selected video is done playing.

Note: The file names MUST start with 3 numbers but you can add additional verbiage after the first 3. For example:

- 000 - Main Looping Video.mp4
- 001 - Learn More About Our Museum.mov
- 002.mpeg
- 003 - The Music Of The Wascanegi People.mp3

Playback Modes (Scheduling) (39)

This mode would be used if you wish to play specific videos at different times of the day and/or week. The VP90 will read a text file (48) on your USB/SD or FTP/LAN folder (49) that you create and can edit at any time. The text file must be placed on the same USB/SB or LAN/FTP Folder that contains the video, photo and/or audio files.

For example if you wanted to play a breakfast menu from 9am to 11am, a lunch menu from 11am to 3pm and a dinner menu from 3pm to 11pm you would use this scheduling mode. Once scheduling mode is selected you simply need to create a text file (48) with start and stop times and load it on the same SD/USB or LAN/FTP Folder as your video files (49). A sample play list can be downloaded from our web site or can be manually typed from the example on the right (48).

- [MOVIE-AUTOFIELD] (50) will be your looping attract screen or default video. Even if you plan to play content all day, everyday you must enter a file and load it on the SD/USB or FTP/LAN Folder. The "Jennys Logo.jpg" will loop whenever no other start/stop time is active.
- [DAY_TO_PLAY] Represents what day of the week you wish to play the indicated file. Days of the week must be entered as follows MON TUE WED THU FRI SAT (51) SUN. If you wish to play the content everyday, then enter ALL (52).
- You can input an unlimited number of stop and start times and the scheduler works off of a 7 day calendar.

Note: If you wish to simply loop files in a specific order, you do not need to use scheduling (please refer to page 3 "Play Modes (In Order) (36)).

Tip: The text file must be called playlist.txt (48).

(49) Any SD / USB or Folder on a LAN / FTP				
Name	^	Date Modified	Size	Kind
Breakfast Menu.mov		Dec 30, 2013 at 5:10 PM	242.2 MB	QT movie
closing 5 min.mov		May 21, 2014 at 2:58 PM	76 MB	QT movie
Dinner Menu.mov		May 21, 2014 at 3:18 PM	80 MB	QT movie
Jennys Logo.jpg		May 23, 2016 at 2:24 PM	4.1 MB	JPEG image
Lunch Menu.mov		May 21, 2014 at 3:08 PM	83.6 MB	QT movie
Sat Lunch Menu.mov		Dec 30, 2013 at 5:10 PM	242.2 MB	QT movie
(48) playlist.txt		Jul 31, 2018 at 3:06 PM	846 bytes	Plain Text

```

playlist.txt (48)
[MOVIE_AUTOFIELD]=Jennys Logo.jpg (50)

[NEW-ENTRY]
[START_TIME]= 9:00
[END_TIME]= 11:00
[DAY_TO_PLAY]=ALL
[FILE_TO_PLAY]=Breakfast Menu.mov
[END-ENTRY]

[NEW-ENTRY]
[START_TIME]= 11:00
[END_TIME]= 15:00
[DAY_TO_PLAY]=ALL
[FILE_TO_PLAY]=Lunch Menu.mov
[END-ENTRY]

[NEW-ENTRY]
[START_TIME]= 15:00
[END_TIME]= 20:55
[DAY_TO_PLAY]=ALL
[FILE_TO_PLAY]=Dinner Menu.mov
[END-ENTRY]


[NEW-ENTRY]
[START_TIME]= 20:55
[END_TIME]= 21:00
[DAY_TO_PLAY]=ALL (52)
[FILE_TO_PLAY]=closing 5 min.mov
[END-ENTRY]

[NEW-ENTRY]
[START_TIME]= 11:00
[END_TIME]= 15:00
[DAY_TO_PLAY]=SAT (51)
[FILE_TO_PLAY]=Sat Lunch Menu.mov
[END-ENTRY]
    
```

Image Settings

The VP90 has several options for creating transitions when playing photos/images from SD, USB, LAN or FTP. These settings do not apply to creating transitions between videos or videos to photos... only photo to photo.

- **Image Delay: (60)** The time between switching from one image to the next.
- **Image Transition Delay: (61)** The amount of time that elapses from the start of the transition to the end.
- **Image Transition Effect In and Out:** Chose from a variety of transitions including Fade In/Out, Rotate and Slide In/Out. You can choose a different transition when bringing the new image in and taking the image out.
- **Image scale type:** While it is best to use images that match your screen size (If your screen is 1920x1080, make the image a proportional size ex: 1920x1080 or 2880x1620) the VP90 can scale your images as well.
 - **Center Crop:** Your image will be centered and if the image is larger then the screen, the edges will be cropped.
 - **Fit Center: (62)** If your image is larger then the screen then the horizontal or vertical portion of the image will be adjusted to fit which would leave black bars on the sides that are smaller then the screen.
 - **Fit XY:** If your image is larger or smaller then the screen then the image will be adjusted (Squeezed or Stretched) to fit.
 - **Fit Start:** The image will be scaled vertically and if it is smaller then the screen size it will be flushed to the left and have a black space on the right.

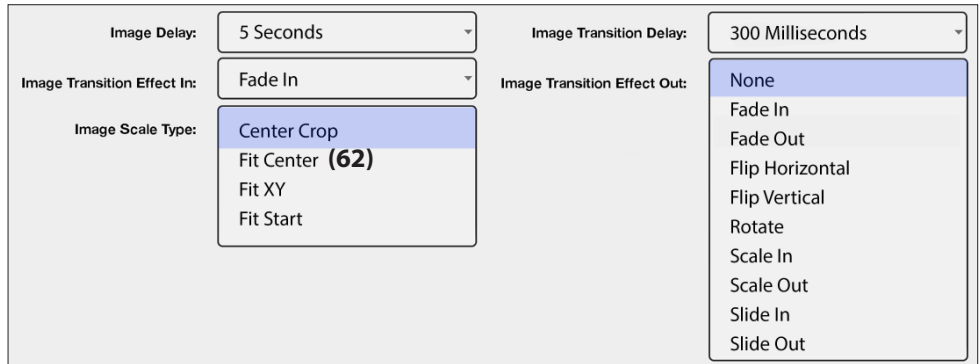

Play Content From WEB Server - Basic Set Up and Functionality

The VP90 can play content that you create and manage from our web server. You can create a free account on our web sites “remote access” page <https://www.videotel.com/remoteaccess> and registering an Email and Password. Keep in mind that these same credentials will be used when registering a single VP90 or 100s so chose an email that will be available for many years. If the email or password changes on the web server you will need re-register each VP90.




To create a free account follow steps 1-4 on page 6. You will be prompted to choose either StudioLite or StudioPro. Both options allow you to create your campaign from scratch or pick from 100s of pre designed templates (65). Once you have created a campaign, set your VP90 to “Play From Web Server” (see page 1) and then register it (see steps 8-12 on page 6).

Studio Lite versus Studio Pro


Studio Lite is a simpler portal but does have some limitations. If you initially chose StudioLite (63) and then chose to switch to StudioPro (64), the process is as easy as a few clicks of the mouse. However once you chose Studio Pro, you can not switch back to Studio Lite, a new account would need to be created.

Studio Lite: Ability to upload photos, videos and audio. You can create multiple zones and add scrolling text, RSS, website content, QR Code, Youtube, Calendar, Weather, etc..


Studio Pro: The same features as Studio Lite plus the following: Faster upload speeds with progress bar. Downloadable software so you don’t need to use the webpage portal. Ability to add most social media content and Yelp. Much more control over functions, fonts and timing. Functionality to pull in remote data from Dropbox, google drive, etc. Ability to trigger content from remote events (sensors, events, APIs) and much much more. **With Studio Pro we are also able to access your campaign and provide support remotely.**

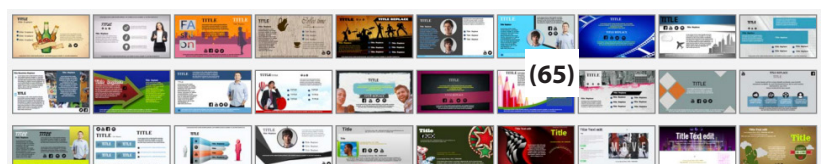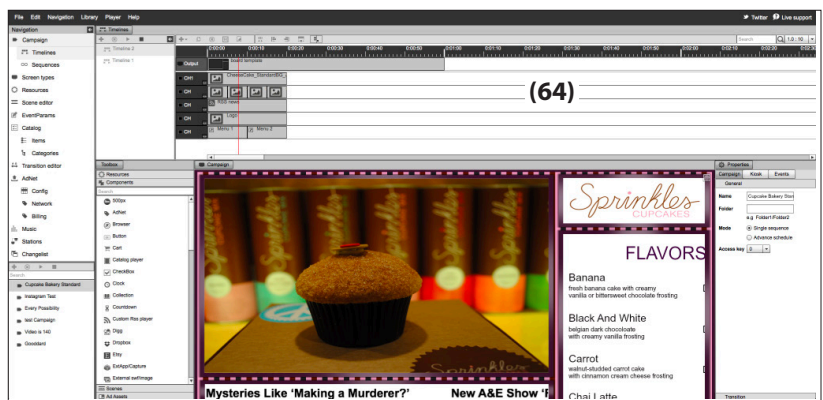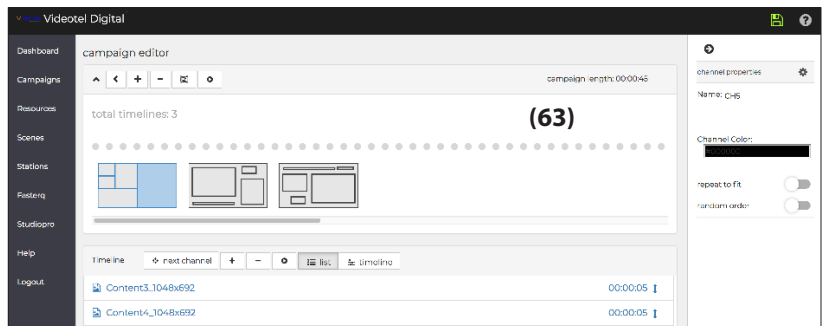


Step 1 - Go to www.videoteldigital.com/remotearchive

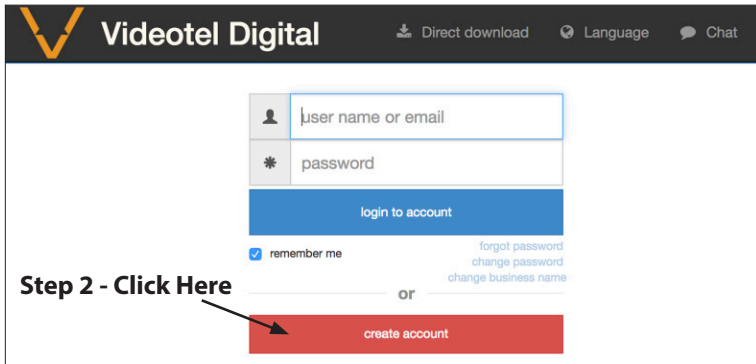


Step 3 - Enter business name, e-mail, password & create account

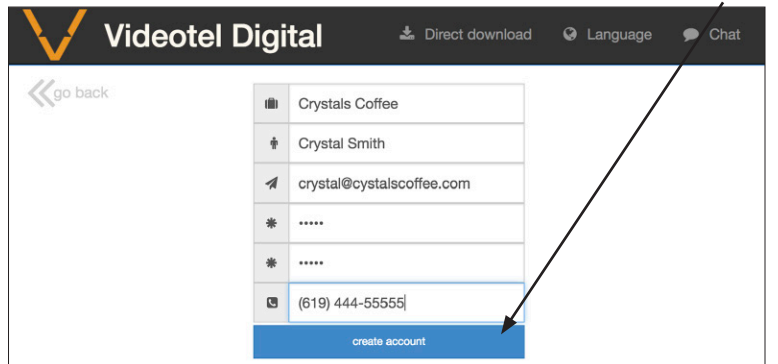

Step 4 - Select StudioLite

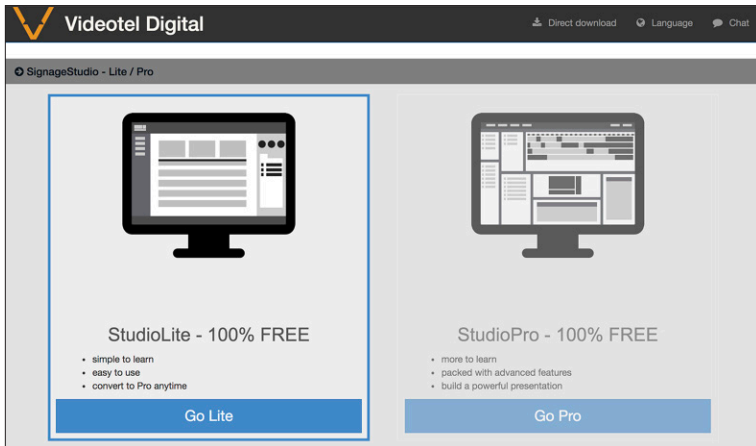


Step 5 - Pick a template that best represents your business

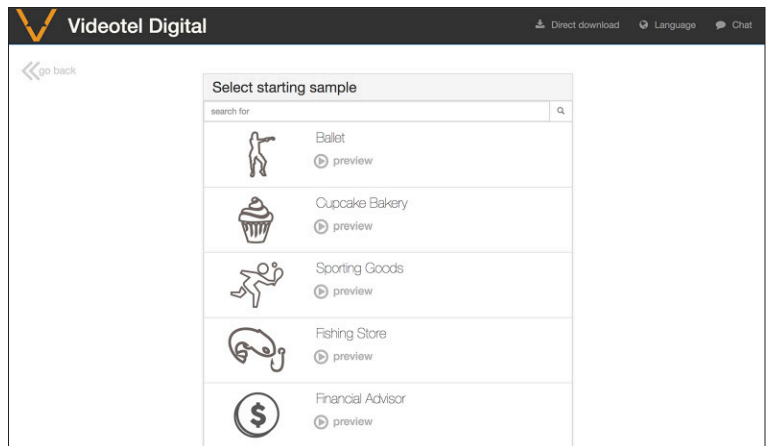



Step 7 - Switch the VP90 to "Play Content From Web Server" mode (see page 1 - item 12) and then cycle the power

Step 6 - The StudioLite Dashboard will then load

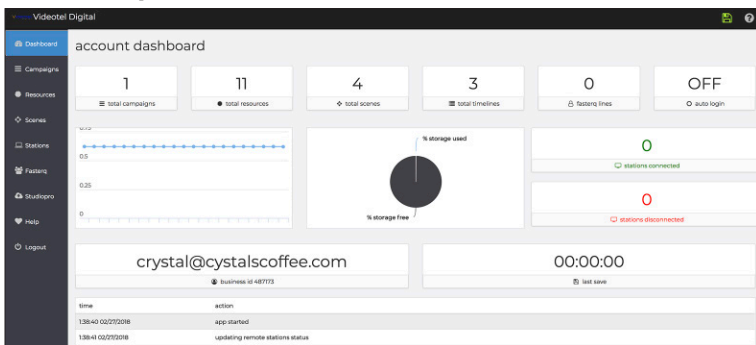

Step 9 - Enter the same e-mail and password that was used on the web portal

Step 8 - Once the below screen appears... click "Connect"

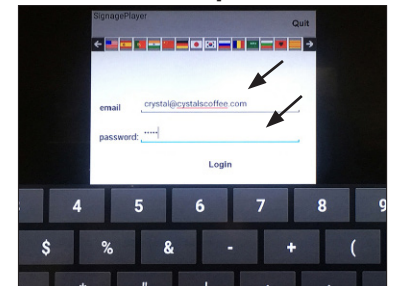
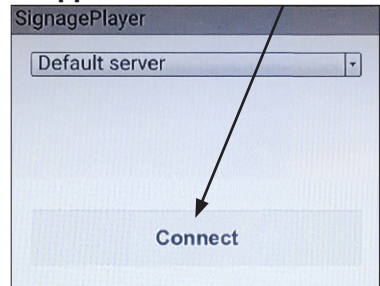


Step 10 - Select the template you chose & name the player


Step 11 - Click the "Start" Button

Step 12 - Click the "Play" Button


Step 13 - The VP90 will download the selected template and then begin playing it in your screen

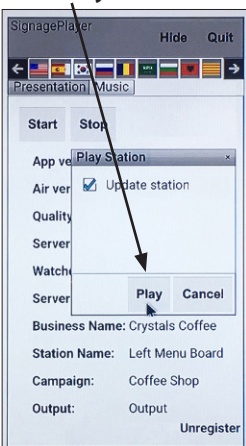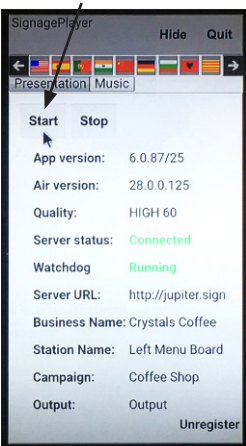

Step 1 - Click the "Resources" Tab and then the "+ upload file" button

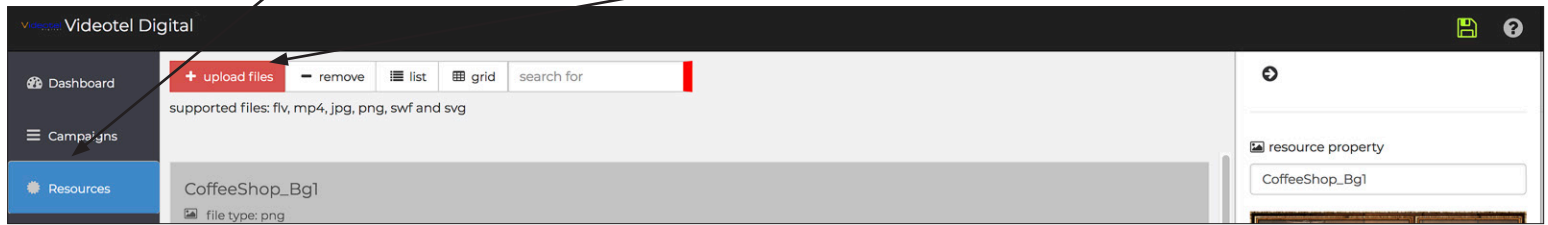


Step 2 - Select the file(s) you wish to upload

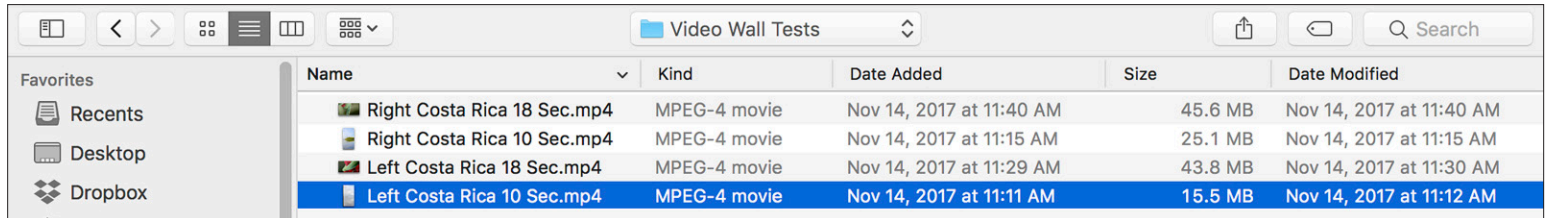


Step 3 - Once all the files are uploaded to the Web Portal, click the "Campaigns" tab and then click the "new campaign" button




Step 4 - Enter a name for your new campaign

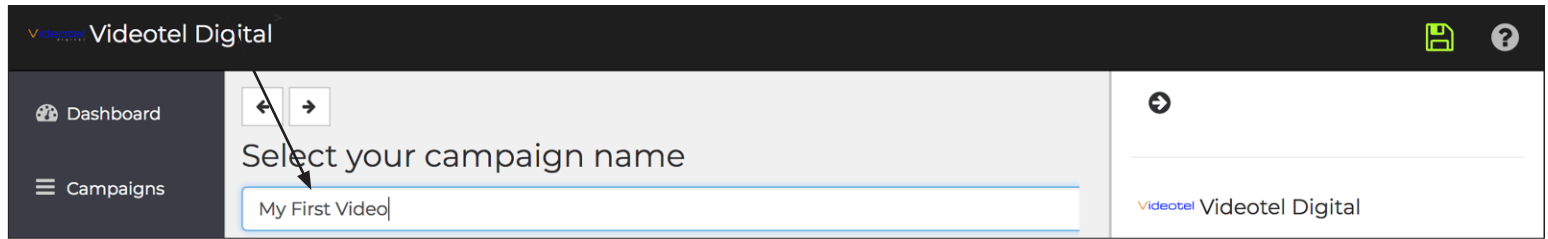

Step 5 - Select the screen orientation

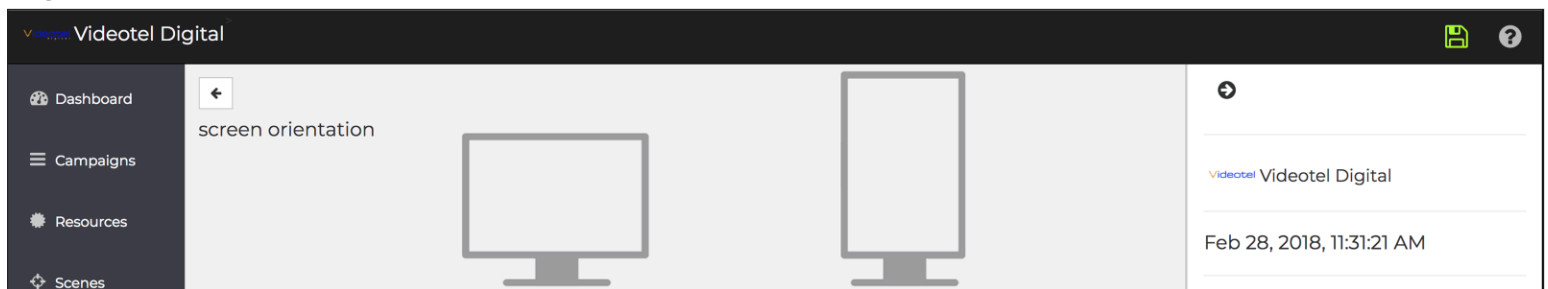

Step 6 - Select a zone template (you can edit each zone later)

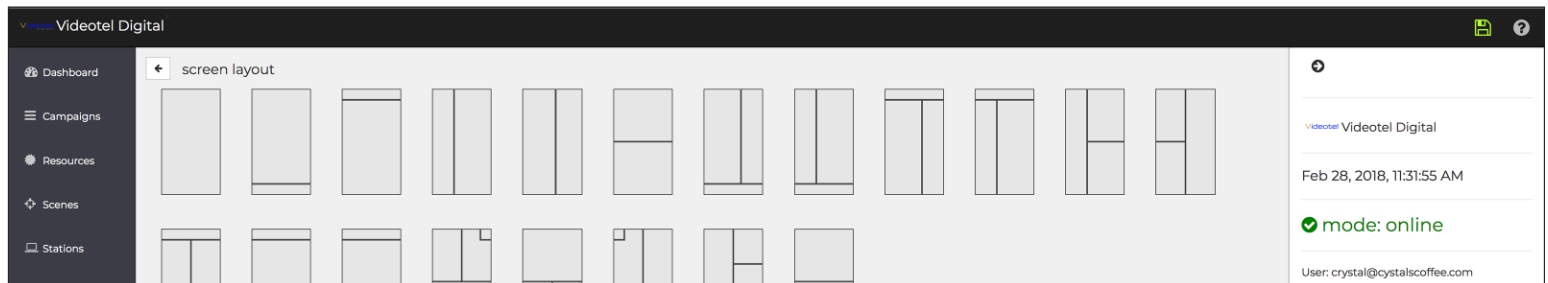

Step 7 - Click the "next channel" button until the zone you wish to add content to is highlighted, then click the "+" button




Step 8 - Locate the file (or resource) you wish to add from the resources section



Step 9 - The default loop interval is 1 minute. If you wish to loop the entire file endlessly, change the time to 23 hours 59 min 59 sec



Step 10 - Click the small green disk and either save your changes ("OK") or save and restart stations (update content on VP90's)

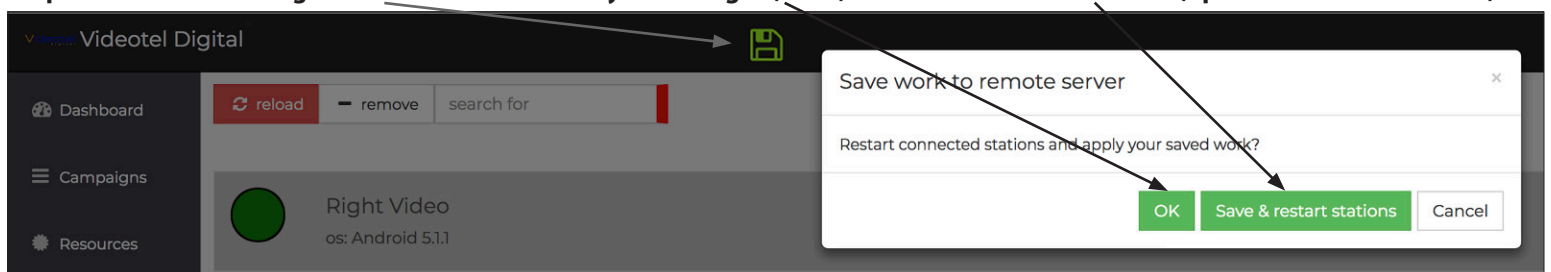

Step 11 - Send campaign to VP90 - Click the "Stations" tab, then the VP90 you want to update, change the campaign & save again

