

TEARING DOWN YOUR IMPACT ECO-AIR STRUCTURE



1

Locate the valve and unscrew to release air. Pump can be used to pull air out, or air can be forced out through pressure.



2

Detach velcro connecting cover to the legs.

*Steps 2-3 are optional. Cover does not have to be removed in order to deflate structure



3

Unzip the cover and pull the zipper from the cover out from the zipper attached to structure.



4

Fold cover and deflate structure completely.



5

Fold the legs of the structure and roll up to pack securely away in its carry bag.