

LAURA JAMES

CARE GUIDE AMELIA DINING & COFFEE TABLE

HOME - GARDEN - LIFESTYLE

<u>FEATURES</u>


The Amelia range is made from modern materials with some use of rubberwood and oak veneer. The oak veneer has all the properties of natural wood. Each piece is finished with several coats of clear lacquer for easy maintenance. All the items within the range are self-assembly. Assembly is simple, with detailed assembly instructions supplied with the furniture. We suggest 2 people minimum assemble Amelia due to the weight of the tabletop and legs.

WOOD SHADING AND COLOUR

Nature doesn't stand still and all timber surfaces will change colour and mellow over time. Variation in grain, shading and colour between different products and with the same product creates individual characters. New furniture may vary in shade from existing pieces with the same range.

EXPANSION AND TIMBER MOVEMENT

We do not recommend locating products in excessively high or low temperatures, or where the environment is often damp as this may cause product issues.

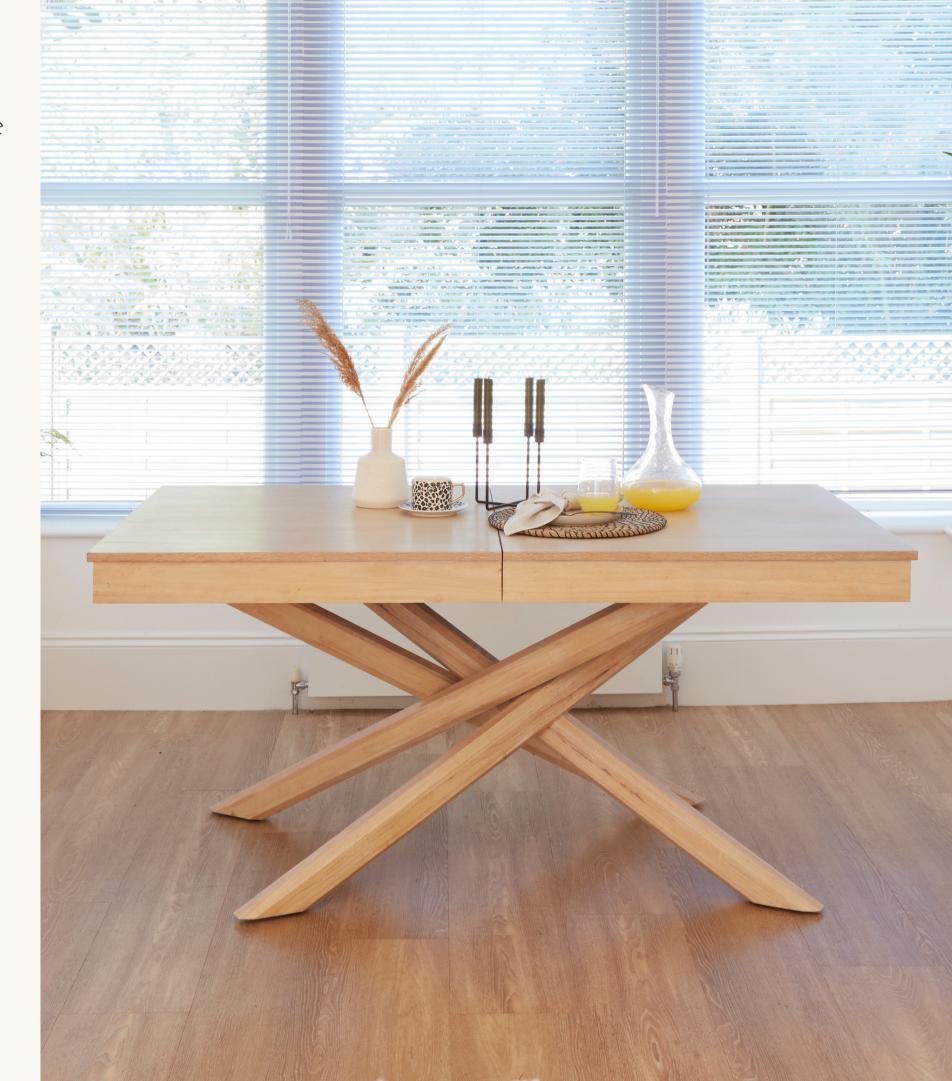




LEVELLING, ASSEMBLY AND MOVING PRODUCTS

- Furniture performs best on a level surface. Items have adjustable feet, to make sure the products do not rock, which can be altered if needed. If the product is moved, levels should be rechecked.
- Take care when moving products. We recommend they are lifted by two persons as dragging items across the floor will cause damage to the item
- As the items are self-assembly, they should be assembled at the intended location and lifted carefully into position.
- From time to time assembled products may need a little attention to prevent squeaks and creaks. Follow the instructions enclosed with your product to periodically check bolts and other fixings remain tight.

SUNLIGHT, HEAT AND RAIN

- Direct sunlight will cause the colour of the product to change.
- Leaving items such as vases or ornaments in one place on a piece of furniture in sunlight may leave a mark when it is removed. Such marks should blend with time.
- Never place hot dishes and cups directly on to surface, we recommend you use tablemats and coasters.
- Prolonged use of hot equipment, such as a laptop, on top of furniture may also cause scorching.
- The dark rubber feet used on electrical and other equipment occasionally contain chemicals that can leave a permanent mark on furniture surfaces, care should be taken.

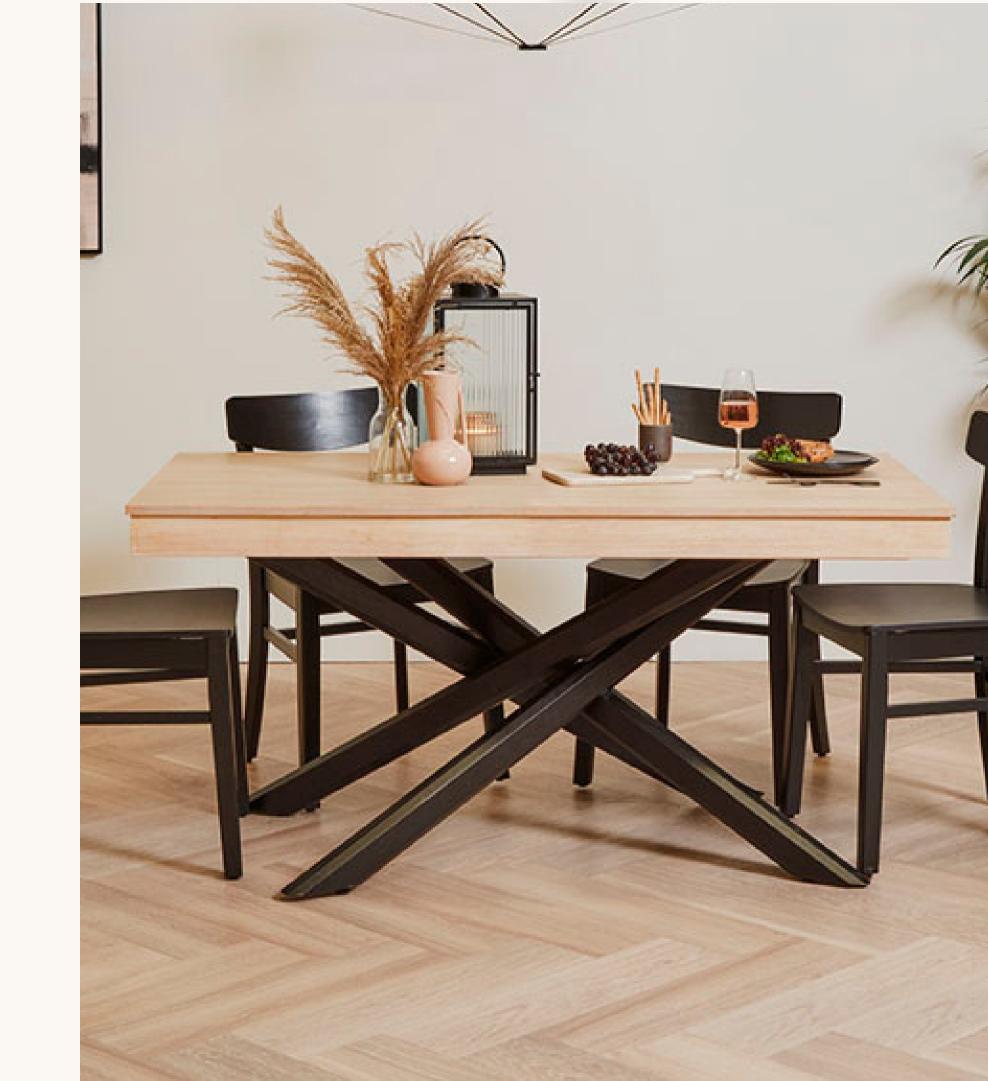

MAINTENANCE AND CARE INSTRUCTIONS

To prolong the life of your furniture we advise the following:

Cleaning

- Regularly dust with a soft cloth and occasionally wipe with a soft cloth very lightly dampened with a mild, bleach free detergent solution and dry with a lint-free cloth.
- Beeswax furniture polish from a reputable supplier may be used, however the repeated use of a polish containing silicone is not recommended as it will lead to a build-up of a silicone film altering the appearance.
- Follow cleaning instructions carefully, spills should be removed immediately by blotting with a dry white cloth, especially fatty or oily substances. If the spillage causes staining or the piece requires routine cleaning, we recommend a specialist cleaner.

Care - To Avoid Unnecessary Damage

- Do not drop furniture onto corners or feet, this will weaken and damage frames, feet or legs.
- Prevent sharp objects such as keys from coming into contact with your table.
- Avoid contact with any chemicals such as hair and skin preparations, fake tans, insect repellents and other cosmetics, or household cleaning materials, other than those recommended as these may affect the finish.
- If your furniture becomes stained, scratched, chipped or suffers other damage we recommend professional help is sought to restore it.
- If you have relevant insurance you may wish to contact your provider for advice.

Following the guidelines above will ensure product performance is maintained. Laura James is not responsible for defects caused by the misuse of your product.

