

IQ-7000 Owner's Manual / Warranty



QUICK START GUIDE



If you purchase an IQ-7000 auto-folding chair, please note that it cannot be opened (unfolded) or closed (folded) manually.

- A. Open the box, pull out the chair, and conduct a visual inspection.
- B. Confirm that the controller cord is connected and secured to the battery.
- C. With the chair in a vertical position, insert the controller.
- D. Lay the chair flat with all four wheels on the ground and the controller facing upwards.
- E. Unfold your chair. If you have the auto-folding version, please follow the instructions below.

Press and hold the 'Chair Open' button until the amber light moves to the center of the LED speed indicator.

Power on the controller by pressing and holding the power button until the controller lights turn on.

Release the 'Chair Open' button, then press the horn button. If done correctly, you will hear a beep and the chair will open.

LED Speed Indicator



Make sure both levers on the motor are in the "locked" position.



Don't forget to check under your chair for:

- Charger
- Remote control
- Owner's manual



WARNING: Please read this user manual carefully and check all of the safety tips.



TABLE OF CONTENTS

1. P	reface	03
2. C	omfygo Care+ Protection	04
	ech Support	
	laim Your Free Accessory	
	echnical Specs	
	afety Instructions	
7. Y	our Électric Wheelchair	13
8. C	ontroller (Joystick)	14
	emote Controller	
10.	Usage & Operation	17
	Folding & Unfolding	
	Battery & Charger	
	Features	
14.	System Diagnostics	26
	Maintenance Areas	
16.	Warranty Policy	29

- For all your spare parts needs, please visit www.ComfyGoMobility.com, email us at info@comfygomobility.com, or call +1 844 755 5055.
- Don't forget to **register your product to activate your manufacturer warranty.** Detailed information can be found on page 5.
- Please retain the box and all packaging for at least 30 days from the date of delivery.

IMPORTANT NOTICE! BEFORE THE FIRST USE:

Ensure the battery is connected and charge it for at least 6 hours.

To access additional information, simply scan the QR code with your smartphone's camera.



Register & Activate Your Warranty



Download the User Manual Watch Installation / Assembly Videos



PREFACE

- This manual provides instructions on operation, assembly methods, and basic troubleshooting. It applies to our model: IQ-7000, both Manual and Autofold versions.
 - The IQ-7000 with the Auto Folding option cannot be opened manually.
- This manual includes wheelchair maintenance tips and troubleshooting guidelines. Please keep it in an accessible location and refer to it as needed. If someone else uses the chair, please provide them with this manual for reference.
- The annotations and illustrations in this manual might differ slightly from your actual model as we continually enhance and upgrade our components and designs.
- If you're unsure about any aspect of the operation, kindly reach out to your dealer for clarification.
- Improper usage of this vehicle might result in injuries. It's essential to always heed safety recommendations to ensure your well-being and that of others.
- This electric wheelchair is designed for individuals with walking difficulties or those who cannot walk.
- The electric wheelchair is intended to transport only one person.
- This series of electric wheelchairs is powered by Li-ion batteries and uses DC motors. Users can control the direction and adjust the speed using the joystick controls located on the arm. This wheelchair is suitable for low speeds, good road conditions, and can handle gentle slopes.
- WARNING! Ensure the chair is locked when unfolded. Prior to the first use, please inspect all nuts and bolts, and tighten as necessary.
- This electric wheelchair is specifically engineered for people weighing less than the maximum loading weight defined in the technical specs. It is intended for use at walking speeds and is suitable for both indoor and outdoor use. Please refrain from using this unit in traffic lanes.
- This owner's manual is compiled from the latest specifications and product information available at the time of publication. We reserve the right to make changes as they become necessary. Any changes to our products may lead to slight variations between the illustrations and explanations in this manual and the product you have purchased. The latest/current version of this manual is available on our website.



Follow the instructions next to this symbol closely.

Please pay attention to these instructions; otherwise, it may result in physical harm or damage to the user, the product, or the environment.



ComfyGO Care+ Protection

- Your product comes with a limited manufacturer's warranty: 3 years for the frame, 1 year for the battery, and 1 year for the motor and electronics. More details can be found in the Warranty section on the following pages.
- Keep your mobility products protected and ensure a hassle-free experience with our ComfyGO Care+ Protection Plans.
- Designed for your peace of mind, these plans provide extended coverage for your ComfyGO mobility products, allowing you to focus on what matters most *your independence and mobility*.





Get your protection plan today!

- Scan the QR code with your smartphone
- •Call +1 844 755 5055
- ·Email us at info@comfygomobility.com
- ·Visit our website at ComfyGOmobility.com

Prices are for informational purposes only. For the most updated pricing, please visit our website, call, or email us.



TECH SUPPORT



Register & Activate Your Warranty


- Please visit **Comfygomobility.com/pages/product-registration** and register your product now. Simply scan the QR code with your phone to access the Registration Link.
- When you register your ComfyGO Product, you ensure that you may be eligible for extended warranty service.
- You will also receive product updates and important news from ComfyGO Mobility.

Getting Tech Support

• For the quickest support, please email

info@ComfyGoMobility.com

- Call us at +1 844 755 5055
- Visit **comfygomobility.com/pages/contact** or scan the QR code with your smartphone to fill out the help form.

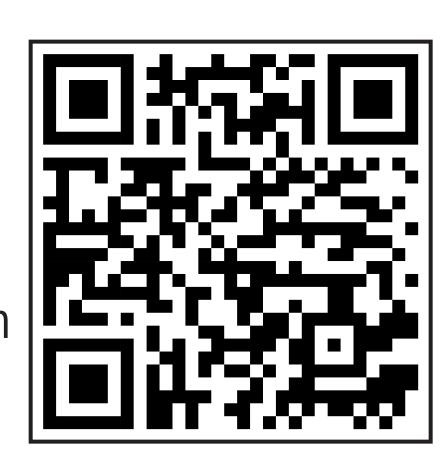



Getting Tech Support in EUROPE

- For the quickest support, please email info@ComfyGoMobility.eu
- Call us at +31 (0) 20 809 7031
- Visit comfygomobility.eu/pages/contact or scan the QR code with your smartphone to fill out the help form.

Shield your wheelchair with the ComfyGO Travel Protection Bag

- Ensure the safety of your wheelchair during transit with our ComfyGO Travel Protection Bag. Tailored specifically for your product, this bag offers robust protection against scratches and damage while you travel.
- Be it in the hands of airline personnel or during the rigors of transportation, our Travel Protection Bag is your wheelchair's safeguard against the rough and tumble of travel handling.



Get Your Travel Bag Today

• Call us at +1 844 755 5055

Visit comfygomobility.com

Email us at info@ComfyGoMobility.com





CLAIM YOUR FREE ACCESSORY

We're giving away a FREE ComfyGO accessory to enhance your ComfyGO Mobility experience!



- 1. Visit **comfygomobility.com** and locate your product, or simply scan the QR code to access the page.
- 2. Write a review for your product.
- 3. Email **info@comfygomobility.com** to inform our team about your review.
- 4. Our team will then provide you with accessory options.







Headlight & Charger



Cup Holder



Side Bag

Please also don't forget to leave another review at your point of purchase.

Terms and Conditions

- Eligibility: This promotion is open to individuals who have previously purchased a ComfyGO Mobility product, excluding accessories, parts, services, and protection plans. Employees of ComfyGO Mobility, its affiliates, subsidiaries, advertising, promotion, and fulfillment agencies, and legal advisors, as well as their immediate family members and persons living in their same household, are not eligible to participate in this promotion. Limit one entry per household.
- Promotion Period: This promotion is open for the first 1,000 customers who complete the review process and notify our team via email at info@comfygomobility.com. The promotion may end at the discretion of ComfyGO Mobility once a sufficient number of eligible entries have been received.
- Promotion Modification: ComfyGO Mobility reserves the right, at its sole discretion, to modify, suspend, or terminate this promotion at any time and for any reason without prior notice. Changes to the promotion, including but not limited to its termination date, will be updated on the Comfy-GO Mobility website. Participants agree that ComfyGO Mobility shall not be liable to them or to any third party for any modification, suspension, or discontinuance of the promotion.
- Selection of Winners: Participants who have completed the steps mentioned above will be eligible for the giveaway. Our team will contact eligible participants to provide them with options for the free ComfyGO accessory.
- Prize: The prize consists of one ComfyGO accessory with a value equal to or less than \$25. The exact accessory will be determined based on available stock. No cash or other substitution of prizes is permitted, except at the sole option of ComfyGO Mobility for a prize of equal or greater value.
- Shipping: Winners are responsible for paying any shipping costs associated with the delivery of the prize. ComfyGO Mobility will not cover these costs.
- Restrictions: Reviews left on third-party marketplaces such as Amazon, Walmart, and others are not eligible for this promotion due to their review policies.
- General Conditions: Participants agree to abide by the terms of these Official Rules and by the decisions of ComfyGO Mobility, which are final on all matters pertaining to this promotion. Noncompliance with the foregoing, failure to abide by these Official Rules, or return of the prize notification as non-deliverable may result in disqualification and selection of an alternate winner.
- Disclaimer: ComfyGO Mobility, its agents, and representatives, are not responsible for and shall not be liable for: (i) late, lost, damaged, misdirected, incomplete, illegible, or unintelligible entries; (ii) any condition caused by events beyond the control of ComfyGO Mobility that may cause the promotion to be disrupted or corrupted; (iii) any injuries, losses, or damages of any kind arising in connection with or as a result of the prize, or acceptance, possession, or use of the prize, or from participation in the promotion; or (iv) any printing or typographical errors in any materials associated with the promotion.
- Data Protection: By participating in this promotion, participants agree to ComfyGO Mobility's use of their personal information for both online and offline direct marketing purposes.



TECHNICAL SPECS

Parameters	IQ-7000 Manual Folding	IQ-7000 Auto Folding
Overall Dimensions (L x W x H)	40"x26"x39" (1016x660x990 mm)	40"x26"x39" (1016x660x990 mm)
Folded Dimensions (L x W x H)	27"x17"x30" (685x432x762 mm)	27"x17"x30" (685x432x762 mm)
Seat Height (from ground)	20" (508mm)	20" (508mm)
Armrest Height (from seat)	9" (230mm)	9" (230mm)
Backrest Height (from seat)	18" - 24" (458mm - 610mm)	18" - 24" (458mm - 610mm)
Max Loading Weight	350 lbs (159 kg)	350 lbs (159 kg)
Net Weight without Battery	57 lbs (25.8 kg)	60 lbs (27.2 kg)
Net Weight with Battery	64 lbs (29 kg)	67 lbs (30.4 kg)
Battery	24V 12AH or 24V 20AH lithium-ion	24V 12AH or 24V 20AH lithium-ion
Battery Charge	AC 100-240V, 50Hz,1.5-5A	AC 100-240V, 50Hz,1.5-5A
Battery Charge Time	6 to 8 hours	6 to 8 hours
Range with 12AH Battery	Up to 13 mile (20km)*	Up to 13 mile (20km)*
Range with 20AH Battery	Up to 19 mile (30km)*	Up to 19 mile (30km)*
Airline and Cruise Approval*	Only with 24V 12AH battery**	Only with 24V 12AH battery**
Max Speed	4 mph (6 km/h)	4 mph (6 km/h)
Motor	2 * 250W or 2 * 300W	2 * 250W or 2 * 300W
Controller	24V 50A	24V 50A
Climbing Angle Max Degrees	6°	6°
Max Safe Slope	9°	9°
Static Stability	9°	9°
Brake	Intelligent electromagnetic break	Intelligent electromagnetic break
Turning Radius	≤ 47" (1200 mm)	≤ 47" (1200 mm)
Reversing Width	≤ 49" (1250 mm)	≤ 49" (1250 mm)
Front Wheel Diameter	8" (200 mm)	8" (200 mm)
Rear Wheel Diameter	12" (305mm)	12" (305mm)
Seating Area Width	19" (470 mm) ***	19" (470 mm) ***
Cushion Size (width x depth)	17.8" (452 mm) x 18" (457 mm)	17.8" (452 mm) x 18" (457 mm)
Controller Type	Detachable All-Direction Joystick	Detachable All-Direction Joystick
Tire pressure (for pneumatic tire)	30 psi (2 kgf/cm2)	30 psi (2 kgf/cm2)

^{*} The actual range of our product can vary due to factors such as weather conditions, load weight, and terrain type. Extreme temperatures, heavy loads, and challenging terrains can all impact battery efficiency and reduce travel distance. While designed for versatility, users should be mindful of these variables to optimize their range and maintain reliable performance.

^{* **} The widest distance between armrest support bars.



^{* *} The 12AH (288WH) lithium-ion battery is travel approved by most major airlines and cruise lines.. Before travelling by airline or cruise, please contact the airline or cruise line to confirm their travel battery regulations.

IMPORTANT: Before using your mobility device, please read and understand these safety instructions thoroughly to ensure your safety and the longevity of the device.

GENERAL SAFETY:

- User Limitations: This device is intended for use by individuals with mobility impairments. Consult your healthcare provider to determine if this device is suitable for your condition.
- Weight Capacity: Do not exceed the maximum weight capacity as defined in the technical specifications section of this manual, as doing so may compromise the structure and safety of the device.
- Inspection: Regularly inspect your mobility device for signs of wear, loose components, or damage. If any issues are found, cease use immediately and contact the manufacturer or a certified technician for repair.
- Modifications: Do not modify the mobility device in any way, as this may affect its safety and void the warranty.

MAIN SECURITY FEATURES:

- Protection Against Electric Shock: Internal power classified as Type B application.
- Ingress Protection Rating: Classified based on the degree of liquid ingress protection: IPx3
- Flammability: Classified as Non-AP/APG type for safe use in environments where flammable anesthetic mixtures with air or oxygen or nitrous oxide gases occur.
- Operation Mode: Designed for continuous operation.
- Voltage Rating: Operates at a DC 24V rating.
- Defibrillator Discharge Protection: Device has no protective effect on the application of defibrillator discharge.
- Signal Ports: No signal output or input part.
- Non-Permanent Equipment: Safety ensured for any non-permanent equipment installed.

ENVIRONMENTAL SAFETY:

- Terrain: Use the device on stable and even surfaces. Avoid high water, icy, or uneven terrain that may cause the device to slip or tip.
- Weather Conditions: Avoid using the device in extreme weather conditions that may impair its function or your control over it.
- Obstacles: Be cautious of obstacles in your path and maintain a safe distance from edges, steps, and bodies of water.

RIDING NOTICE:

General Riding Cautions:

- Keep hands on the armrest for full control of the wheelchair.
- Practice in safe, open areas before using on roads.
- Assistive guidance is recommended until comfortable with chair control.
- Adhere to pedestrian traffic rules; the wheelchair is not an automobile.
- Stay on sidewalks and crosswalks; avoid vehicle lanes.
- Maintain steady speeds; avoid sharp turns and zigzag movements.
- Ensure proper tire pressure for safe use and battery longevity.



• If your wheelchair supports reclining, DO NOT RECLINE the backrest while on any incline or decline.

Avoid Riding in These Conditions Unless Accompanied by a Caretaker:

- Inclement weather (rain, fog, wind, snow, etc.)
- Wet wheelchairs should be dried immediately to prevent electronic damage.
- Challenging terrain (mud, dirt, sand, gravel, etc.)
- Crowded or busy roads.
- Railways (ensure wheelchair tires do not get stuck; turn off and cross carefully).

Precautions for Uphill and Downhill:

- Avoid steep inclines and declines; slope range should be less than 9 degrees.
- Operate controller carefully during uphill use.
- Maintain forward momentum uphill or downhill; do not stop abruptly.
- Use brakes to control speed downhill.
- Avoid sideways movements on steep inclines.
- Do not use stairs; avoid crossing high steps.
- Cross ditches at a 90° angle.
- Keep wheelchair in powered mode during inclines and declines.
- Seek immediate assistance if wheelchair malfunctions at a railroad crossing; switch to manual mode and push wheelchair to safety.

Precautions for Caregivers

- Ensure the user's feet are properly positioned on the footrests.
- Avoid clothes getting caught in the wheels.
- Push the wheelchair manually when on steep slopes.

OTHER IMPORTANT NOTICES:

Repair and Refit:

- Contact the seller or service department for repairs or refits.
- Do not modify the wheelchair; this could lead to accidents or malfunctions.
- Avoid adding non-approved weights or accessories.

Keep Your Wheelchair Dry at All Times:

- Avoid storing or using the wheelchair in wet conditions.
- Dry the wheelchair immediately if it gets wet.

Pushing Someone Else in the Wheelchair:

• Use only manual mode when pushing someone in the wheelchair.

Service Life:

- The recommended service life of this product is 5 years from the date of production.
- Check the label on your unit box for the date of manufacture or contact us.
- Avoid using beyond the recommended period to prevent accidents.



ELECTROMAGNETIC COMPATIBILITY:

- Avoid strong magnetic fields and large inductive electrical equipment.
- Maintain distance from sources of electromagnetic interference.
- Note that portable and mobile RF communication devices can affect wheelchair performance.
- Refer to manufacturer's statement for detailed electromagnetic compatibility information.
- Battery cut-off voltage: 23V.
- Classification: D class in GB/T 18029.21.

EMERGENCY PROTOCOL:

Malfunction: If the device malfunctions, cease use immediately. If safe to do so, turn off the device and contact the manufacturer or a certified technician.

Accidents: In case of an accident, prioritize your safety and seek immediate assistance. Once safe, assess the device for damages.

CONTACT INFORMATION:

- For further assistance or in case of emergency, please contact our customer support at:
- Phone: +1 844 755 5055
- Email: info@comfygomobility.com
- Website: www.comfygomobility.com
- Remember, adhering to these instructions ensures your safety and optimal performance of your mobility device.hair battery, please contact your authorized provider.

IMPORTANT: Please read and follow all of these safety instructions and warnings to prevent injury or damage. Keep this notice for future reference.

General Usage Instructions and Warnings:

- Understanding Your Power Chair: Before operating your power chair, ensure that you have read and understood the user manual, safety instructions, and guidelines provided.
- Weight Capacity Compliance: Do not exceed the specified weight capacity of your power chair. Overloading may result in instability, structural damage, or malfunction.
- Operating Environment: Operate your power chair on stable and even surfaces. Avoid steep slopes, near drop-offs, or unstable ground to prevent tipping over.
- Seating Safety: Always remain seated and use the seat belt during operation. Do not attempt to reach for objects if it requires you to lean out or shift your weight significantly.
- This wheelchair does not meet Standard No. WC19 set forth by the American National Standards Institute (ANSI) and is not intended to be used as a seat in a motor vehicle.

Tire and Wheel Instructions and Warnings:

- Tire Pressure: Inflate pneumatic tires to the psi/bar/kPa rating on each tire. Avoid underinflation or overinflation.
- Tire Care: Do not use high-pressure hoses or rubber conditioners on tires, as these can cause damage or reduce grip, leading to skidding.

Battery and Charging Instructions and Warnings:

• Charging Guidelines: Follow the specific instructions for battery charging as outlined in the user

manual and the information supplied with the battery charger.

- Ventilation: Charge your battery in a well-ventilated area. Explosive gases may be produced during charging.
- Charger Compatibility: Use only the off-board charger supplied with your power chair. Other types of chargers may cause damage.
- Charger and Wiring Inspection: Regularly inspect the battery charger, wiring, and connectors. Contact your authorized provider if you notice any damage.
- Charger Handling: Do not attempt to open or repair the battery charger. If malfunctioning, consult an authorized provider.
- Charger Heat: Be aware that the battery charger may become hot during charging. Avoid direct skin contact.
- Charger Protection: Protect the battery charger from adverse weather conditions if not rated for outdoor use. Allow it to adjust to indoor environmental conditions before use.
- Battery Type: Lithium-Ion batteries are recommended to mitigate risks of leakage or explosive conditions.
- Charging Completion: Monitor the LED lights on the charger for the status. If charging is incomplete within 24 hours, unplug and contact your provider.
- Disposal: Dispose of the power chair according to local and national regulations. Consult local waste disposal agencies or an authorized provider.

Maintenance and Storage Instructions and Warnings:

- Routine Checks: Perform daily, weekly, and monthly checks as specified in the user manual. Pay special attention to tires, brakes, electrical connections, and seating systems.
- Storage Conditions: Store your power chair in a dry place, away from temperature extremes. Disconnect the battery and switch it to the "0" position during storage.
- Storage Precautions: Improper storage can lead to frame corrosion and electronic damage. Charge the battery periodically during prolonged storage.

Cleaning and Disinfection Instructions and Warnings:

- Cleaning Products: Use a damp cloth and mild, non-abrasive cleanser for cleaning. Avoid products that may scratch the surface.
- Disinfectant Use: If using disinfectants, ensure they are safe for your product and follow all safety instructions to avoid skin irritation or damage to the power chair.

Service and Replacement Instructions and Warnings:

- Authorized Service: Wheels, batteries, and other components should be serviced or replaced only by an authorized provider or a qualified technician.
- Lifting Precautions: Exercise caution when lifting heavy components like batteries and use proper lifting techniques.
- Electrical Safety: Keep tools and metal objects away from battery terminals to avoid electrical shock.



Electric Wheelchair Safety Usage Checklist Before Use:

- Ensure hands are positioned on armrests for optimal control.
- Verify tire pressure matches manufacturer recommendations.
- Check battery level.
- Inspect wheelchair for any signs of damage or wear.
- Confirm the chair is locked when unfolded, and all nuts are tightened.
- Make sure anti-tip wheels are properly assembled.

During Use:

- Adhere strictly to pedestrian traffic regulations.
- Stay on sidewalks; avoid vehicle lanes at all times.
- Maintain steady, controlled speeds; abrupt maneuvers are prohibited.
- Avoid inclines and declines over 9 degrees.
- Keep feet firmly placed within the designated foot area.

In Specific Conditions:

- If weather is adverse, ensure a caretaker is present.
- In case of water exposure, immediately dry the wheelchair.
- Seek assistance when navigating challenging terrains.
- Employ manual operation at railway crossings and verify tire clearance.
- Ascend and descend slopes with utmost caution, avoiding lateral movements.
- Avoid stair navigation and crossing over high obstacles.
- Ensure user's feet are properly placed on footrests.
- Keep user's clothing clear from the wheels.
- Provide assistance on slopes and in high-risk conditions.

Post-Use:

- Store the wheelchair in a dry, safe environment.
- Conduct a brief inspection for potential damage or issues.
- Charge the battery if necessary, avoiding overcharging.


Repair and Maintenance:

- Contact certified technicians for repairs or modifications.
- Report any malfunction or irregularities immediately.
- Schedule regular maintenance checks as recommended by the manufacturer.

Note: This checklist is to be followed rigorously each time the electric wheelchair is used to ensure the safety of both the user and the equipment. Non-compliance with any of these points may lead to unsafe conditions and potential injury.

Liability Disclaimer: Adherence to these safety and operation guidelines is a strict requirement for all users and caregivers. Non-compliance or improper use of the wheelchair absolves the manufacturer of any liability for resultant injuries or damages. These regulations are implemented for the protection and well-being of all users and must be followed rigorously.

CONTROLLER (JOYSTICK)

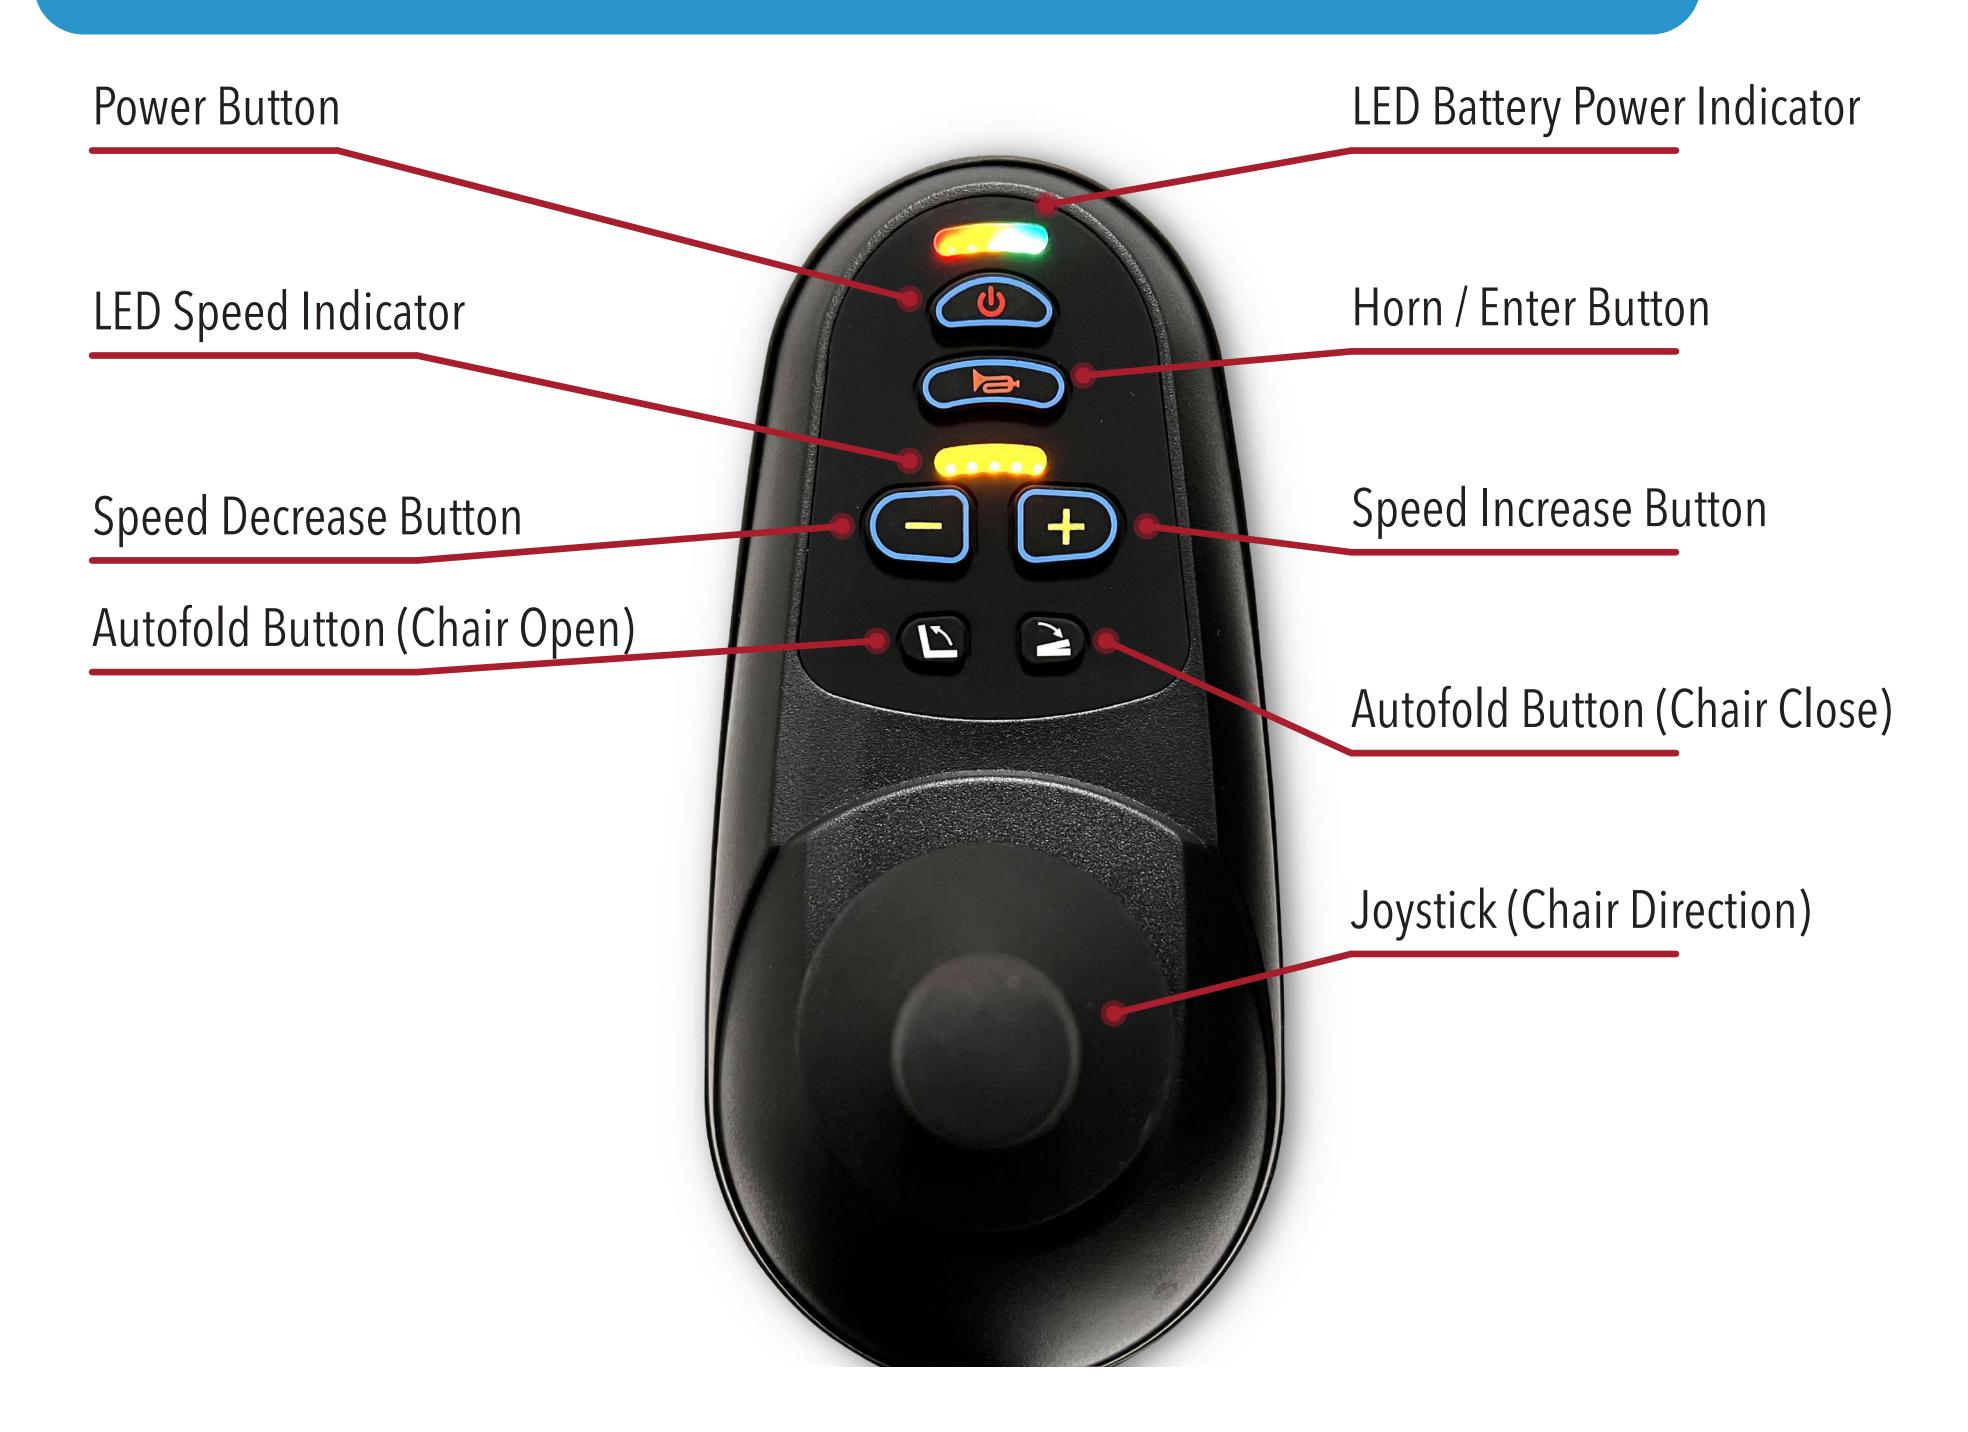

Power Button: To turn on the chair, press the power button. To turn it off, press the button again. When the chair is powered on, the LED Battery Power Indicator will light up.

Sleep Mode: If the joystick is not used for more than 20 minutes, the power will automatically turn off, and the system will enter sleep mode. The system can be turn on by pressing the power button.

Speed Adjustment: The wheelchair's riding speed can be adjusted according to the user's preference and circumstances. Use the decrease and increase buttons to adjust the speed accordingly.

- Speed is divided into five segments, corresponding to the following ranges: 20%, 40%, 60%, 80%, and 100% of the maximum speed.
- The first LED represents 20% of the maximum speed.
- The fifth LED represents 100% of the maximum speed.

Horn Button: Press the horn button to sound the horn.

WARNING! In an emergency, you can also turn off the power directly by pressing the power button.



CONTROLLER (JOYSTICK)

- **LED Battery Power Indicator:** The LED battery indicator is active when the power is on. It also displays the remaining battery power. In the displayed picture, the battery is powered. If only the red or yellow LED lights are on, this signals low power and that the batteries need recharging.
- Always ensure the batteries are fully charged before going on long rides where charging might not be possible.
- Do not operate the unit if only the red light is on, as it indicates the need for charging.
- LED 5: 55-100% battery remaining
- LED 4: 35-55% battery remaining
- LED 3: 20-34% battery remaining
- LED 2: 12-19% battery remaining
- LED 1: <12% battery remaining
- When the 1st LED blinks: <5% battery remaining.

Autofold Button (Chair Open): If you purchased an auto-folding chair, this button will appear on your controller.


- Manual folding chairs will not have this button.
- Details on how to open your chair will be provided in the following pages.

Autofold Button (Chair Close): If you purchased an auto-folding chair, this button will appear on your controller.

- Manual folding chairs will not have this button.
- Instructions on how to close your chair are provided in the subsequent pages.


Using the Joystick: To control the speed and direction of the wheelchair, utilize the joystick. The distance you push the joystick determines the speed of movement.

• Always ensure the joystick is in the middle position when powering the unit on or off. If the joystick is not centered when turning the unit on or off, an alert will sound. To silence the alert, return the joystick to the center. If the alert continues even after centering the joystick, this could signal a malfunction. In such a case, please contact your dealer.

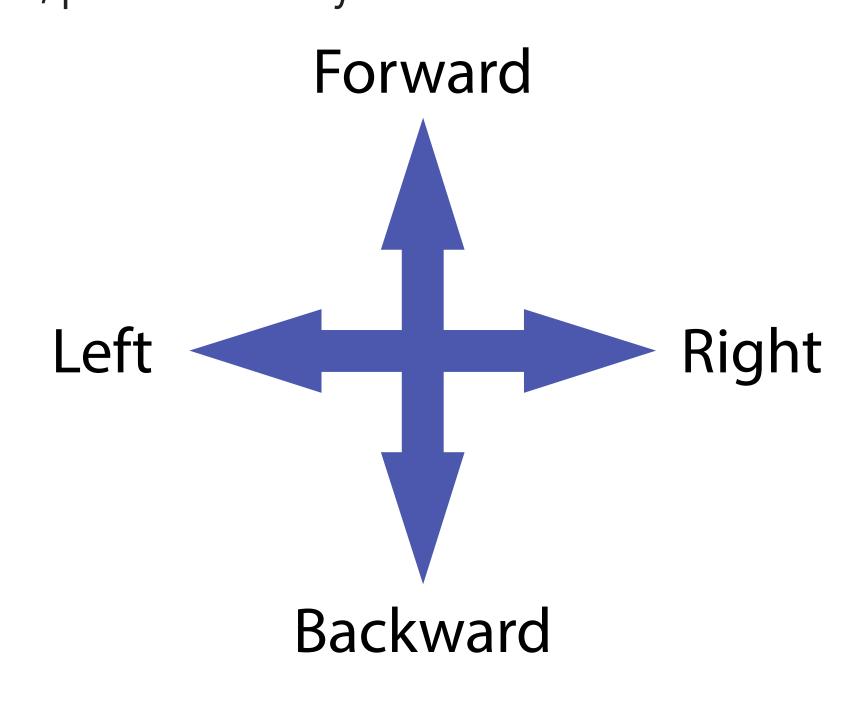



REMOTE CONTROLLER

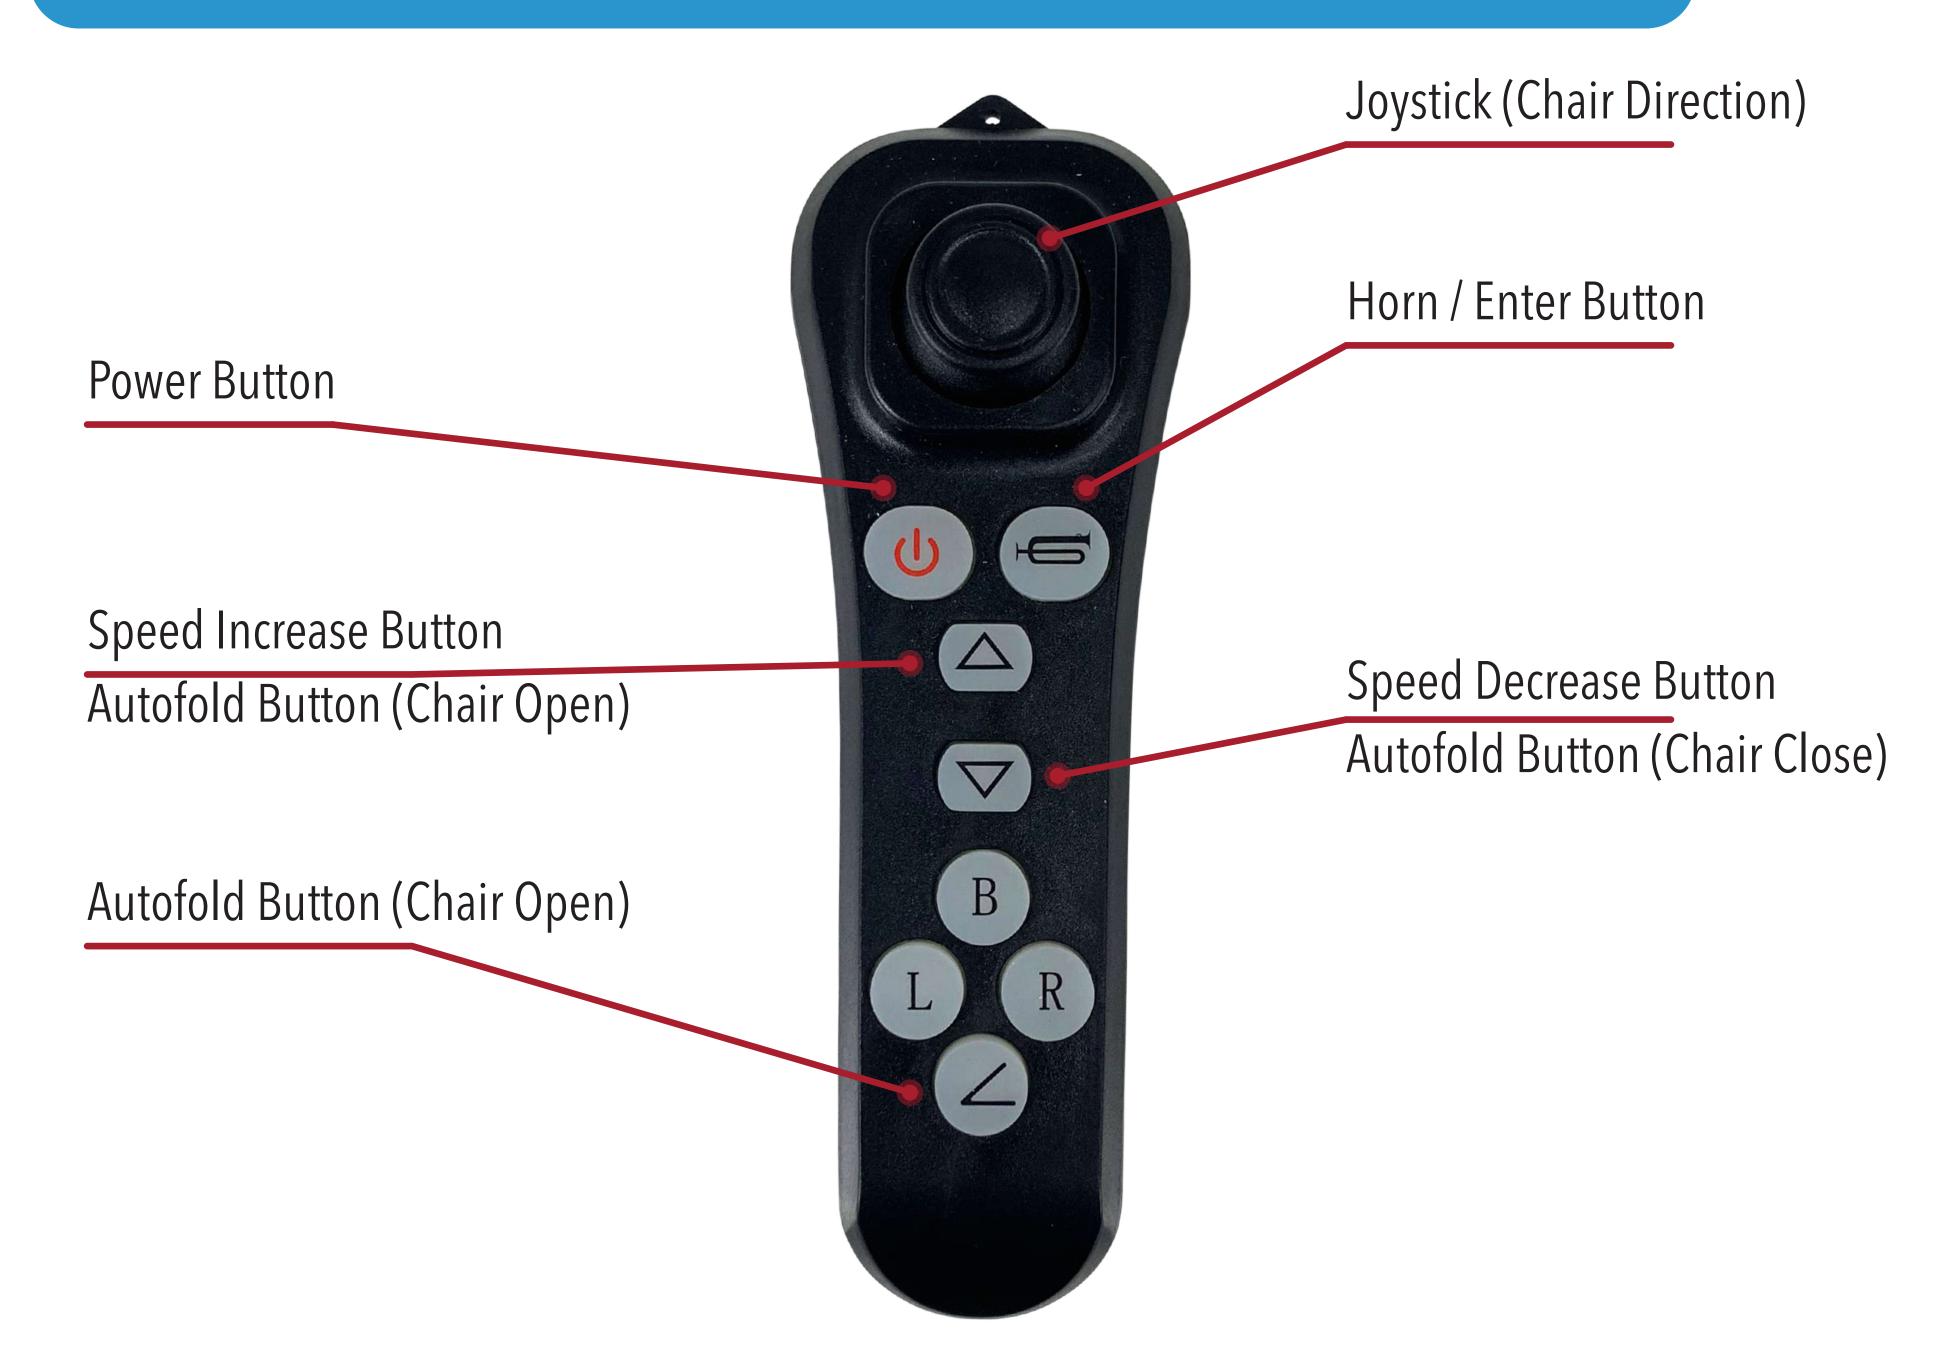

Pairing the Remote with the Chair Controller

- 1. If the chair is charging, unplug the charging cable.
- 2. Lay the chair flat with the wheels on the ground.
- 3. Power on the chair controller, then power on the remote by holding the power button for 3 seconds until it blinks red.
- 4. On the chair controller, press and hold the speed decrease button until the LED speed indicator displays a single amber light in the center of the screen.
- 5. Release the speed decrease button and press the horn.
- 6. On the remote, press and hold the speed decrease button until the chair controller turns off.
- 7. Power off the remote.
- 8. Power on both the remote and chair controller the remote is now paired.

For a video explanation on remote pairing, please visit the user manual page on our website. For detailed information, refer to the USAGE & OPERATION SECTION on the following pages.

WARNING: *To use your remote control, the chair's joystick must be turned on first. The power button on the remote control only turns the remote control on and off. The remote control connects to the chair's joystick via Bluetooth.




USAGE & OPERATION




- Please visit our website for a detailed explanation on Usage and Operations.
- Go to www.comfygomobility.com/pages/user-manuals or scan the QR code with your smartphone's camera.
- Once on the website, select your wheelchair model and the video of interest.
- On the same page, you can also download the most updated digital version of your owner's manual.

Initial Setup:

- Unboxing:
- Carefully open the box.
- Gently remove the chair from the box.
- Visual Inspection:
 - Conduct a thorough visual inspection of the chair to check for any visible damage or missing parts.
- Controller Cord Connection:
 - Confirm that the controller cord is properly connected and secured to the battery (as illustrated in pictures below). This is crucial for the functioning of the chair.

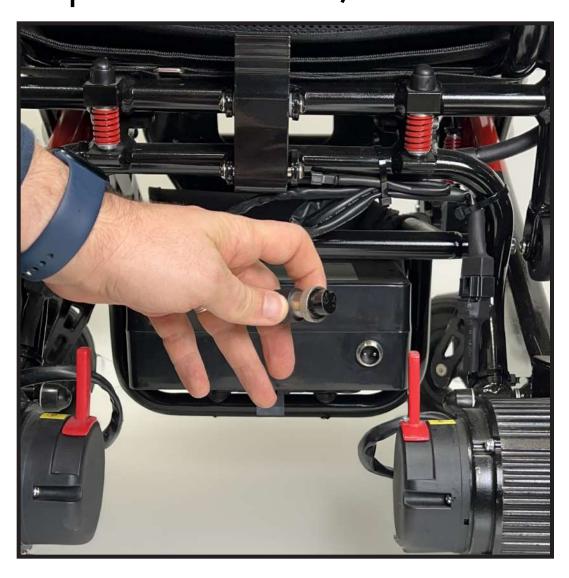

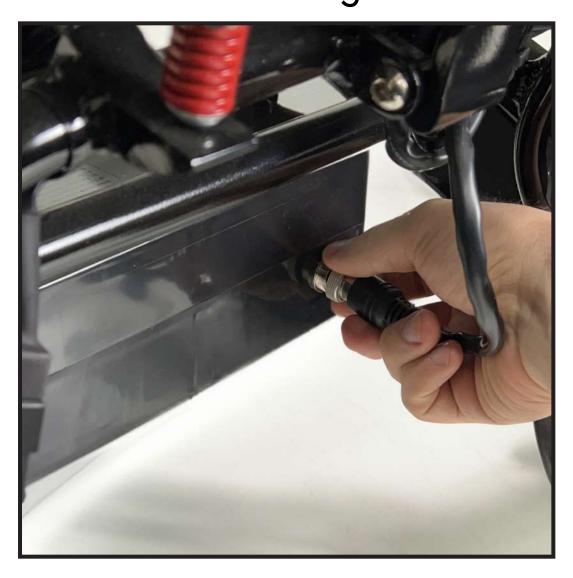



Attaching the Controller to the Armrest:

- Slide the controller into the armrest tube.
- Ensure that the controller is kept in a horizontal position (as illustrated in the picture).
- Once the controller is properly positioned, secure it by tightening the screw (refer to the picture guidance).



FOLDING & UNFOLDING

Manual Folding Chair Instructions

If you have purchased a manual folding chair, please follow the instructions below on how to fold and unfold your chair.







Backrest Crossbar

Seat

Folding Lock

Unfolding Your Wheelchair:

- 1. Grasp the backrest with one hand.
- 2. With your other hand, grab the seat to help unfold the chair.
- 3. Gently but firmly unfold the wheelchair until it is fully open.
- 4. Secure the lock located underneath the backrest. This step is crucial; ensure the lock is well fastened to prevent the wheelchair from folding unintentionally while in use.

Folding Your Wheelchair:

- 1. Release the lock under the backrest. Make sure it's completely disengaged.
- 2. Hold the backrest with one hand.
- 3. With your other hand, pull the seat upwards to initiate the folding process.
- 4. Fold the wheelchair gently but firmly until it is completely closed.

Note: Remember to always handle your wheelchair with care to ensure its longevity and your safety. If you encounter any difficulties or if anything seems amiss with the folding mechanism, it's best to consult the manufacturer or a professional for assistance.







0

WARNING: Failure to lock the chair when unfolded is a safety violation.



FOLDING & UNFOLDING

Auto Folding Chair Instructions

If you have purchased an auto-folding chair, please adhere to the following instructions to properly

fold and unfold your chair.

Power on the controller by pressing and holding the power button until the controller lights turn on.

Press and hold the 'Chair Open' button until the amber light moves to the center of the LED speed indicator.

Release the 'Chair Open' button, then press the horn button. If done correctly, you will hear a beep and the chair will open.

LED Speed Indicator

Unfolding Your Wheelchair:

- 1. If the chair is charging, unplug the charging cable from the chair.
- 2. Lay the chair flat with its wheels on the ground.
- 3. Power on the chair by pushing the power button.
- 4. Hold the autofold chair open button for more than 3 seconds.
- 5. The LED speed indicator will show an amber light in the middle of the screen.
- 6. Release the autofold chair open button.
- 7. Press the horn and watch the chair open.

Folding Your Wheelchair:

- 1. Hold the autofold chair close button for 3 seconds.
- 2. The LED speed indicator will show an amber light in the middle of the screen.
- 3. Release the autofold chair close button.
- 4. Press the horn and watch the chair close.

Note: Remember to always handle your wheelchair with care to ensure its longevity and your safety. If you encounter any difficulties or if anything seems amiss with the folding mechanism, it's best to consult the manufacturer or a professional for assistance.







WARNING: Failure to fully unfold or fold the chair is a safety violation.



FOLDING & UNFOLDING

Auto Folding Chair Instructions Using Remote Control

If you have purchased an auto-folding chair, please adhere to the following instructions to properly Joystick (Chair Direction)

fold and unfold your chair.



Unfolding Your Wheelchair Using the Remote Control:

- 1. If the chair is charging, unplug the charging cable from the chair.
- 2. Lay the chair flat with its wheels on the ground.
- 3. Power on the remote by holding the power button for 3 seconds until the red light blinks.
- 4. Press and release the autofold button (the button turns green).
- 5. Hold the speed increase/chair open button until the chair fully opens.
- 6. Press the autofold button again (the green light goes out) to drive the chair.

Folding Your Wheelchair Using the Remote Control::

- 1. Press and release the autofold button (the button turns green).
- 2. Hold the speed decrease/chair close button until the chair fully closes.
- 3. Power off both the chair and the remote by pressing their respective power buttons.








WARNING: Failure to fully unfold or fold the chair is a safety violation.



BATTERY & CHARGER

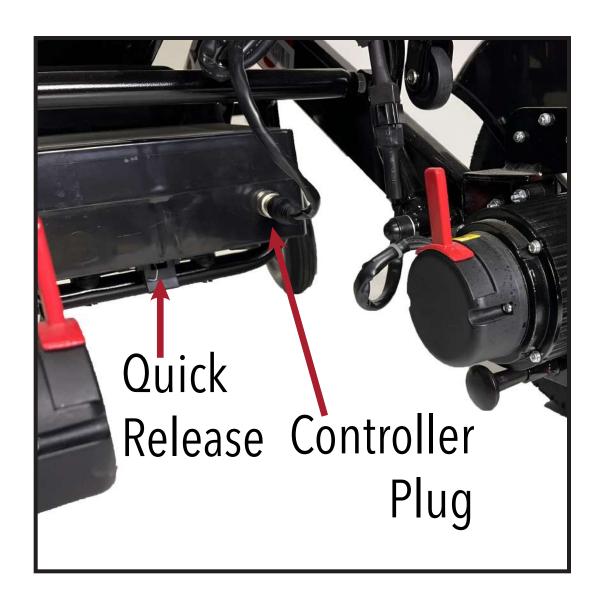

Installing the Battery

- 1. Place the battery back on the tray.
- 2. Connect the battery plug to the controller plug.

Dismantling the Battery

- 1. First, disconnect the battery plug and the controller plug.
- 2. Push the switch on the battery case for quick release.

Charger Requirements

- The charger should only be used for charging the batteries.
- Do not use your wheelchair while it is charging.

Charger Technical Data

Input voltage: AC220V (110V) ±10%

Output voltage: 24V/DCOutput current: 1.5~5A

Charger Use and Care

- A full charge requires 6 to 8 hours.
- Do not overcharge for more than 12 hours.
- To prevent shortening your battery's life, charge at least once per month when not in use.
- Do not stop charging until the process is complete.
- Repeated use of less than fully charged batteries will shorten their lifespan.
- When fully charged, the power indicator turns green. Do not stop charging until this indicator is lit.
- Turn off the power supply after charging to prevent battery discharge.
- Avoid over-charging for more than 12 hours as it is dangerous.

Follow These Rules to Avoid Issues with Chargers:

- Use a national standard charger with an output voltage of 24V/DC 1.5A~5A if the wheelchair does not include one.
- Ensure the charger is well ventilated during charging.
- Do not expose the wheelchair to direct sunlight or humidity.
- Charge within a temperature range of 50 to 122 °F (10 to 50 °C).
- Never use or sit on the wheelchair while it is charging.
- It is normal for the charger's fan to make sound during charging.
- Prevent liquid from entering the charger.



BATTERY & CHARGER

- Do not place the charger on flammable items.
- Stay away from flames while charging.
- Do not smoke while charging.
- Avoid unplugging the charger with wet hands or from a wet socket.

Charging Directly While in Battery

- Make sure the charger groove is not blocked.
- Ensure the wheelchair's power is off.
- Unplug connections between the battery box and the controller.
- Connect the charger's output plug to the battery box's power plug.
- Connect the charger plug to the power supply; the red light will light up.

Charging Through Your Controller

- Ensure the charger groove is not blocked.
- Ensure the wheelchair is turned off.
- Make sure the battery and controller are connected.
- Connect the charger's output plug to the socket below the controller.
- Connect the charger's main plug to the power supply; the red light will be alight.

Battery Use and Maintenance

- Incorrect insertion of the battery may cause an explosion risk. Use only the provided batteries.
- While inserting the battery, ensure correct pole placement. Always follow the charging instructions provided here for optimal battery life.
- For replacement batteries, visit www.ComfyGoMobility.com or contact us at support@ComfyGoMobility.com

A Few Ways to Keep Your Batteries Healthy:

- Store your batteries at room temperature. Excessive heat is the primary factor in reducing battery life.
- Remember, batteries deteriorate over time, regardless of usage.
- Avoid completely discharging the batteries, as this can lead to performance deterioration.
- Gradual performance decline can occur if the battery is left in a discharged state for extended periods.

