


HD Charge Switch
with On-board Battery Checker
for 7.4V LiPoly /Li-ion and 6.6V LiFe

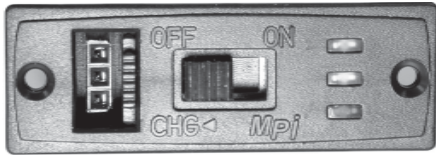


6272 w/Dean's to Dual
 Universal connectors



- Heavy duty switch & wires,
- Sturdy one-piece design,
- Built-in redundancy,
- 3-LED on-board battery checker,
- Compatible with 7.4V/6.6V Rx packs,
- Easy installation & operation,
- Silicone shock mount included,
- DSC compatible.

HD Charge Switch
with On-board Battery Checker
for 7.4V LiPoly /Li-ion and 6.6V LiFe

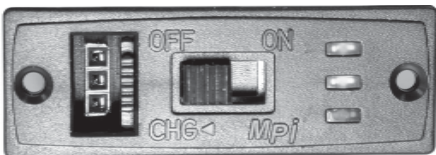

6272 w/Dean's to Dual
 Universal connectors



- Heavy duty switch & wires,
- Sturdy one-piece design,
- Built-in redundancy,
- 3-LED on-board battery checker,
- Compatible with 7.4V/6.6V Rx packs,
- Easy installation & operation,
- Silicone shock mount included,
- DSC compatible.

Introduction

Congratulation on your purchase of the MPI Charge Switch with On-Board Battery Checker. It has a 3-LED display to monitor the status of the flight pack. It is designed to test LiPo o / Pi-ion 7.4 volt or LiFe 6.6 volt batteries under the actual load of the on-board equipment.

The switch is factory preset to 7.4V applications. For 6.6V use, simply cut the jumper loop on the back of the switch and seal the wires with silicone glue or tape.

Installation

- Mount the unit in a visible area away from engine exhaust residue.
- Secure the switch to the fuselage by sandwiching the silicone rubber pad between the switch frame and fuselage with the included screws. Do not over tighten the screws.
- Connect the unit to the flight battery and receiver as a regular switch. Observe the polarity of the system before making the connection.
- **Warning!** The switch housing should not be exposed directly to solvents, thread locker, harsh cleaners, or gasoline. Exposure to these products will make the plastic brittle.

Operation & Cautions

- To test the battery, move all sticks simultaneously and observe the LED. If the red LED begins to flicker, it is time to recharge the Rx pack. If this happens to a newly charged battery, check the condition of the battery and charger. Also check the installation push rods since binding push rods can cause excessive current draw and depress the battery voltage.
- Do not apply voltage higher than 8 volts. High voltage will damage the unit.



MPI Hobby
 815 Oakwood Rd, Unit D
 Lake Zurich, IL 60047
www.mpihobby.com

Introduction

Congratulation on your purchase of the MPI Charge Switch with On-Board Battery Checker. It has a 3-LED display to monitor the status of the flight pack. It is designed to test LiPo o / Pi-ion 7.4 volt or LiFe 6.6 volt batteries under the actual load of the on-board equipment.

The switch is factory preset to 7.4V applications. For 6.6V use, simply cut the jumper loop on the back of the switch and seal the wires with silicone glue or tape.

Installation

- Mount the unit in a visible area away from engine exhaust residue.
- Secure the switch to the fuselage by sandwiching the silicone rubber pad between the switch frame and fuselage with the included screws. Do not over tighten the screws.
- Connect the unit to the flight battery and receiver as a regular switch. Observe the polarity of the system before making the connection.
- **Warning!** The switch housing should not be exposed directly to solvents, thread locker, harsh cleaners, or gasoline. Exposure to these products will make the plastic brittle.

Operation & Cautions

- To test the battery, move all sticks simultaneously and observe the LED. If the red LED begins to flicker, it is time to recharge the Rx pack. If this happens to a newly charged battery, check the condition of the battery and charger. Also check the installation push rods since binding push rods can cause excessive current draw and depress the battery voltage.
- Do not apply voltage higher than 8 volts. High voltage will damage the unit.



MPI Hobby
 815 Oakwood Rd, Unit D
 Lake Zurich, IL 60047
www.mpihobby.com