

Caution: Battery and ESC connections must follow standard convention as above. All batteries must be at full charge before connection.


## DO NOT CHARGE WHILE CONNECTED.

- **6942** -Battery Harness, 2P, for two packs in parallel. Use to increase current and duration.
- **6952** Battery Harness, 2S, for two packs in series. Use to increase the total voltage.
- 6953 Battery Harness, 3S, for three packs in series. Use to increase the total voltage.
- Caution: All batteries MUST be identical, same brand, "C", rating and mAh rating.



www.mpihobby.com

## 2S Battery Harness 6952

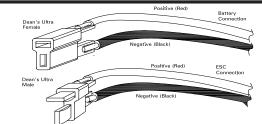

Caution: Battery and ESC connections must follow standard convention as above. All batteries must be at full charge before connection.

## DO NOT CHARGE WHILE CONNECTED.

**6942** -Battery Harness, 2P, for two packs in parallel. Use to increase current and duration.

- **6952** Battery Harness, 2S, for two packs in series. Use to increase the total voltage.
- **6953** Battery Harness, 3S, for three packs in series. Use to increase the total voltage.

Caution: All batteries MUST be identical, same brand, "C", rating and mAh rating.



www.mpihobby.com