




Installation Instruction for: Kinvaro T-105

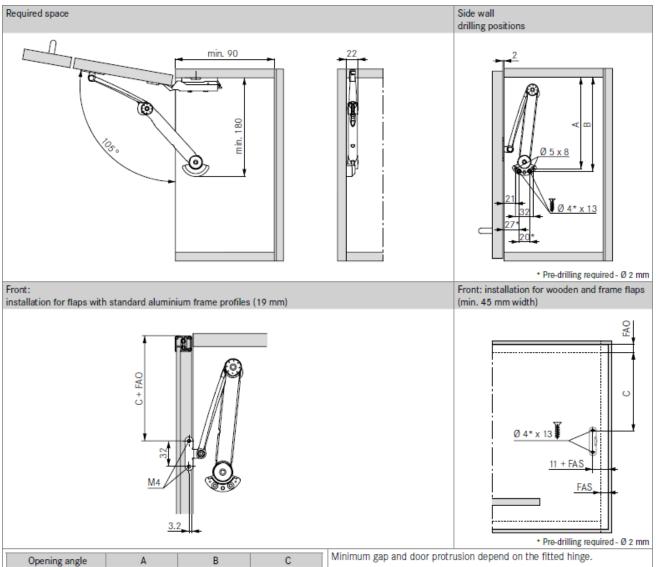

118 + MH 113 + MH

The installation dimensions apply to hinges with 0 cranking and the respective mounting plate height.

169 + MH

164 + MH

95°

≥ 105°

The opening angle can vary depending on the depending on type of hinge and application method between 95 and approx. 105°.

174 + MH 169 + MH Minimum gap and door protrusion depend on the fitted hinge. You can find suitable hinges in the hinge systems product catalogue.

Where cup hinges with different opening angles are used in a combination of wooden flaps and aluminium frame flaps, the smaller opening angle of the hinges used determines the installation dimensions for both flaps.