



LT 50 CSI - LT 50 CMO - LT 50 NHK LT 60 CSI - LT 60 CMO - LT 60 NHK



EN Installation instructions
ES Guía de instalación
PT Guia de instalação
EL Οδηγός εγκατάστασης



Ref. 5053403A

EN Installation instructions

The LT 50 CSI and LT 60 CSI motors are designed to drive roller shutters and awnings. They are equipped with a back-up system used to open and close the roller shutters and awnings in the event of a power cut: the roller shutter or awning can be manually opened and closed using a special integrated crank.

The upper and lower end limits of the motor can be adjusted using push-buttons. The push-buttons are covered by a protective housing which ensures the motor head is sealed when installed outdoors with the push-buttons facing upwards.

1. Safety

1.1 General information

This Somfy product must be installed by a professional motorisation installer, for whom these instructions are intended. Never begin installing without first checking the compatibility of this product with the associated equipment and accessories.

These instructions describe how to install, commission and use/operate this product.

Moreover, the installer must comply with current standards and legislation in the country in which the product is being installed, and inform his customers of the operating and maintenance conditions for the product.

Any usage outside of applications

defined by Somfy constitutes non-compliance, and is therefore not covered by the guarantee. In this event, as for all usage not consistent with the instructions given herein, Somfy accepts no responsibility for harm or damage.

1.2 General safety advice

- 1) Never immerse the motor in liquid!
- 2) Avoid impacts!
- 3) Do not drop it!
- 4) Never drill holes in the motor!
- 5) Always make a loop in the power supply cable to prevent water entering the motor!

▶ See illustration A

1.3 Specific safety advice

- Use a control point with a fixed position or momentary action-type switch.
- Never connect two control points to a single motor.
- Never connect two motors to a single control point.
- Do not use a lighting control point.

1.4 Operating conditions

- Check that the motor has been supplied with the protective housing and, optionally, with the adjustment pull tabs.

- Use a crank handle and emergency crank fitted with a 6 mm square pin or 7 mm hexagonal pin (accessories not supplied).

▶ See illustration C

2. Technical specifications

- Refer to the table of technical specifications on the back of this sheet.

3. Installation

3.1 Motor preparation

- Fit the crown (1) and drive wheel (2) to the motor.
- Measure the length (L1) between the motor head and the end of the drive wheel.

▶ See illustration B

3.2 Tube preparation

- Cut the roller tube to the required length.
- Deburr the roller tube and remove the swarf.
- For smooth roller tubes, cut a notch with the following measurements:

	e	h
LT 50 CSI	4 mm (0,16 in)	8 mm (0,32 in)
LT 60 CSI	25 mm (0,98 in)	35 mm (1,38 in)

▶ See illustration A

3.3 Motor/tube assembly

- Slide the motor into the roller tube.
- For smooth roller tubes, position the notch previously cut on the crown.
- Fix the roller tube to the drive wheel with 4 x Ø 5 mm self-tapping screws or 4 steel pop rivets of Ø 4.8 mm located:
 - at least 5 mm from the far end of the drive wheel: L1 - 5, and

▶ See illustration C

3.4 Fitting the adjustment pull tabs (optional)

- no more than 15 mm from the far end of the drive wheel:
N.B.: the screws or pop rivets must only be attached to the drive wheel and not to the motor.






▶ See illustration D

3.4 Fitting the adjustment pull tabs (optional)

- The motor can be supplied, optionally, with two adjustment pull tabs. These pull tabs can be used to operate the adjustment push-buttons when they are not accessible.
- Remove the protective housing.
- Fit the pull tabs on the motor head.

Caution! The protective housing cannot be refitted when using these pull tabs.

▶ See illustration E

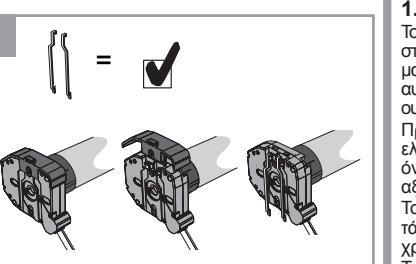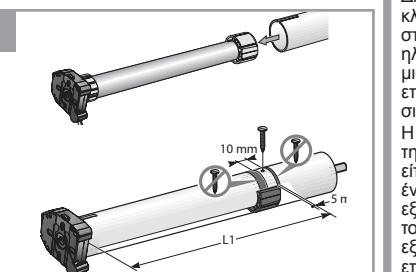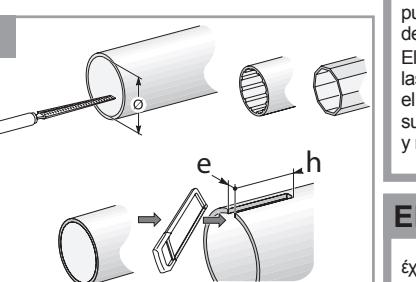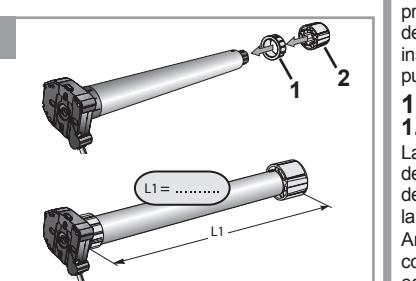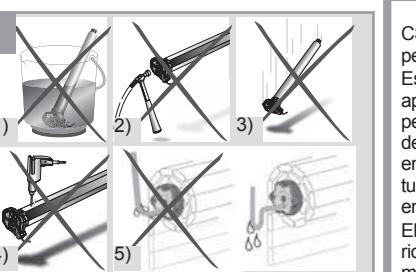

▶ See Figura C

3.3 Montagem motor/tubo enrolamento

- Inserir o motor no tubo enrolamento.

- Tratando-se de tubos de enrolamento lisos, posicionar o entalhe recortado na coroa.

▶ See Figura D

3.4 Instalação dos cordões de regulação (opcional)

- Opcionalmente, poderão ser entregues dois cordões de regulação com o motor. Estes cordões permitem comandar os botões de pressão de regulação quando estes não estão acessíveis.

- Retirar a cobertura de proteção.

- Instalar os cordões na cabeça do motor.

Atenção! Em caso de utilização dos cordões, a cobertura de proteção não poderá ser repostada.

▶ See Figura E

1.3 Instruções específicas de segurança

- Utilizar um ponto de comando de tipo inversor, de posição fixa ou momentânea.
- Nunca ligar dois pontos de comando a um único motor.
- Nunca ligar dois motores a um único ponto de comando.
- Nunca utilizar um ponto de comando de tipo utilizado para iluminação.

1.4 Condições de utilização

- Verificar se o motor é entregue com a cobertura de proteção e, opcionalmente, com os cordões de regulação.
- Utilizar um anel de saída e uma manivela de emergência, equipados com um eixo quadrado de 6 mm ou um eixo hexagonal de 7 mm (acessórios não incluídos).

▶ See Figura C

3.3 Montagem motor/tubo enrolamento

- Inserir o motor no tubo enrolamento.

- Tratando-se de tubos de enrolamento lisos, posicionar o entalhe recortado na coroa.

Australia : Somfy PTY LTD +61 (0) 2 9638 0744	Cyprus : Somfy Middle East +357 (0) 25 34 55 40	Germany : Somfy GmbH +49 (0) 7472 930 0	Indonesia : Somfy Mexico SA de CV +62 (0) 21 719 3620	Mexico : Somfy Mexico SA de CV +52 (0) 55 55 6 3421	Portugal : cf. Spain Somfy Espana SA +351 (0) 229 396 840	South Korea : Somfy JOO +82 (0) 2 594 4333
Austria : Somfy GesmbH +43 (0) 662 62 53 08	Czech Republic : Somfy Spol.s.r.o. +420 (0) 296 372 486-7	Greece : Somfy Hellas +30 (0) 210 614 67 68	Italy : Somfy Italia s.r.l. +39 (0) 024 84 71 84	Morocco : Somfy Maroc +212 (0) 22 95 11 53	Russia : Somfy LLC +7 (0) 495 360 47 72	Turkey : Somfy Turkey +90 (0) 216 651 30 15
Belgium : Somfy Belux +32 (0) 2 712 07 70	Denmark : Somfy AB Denmark +45 (0) 65 325 793	Hong Kong : Somfy Co. Ltd +852 (0) 2523 6339	Japan : Somfy KK +81-45-475-0732	Netherlands : Somfy BV +31 (0) 23 55 44 900	Singapore : Somfy PTE LTD +65 (0) 33 385 65	UAE : Somfy Gulf +971 (0) 48 32 808
Brasil : Somfy Brasil STDA +55 11 (0) 6161 6613	Finland : Somfy AB Finland +358 (0) 957 13 02 30	Hungary : Somfy Kft +36 (0) 1814 5120	Lebanon : Cyprus Somfy Middle East +961 (0) 1 391 224	Norway : Somfy Norway +47 (0) 67 97 85 05	Slovakia : cf. Czech Republic +41 (0) 44 838 40 30	United Kingdom : Somfy LTD +44 (0) 13 391 3030
Canada : Somfy ULC +1 (0) 905 564 6446	France : Somfy France +33 (0) 820 374 374	India : Somfy India PVT Ltd +91 (0) 11 51 65 91 76	Malaysia : +60 (0) 228 74743	Poland : Somfy SP Z.O.O. +48 (0) 225 50 95 300	Taiwan : Somfy Taiwan +866 (0) 2 8509 8934	United States : Somfy Systems Inc +1 (0) 609 395 1300

EN - Somfy hereby declares that this product conforms to the essential requirements and other relevant provisions of Directive 1999/5/CE. A Declaration of Conformity is available at www.somfy.com/ce. Usable in EU, CH and NO.

ES - Par la présente, Somfy déclare que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE. Une déclaration de conformité est mise à disposition à l'adresse internet www.somfy.com/ce. Utilisable en UE, CH et NO.

EL - Με τον παρόν έγγραφο, η Somfy δηλώνει ότι η συσκευή συμπληρώνεται με τις ουσιώδεις απαιτήσεις και τις λοιπές σχετικές διατάξεις της οδηγίας 1999/5/ΕΕ. Μια δηλωση

PT - Pelo presente documento, a Somfy declara que o aparelho está conforme às exigências fundamentais e às outras disposições pertinentes da directiva 1999/5/CE. Encontra-se disponível, no site web www.somfy.com/ce, em CE, uma declaração de conformidade. Utilizável na UE, Suíça e Nórvega.

ES - Par la présente, Somfy déclare que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE. Une déclaration de conformité est mise à disposition à l'adresse internet www.somfy.com/ce. Utilisable en UE, CH et NO.

EL - Με τον παρόν έγγραφο, η Somfy δηλώνει ότι η συσκευή συμπληρώνεται με τις ουσιώδεις απαιτήσεις και τις λοιπές σχετικές διατάξεις της οδηγίας 1999/5/ΕΕ. Μια δηλωση

ουσιώδων σημείωσης διατίθεται στην ιστοσελίδα www.somfy.com/ce. Μπορεί να χρησιμοποιηθεί στην ΕΕ, την Ελβετία και τη Νορβηγία.

Copyright © 2007 Somfy SAS. All rights reserved.
Somfy SAS, capital 20.000.000 Euros, RCS Bonneville 303.970.230 - 10/2007

Turkey : Somfy Turkey +90 (0) 216 651 30 15

UAE : Somfy Gulf +971 (0) 48 32 808

United Kingdom : Somfy LTD +44 (0) 13 391 3030

United States : Somfy Systems Inc +1 (0) 609 395 1300

Taiwan : Somfy Taiwan +866 (0) 2 8509 8934

Portugal : Somfy Portugal +351 (0) 229 396 840

Spain : Somfy Espana SA +34 (0) 934 800 900

Sweden : Somfy AB +46 (0) 40 165900

Switzerland : Somfy LTD +44 (0) 13 391 3030

United States : Somfy Systems Inc +1 (0) 609 395 1300

Taiwan : Somfy Taiwan +866 (0) 2 8509 8934

Portugal : Somfy Portugal +351 (0) 229 396 840

Spain : Somfy Espana SA +34 (0) 934 800 900

Sweden : Somfy AB +46 (0) 40 165900

Switzerland : Somfy LTD +44 (0) 13 391 3030

United States : Somfy Systems Inc +1 (0) 609 395 1300

Taiwan : Somfy Taiwan +866 (0) 2 8509 8934

Portugal : Somfy Portugal +351 (0) 229 396 840

Spain : Somfy Espana SA +34 (0) 934 800 900

Sweden : Somfy AB +46 (0) 40 165900

EN 3.5 Fitting the emergency crank

- Fit the crank handle onto the motor head.
- See illustration F

3.6 Fitting the motorised tube

- Mount the motorised tube on the end bracket.
- Mount the motorised tube on the motor bracket.
- Fit the stop ring.

3.7 Wiring

- Switch off the power supply.
- Connect the motor according to the information in the table below:

	230 V	120 V	Wire
1	Blue	White	Neutral
2	Brown	Black	Live
3	Black	Red	Live
4	Yellow/Green	Green	Earth

► See illustration H

4. Commissioning

4.1 Checking the direction of rotation

- Remove the protective housing.
- Press simultaneously on the white and yellow push-buttons to operate them.
- Switch on the power supply.
- Press the "Up" switch at the control point:

 - a) If the roller shutter or awning rises, the wiring is correct; move onto the section entitled "Adjusting the end limits".
 - b) If the roller shutter or awning lowers, the wiring is not correct: move onto the next step

- Switch on the power.
- Reverse the brown wire and the black wire on the control point.
- Switch the power supply back on.

- Press the "Up" button on the control point to check that the roller shutter or awning rises.

4.3 Adjusting the end limits with the fixed position switch

4.3.1 Lower end limit

- Lower the roller shutter or awning to the required lowered position by pressing on the "Down" button on the control point.
- Press the "STOP" button when the roller shutter or awning reaches the required lowered position.
- Release the "Down" button when the roller shutter or awning reaches the required lowered position.
- Adjust the position with the Up/Down buttons.
- Looking at the motor head end-on:

 - a) If the roller shutter or awning lowers from the right-hand side of the head, press the yellow button to unlock it: the lower end limit is set.
 - b) If the roller shutter or awning lowers from the left-hand side of the head, press the white button to unlock it: the lower end limit is set.

► See illustration J

4.3.2 Upper end limit

- Raise the roller shutter or awning to the required raised position by pressing on the "Up" button on the control point.
- Press the "STOP" button when the roller shutter or awning reaches the required raised position.
- Release the "Up" button when the roller shutter or awning reaches the required raised position.
- Adjust the position with the Up/Down buttons.
- Looking at the motor head end-on:

 - a) If the roller shutter or awning lowers from the right-hand side of the head, press the white button to unlock it: the upper end limit is set.
 - b) If the roller shutter or awning lowers from the left-hand side of the head, press the yellow button to unlock it: the upper end limit is set.

► See illustration K

4.4 Checking the settings

- Check the setting of the upper and lower end limits using the control point.

4.4 Fitting the protective housing

4.2.1 Lower end limit

- If the motor is used outdoors on an awning with the push-buttons facing upwards and without pull tabs, the protective housing should be refitted.

- For all other fitting arrangements such as the push-buttons facing downwards or using adjustment pull tabs, for example, the protective housing should not be fitted.

► See illustration L

5. Operation

5.1 Operating the control point

- Press the "Up" button to raise the roller shutter or awning.
- Press the "Down" button to lower the roller shutter or awning.

5.2. Operating the emergency crank

Caution! Never operate the roller shutter or awning via the control point while using the emergency crank!













- Raise the roller shutter or awning to the required raised position by pressing on the "Up" button on the control point.
- Press the "STOP" button when the roller shutter or awning reaches the required raised position.
- Release the "Up" button when the roller shutter or awning reaches the required raised position.
- Adjust the position with the Up/Down buttons.

► Illustration M

- Looking at the motor head end-on:

- a) If the roller shutter or awning lowers from the right-hand side of the head, press the white button to unlock it: the upper end limit is set.
- b) If the roller shutter or awning lowers from the left-hand side of the head, press the yellow button to unlock it: the upper end limit is set.

► See illustration K

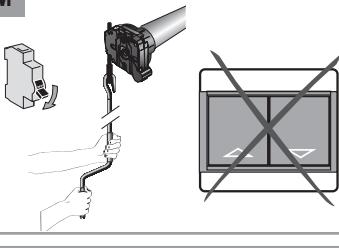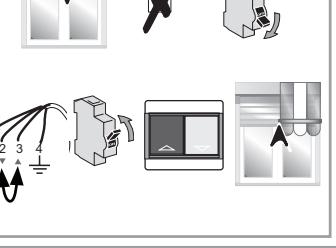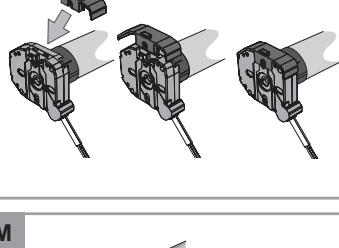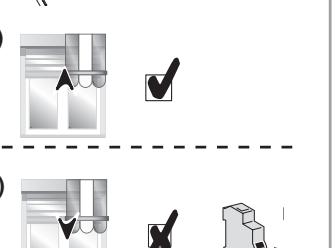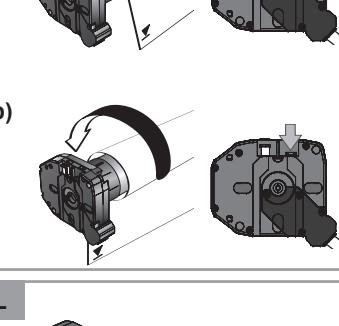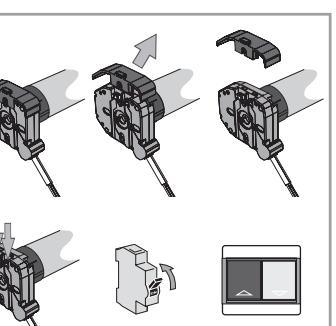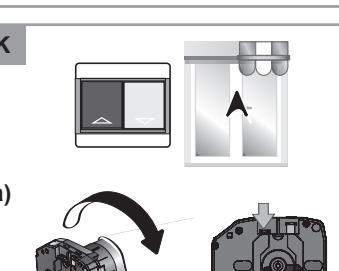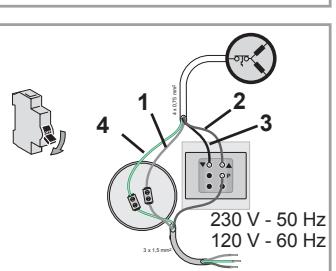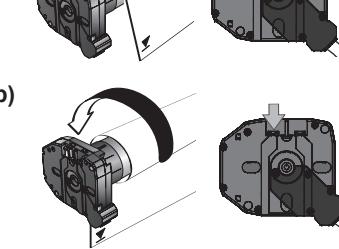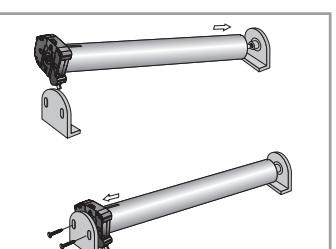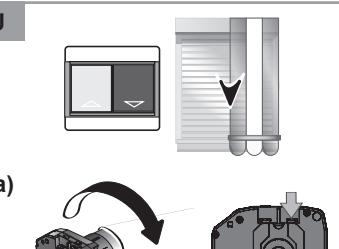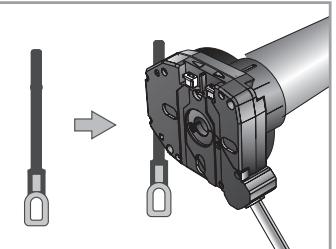

Technical specifications / Características técnicas / Características técnicas / Τεχνικά χαρακτηριστικά

EN	ES	PT	EL	LT 50/60 CSI - NHK	LT 50/60 CMO
Supply Voltage	Alim.	Alim.	Trof.	230 V - 50 Hz	120 V - 60 Hz
Operating temperature	Temp. de utilización	Temp. de utilização	Θερμοκρ. χρήσης	- 20 °C à + 70 °C	- 4 °F à + 158 °F
Protection rating	Índice de protección	Índice de protecção	Δείκτης προστασίας	IP 44	IP 44
Maximum number of connected control points	Número máximo de paneles de control asociados	Número máximo de pontos de comando associados	Mέγιστος αριθμός συσχετισμένων διακοπών	1	1
Maximum number of connected sensors	Número máximo de sensores asociados	Número máximo de sensores associados	Mέγιστος αριθμός συσχετισμένων αισθητήρων	0	0

ES 3.5 Montaje de la manivela de emergencia

- Fije la anilla de salida en el cabezal de motor.

► Ver figura F

3.6 Montaje del tubo motorizado

- Monte el tubo motorizado sobre el soporte boquilla.

► Ver figura G

3.7 Cableado

- Corte la alimentación eléctrica.
- Conecte el motor según la información de la siguiente tabla:

	230 V	120 V	Cable
1	Azul	Blanco	Neutro
2	Castaño	Preto	Fase
3	Preto	Vermelho	Fase
4	Verde/Amarelo	Verde	Terra

► Ver figura H

4. Puesta en marcha

4.1 Control del sentido de rotación

4.2.2 Final de carrera superior

- Suba la persiana enrollable o el estor a la posición superior deseada pulsando la tecla Subir del panel de control.

► Ver figura J

- Pulse al mismo tiempo los botones pulsadores blanco y amarillo para activarlos.
- Suelte la tecla Subir una vez que la persiana enrollable o el estor haya alcanzado la posición superior.

► Ver figura K

4.3.2 Final de carrera inferior

- Baje la persiana enrollable o el estor a la posición inferior deseada pulsando la tecla Bajar del panel de control.

► Ver figura L

- Pulse la tecla STOP una vez que la persiana enrollable o el estor haya alcanzado la posición inferior.

► Ver figura M

ES

4.3 Ajuste de los finales de carrera con inversor de posición fija

- Baje la persiana enrollable o el estor a la posición inferior deseada pulsando la tecla Bajar del panel de control.

► Ver figura K

4.4 Control de los ajustes

- Controle el ajuste de los finales de carrera superior e inferior mediante el panel de control.

4.4 Montaje de la cubierta de protección

- Si el motor se utiliza en un estor, en el exterior, con los botones pulsadores orientados hacia arriba y sin tiradores, vuelva a colocar la cubierta de protección en su lugar.

► Ver figura L

- b) Si la persiana enrollable o el estor baja a la izquierda del cabezal, pulse el botón amarillo para desbloquearlo: el final de carrera superior está ajustado.

► Ver figura K

4.4 Control de los ajustes

- Controle el ajuste de los finales de carrera superior e inferior mediante el panel de control.

4.4 Montaje de la cubierta de protección

- Si el motor se utiliza en un estor, en el exterior, con los botones pulsadores orientados hacia arriba y sin tiradores, vuelva a colocar la cubierta de protección en su lugar.

► Ver figura L

5. Utilización

5.1 Utilización del panel de control

- Pulse el botón Subir para subir la persiana enrollable o el estor.

- Pulse el botón Bajar para bajar la persiana enrollable o el estor.

5.2. Uso de la manivela de emergencia

Atención: no controle nunca la persiana enrollable o el estor desde el panel de control mientras se esté utilizando la manivela de emergencia.

- Corte la alimentación eléctrica.

- Deslice el gancho de la manivela de emergencia Somfy dentro de la anilla.

- Gire la manivela para subir o bajar la persiana enrollable o el estor.

► Figura M

PT 3.5 Montagem da manivela de emergência

- Fixar o anel de saída à cabeça do motor.

► Ver Figura F

3.6 Montagem do tubo motorizado

- Montar o tubo motorizado no suporte da extremidade.
- Montar o tubo motorizado no suporte do motor.
- Instalar o anel de paragem.

► Ver Figura G

3.7 Cablagem

- Desligar a alimentação do sector.
- Ligar o motor de acordo com as informações do seguinte quadro:

	230 V	120 V	Cabo
1	Azul	Branco	Neutro
2	Castanho	Preto	Fase
3	Preto</		