

## Identifying your Louvre Ease

**Motor Unit**

Setting Button (P1)

Indicator light

**Remote Control Unit**

Up Button

Stop Button

Down Button

Setting Button

**ICONS**

Motor Setting Button

Remote Setting Button

Up Button

Stop Button

Down Button

**JOG**

Motor will give you feedback by moving 'up and down' (jog) when the setting is completed

## Factory Mode

### A: Pair Remote

- Press P1 (side of Motor) - 2 sec  
- Jog x 1  
- Release P1
- Press Stop - 2 sec  
- Jog x 2



**Pairing Successful**

### B. Set Top Limit - 89mm Louvre

- Run motor to top limit, just before the motor arm hits the motor case.
- Press Up & Stop - 2 sec  
- Jog x 2



**Top limit is set**

### Set Bottom Limit

- Run motor to bottom limit, just before the motor arm hits the motor case.
- Press Down & Stop - 2 sec  
- Jog x 2



**Bottom limit is set**

### B. Set Top Limit - 63mm Louvre

- Run motor to top limit, just before the motor arm hits the motor case.
- Press Up & Stop - 2 sec  
- Jog x 2



**Top limit is set**

### Set Bottom Limit

- Install motor onto panel with motor at the top limit and louvres fully closed up. Move motor down as far as the louvre clip will allow without binding on the louvre above.
- Press Down & Stop - 2 sec  
- Jog x 2



**Bottom limit is set**


Note: Once top and bottom limits are set the motor will enter User Mode.

In order to reset the top and bottom limits please reset to factory settings (see other functions menu)

## User Mode

### C. Set Middle Limit


- Run motor to middle limit position
- Press P2 (back of Remote) - 1 Sec  
- Jog x 1
  - Press Stop - 1 Sec  
- Jog x 1
  - Press Stop - 1 Sec  
- Jog x 2

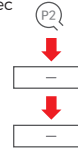

**Middle limit is set**

### Cancel Middle limit

- Press P2 (back of Remote) - 1 Sec  
- Jog x 1
- Press Stop - 1 Sec  
- Jog x 1
- Press Stop - 1 Sec  
- Jog x 2

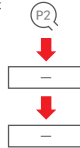

**Middle limit is set**

### D. Add/Delete Remote

#### Adding a Remote

- Press P1 (side of Motor) - 2 sec  
- Jog x 1
- Release P1
- Press Stop - 2 sec  
- Jog x 2



**Pairing Successful**

#### Deleting a Remote

- Press P1 (side of Motor) - 2 sec  
- Jog x 1
- Release P1
- Press Stop - 2 sec  
- Jog x 2



**Delete Successful**

### E. Shielding Mode

This mode will block all incoming wireless signals. You can use this to add other motors to remote without interfering with this motor. You can also achieve this by removing the battery pack from the motor.

- Press P1 (side of Motor) - 6 sec
- Release P1  
- Jog x 2



**Motor is in Shielding Mode**

**To remove Shielding mode - Press P1 - 1 Sec**

### F. Reverse Direction of Motor

- Press P1 (side of Motor) - 10 sec
- Release P1  
- Jog x 3



**Change of direction Successful**

### G. Operation Instructions

#### Tilt Blade up

- Press and hold Up button until the desired position



#### Tilt Blade up Continuously to top Limit

- Press Stop button while pressing Up button




#### Tilt Blade down

- Press and hold Down button until the desired position



#### Tilt Blade down Continuously to bottom Limit

- Press Stop button while pressing Down button

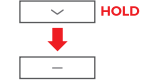

#### Tilt to the Middle limit

- Press Stop Button - 2 sec



### H. Restore Factory Settings

- Press P1 (side of Motor) - 14 sec  
- Release P1  
- Jog x 4



**Motor has been reset**

Note: You cannot reset the setting unless the motor is in User mode (the top and bottom limits are set)