
#### Emitter Instruction for RE301, RE302, RE303 series

#### 1.Product Appearance

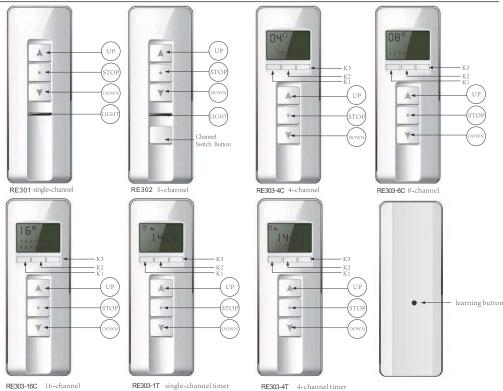

#### 2. Technique Data

- Power: 3V Model: CR2032
- Protection Index: Ip20
- Working Temperature: -10 °C to +60 °C (LCD emitter)
- Working Temperature: -20 C to +60 C (Non-LCD emitter)

#### 3. Code Learning

01.single-channel emitter Press Up and Down buttons simultaneously once, then short press Stop button once.

#### 02.5-channel emitter



• Currency: ≤12mA · Code: Rolling Code

• Frequency: 433.92MHz

#### 03.LCD Multi-Channel (take 8-channel emitter as an example)



The figure on upper left corner of the screen shows the current channel. Short press K1/K3 to choose any channel from 1 to 8.

Choose one channel, then press UP and DOWN buttons simultaneously once.

Then short press the STOP button once, now the code learning of current channel is successful.

#### 4. Single Control

Press K1/K3 button to select a channel, then the corresponding motor can be controlled by the emitter through UP/STOP/DOWN button.

#### 5. Group Control (5-channel emitter)

Short press the Channel Switch Button to select different channels (from 1 to 5), once selected, corresponding light will shine.



Note: If all of the five lights are on, it means the emitter is in Group Control state.

Œ F©

### 6. Group Control(LCD emitter) Short press K2 button to choose group control (M) or Single control (S)



 
#### 7. Delete Group Control



Note: whether in M or S mode, the current channel is always selected

#### 8. RE303-4T

01. Time Setting



Press K1 button to enter hour setting page, now the hour figure will shine. Press UP/DOWN button to adjust the hour figure.

Once the hour setting is finished, press K1 again to adjust minute, the minute figure will shine. Press UP/DOWN button to adjust the figure.

Once the minute setting is finished, press K1 again to adjust weekday, the weekday figure will shine. Press UP/DOWN button to adjust the weekday

After setting, press STOP button to exit and go back to the initial page.

13

(L) Mo

18:46

1 2 3 4

#### 02. Timing Setting (set different time points to make the motor to close or open)

In the initial page, press K2 to enter timing setting page, there is a timing clock 0 on the upper left corner. You can respectively set 8 opening time points and 8 closing time points, in total 16 points.  $\uparrow \sim \rho$  Press K2 to cycle among 16 time points. Press K3 to choose the output channels which you want (single channel or 4 channels)



 
Press K2 again to select one point among Press K3 to choose you wanted channel

Press K1 to set time (in the same (single channel or 4 channels). way of Time Setting above).

0.1

#### Emitter Instruction for RE301, RE302, RE303 series







Once one time point is set, press K2 again to select other time points to set time

Press STOP button to exit the setting.

#### 03. Close Timing Function



08:00 1 2 3 4





Press K2 to enter timing setting page.

Press K2 again to select one point need to be closed.

Press K3 until above display appears, which means the point has closed: Press K3 again to retrieve this poin

 
After setting, press STOP button to exit and go back to the initial page.

 
#### 9.RE303-1T

#### 01. Time Setting

 
In the same way as RE303-4T Time Setting.

In the initial page, press K2 to enter timing setting page, there is a timing clock 👸 on the upper left corner, You can respectively set 8 opening time points and 8 closing time points, in total 16 points ?~ 8 Press K2 to cycle among 16 time points.









Press K2 to enter timing setting page

Press K2 again to select one point among 16 timing points


Press K3 to enter Time Setting page, then set the time points in the say way as above Time Setting.

Once one time point is set, press K2 againto select other time points to set time.

#### 03. Close Timing function

 108:00

08:00






Press K2 to enter timing setting page

Press K2 again to select one point need to be closed.

Press K3 Once to delete the point; Press K3 again to retrieve this point.

After setting, press STOP button to exit and go back to the initial page.

#### 04.Stopwatch function

 

In the initial page, press K3 to enter

18:46

If you want to exit from stopwatch page, press K3 again to go back to initial page.

⚠ Note:

- > The emitter must enter into timing setting page if you want to set timing points (there is a timing clock on the upper left), otherwise, the setting is invalid. If there is no timing clock on the upper left, hold STOP button and press k2 within 10 seconds, then the timing clock will be there
- You'd better not press emitter's buttons too long. Each pressing is about 0.5S, and the pressing
- The emitter will stop working if the battery is in low power. Please replace the battery in this case.

# **COIN BATTERIES CAN KILL**

**Our remote controllers** contain lithium coin batteries.

## **WARNING**

**KEEP OUT OF REACH OF CHILDREN** Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.



If you suspect your child has swallowed or inserted a coin/button battery, call the Australian Poisons Information Centre immediately on 13 11 26 for 24/7 fast, expert advice. If your child is having any difficulty breathing, contact **000** (NZ Poisons Centre 0800 764 766 Emergency 111). Keep new/used coin batteries out of sight and out of reach of children at all times. Dispose old batteries responsibly.

Stopwatch page